

EZ WATERPROOF LOW VOLTAGE LED DIMMER WITH TEACHABLE REMOTE

This waterproof, low voltage dimmer is designed to control the brightness of your LED lighting installation from zero to full intensity. It can be operated by either the remote provided or by pressing the dimming buttons on the unit. The remote control has a range of 70 feet from the base unit with replacement batteries readily available at most department stores.

This low voltage dimmer is designed for outdoor use but also can be used with DEKOR®'s indoor LED lighting products where water is present such as around or under a kitchen or bath sink.

Approvals :	UL, CSUL, CE, RoHS	
Battery :	12v model 27a (included)	
Channel:	Single, Self Programming	
Connectors :	Watertight twist lock	
Controls:	Dimming, Brighten and Mode Buttons	
Control Range:	70' with antenna out and new battery	
Input Frequency:	60 Hz	
Input Voltage:	120 vdc	Remote Battery : 12v model 27a (included)
IP Rating:	64	Remote Channel: Single, Self Programming
Manufacturer :	Made in China	Remote Range : Zero - Full Intensity
Output Current :	10 amp (max)	Remote Controls: Dimming button, Brighten button
Output Voltage:	12 vdc regulated	Remote Range : 70' with antenna out and new battery
Waterproof :	Yes	Remote Type : Key Chain RF



INPUT CONNECTION: Connects directly to the EZINDOORPOWERDRIVER, EZ, and EZMAX Transformers



Outdoor Transformer to Splitter Cable



Indoor Transformer to Splitter Cable

MODE BUTTON:

This will dim the lights in four steps with a final step turning the lights off. Pressing the button after that will loop the lights back to full intensity.

UP ARROW BUTTON:

Press and hold to increase the lights intensity to the desired amount.

DOWN ARROW BUTTON:

Press and hold to decrease the lights intensity to the desired amount.

OUTPUT CONNECTION:

Connects directly to indoor or outdoor transformer to Splitter cable



Note:

Dimmer stores last light setting in memory even when no longer powered.

REMOTE Programming Instructions

1. Make sure the dimmer is plugged into the transformer and that the lights plugged into the dimmer are on.
2. With the lights still on, unplug the transformer from the outlet.
3. Allow lights to shut off.
4. **PRESS** and **HOLD** the UP and DOWN arrow buttons on the remote.
5. While holding the Arrow buttons down, plug the transformer back into the outlet.
6. The lights will flash quickly once.
7. Release the UP and down Arrow buttons.
8. **PRESS** the POWER BUTTON on the remote once.
9. The lights should shut off. If the lights shut off after pressing the power button, press the power button a few more times to confirm that the lights turn on and off. Your remote is now programmed.
10. If the lights **DO NOT SHUT OFF** after pressing the power button, repeat steps 1 through 8.
11. If after repeating Steps 1 through 8 and pressing the power button on the remote and the lights do not shut off, try replacing the battery (27A 12V) and repeating steps 1 through 8.
12. If after replacing the battery and repeating Steps 1 through 8 and the remote still does not turn the lights off contact DEKOR® Customer Service at 1-800-258-0344

The remote is already paired to the dimmer. In the event the remote is damaged or lost, a new one can be ordered.