


RECEIVER CONNECTION INSTRUCTIONS

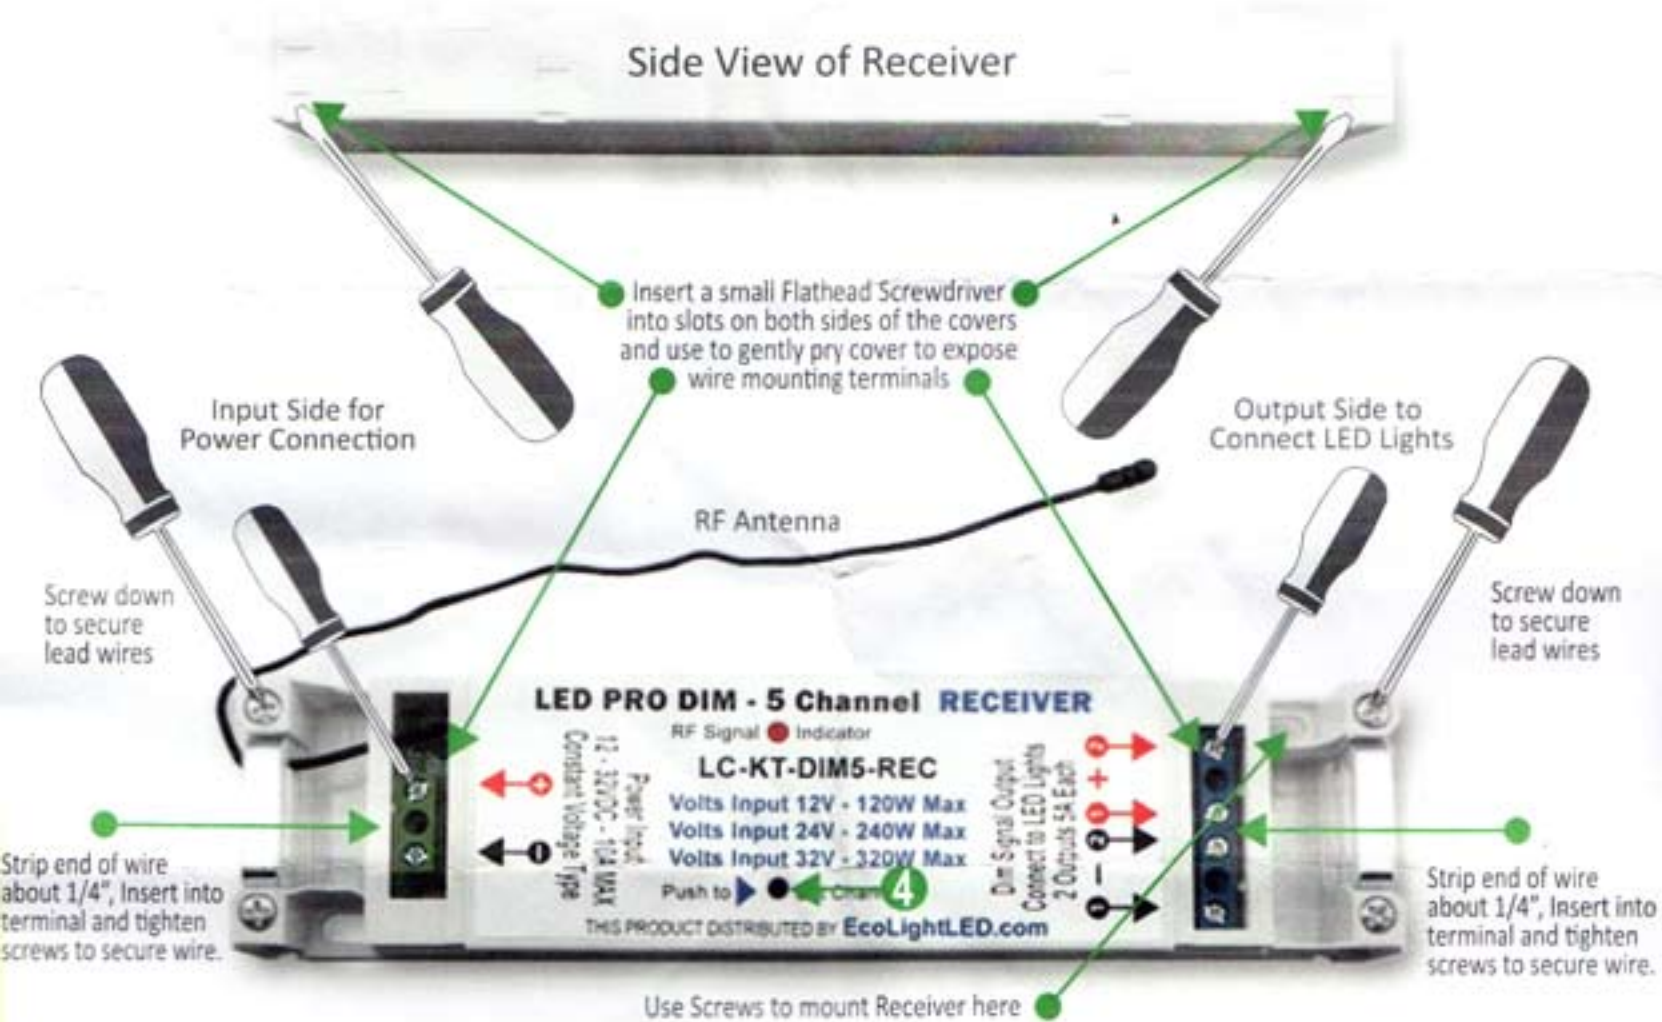

PROGRAMMING REMOTE CONTROL TO LINK CHANNELS TO RECEIVERS

