

Armlok™ Removal

Place a pair of pliers over the outer portion of the Armlok™ and clamp down. Apply an upward pressure on the pliers until the Armlok™ separates from the container. Peel the remaining portion of the Armlock™ off by hand.

Removing the ring from the container typically causes the Armlock™ ring to deform. Therefore, the Armlok™ is non-reusable after its initial removal.

