



Installing the Trex RainEscape Post Flashing



1. INSTALL FLAT BLOCKING

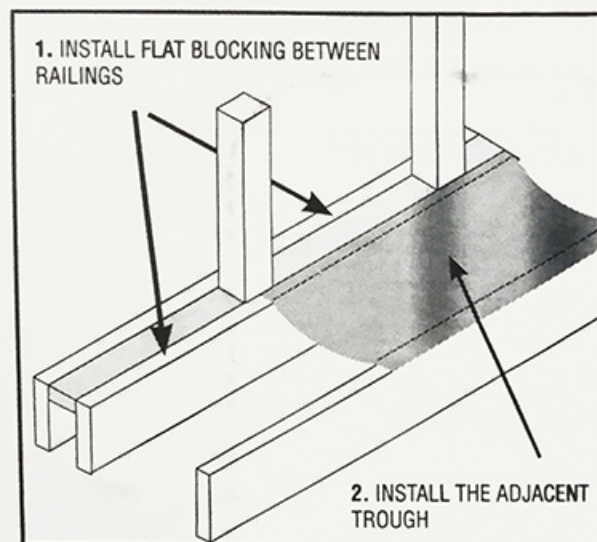


2. FIT TROUGH MATERIAL & CAULK

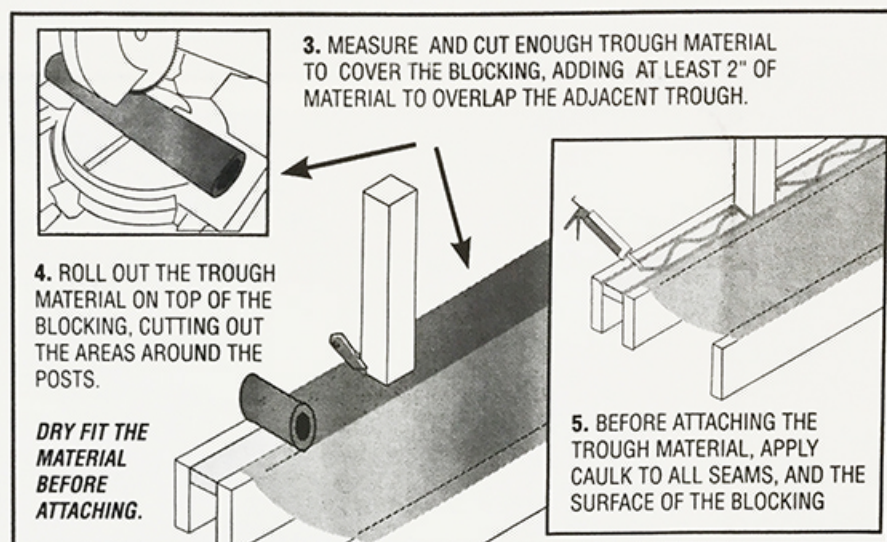

3. ATTACH TROUGH AND POST FLASHING

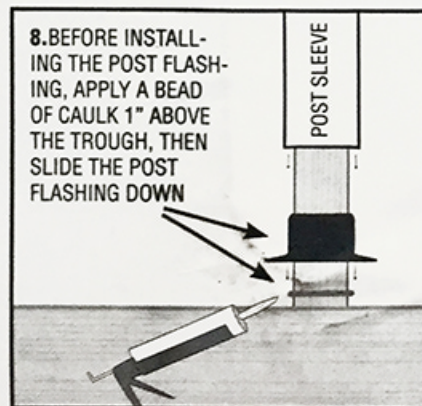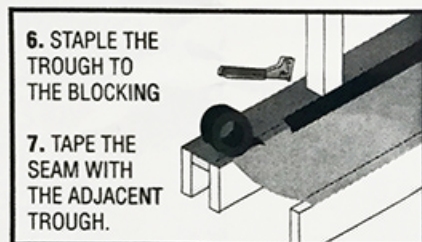

4. TAPE THE POST FLASHING AND SEAMS

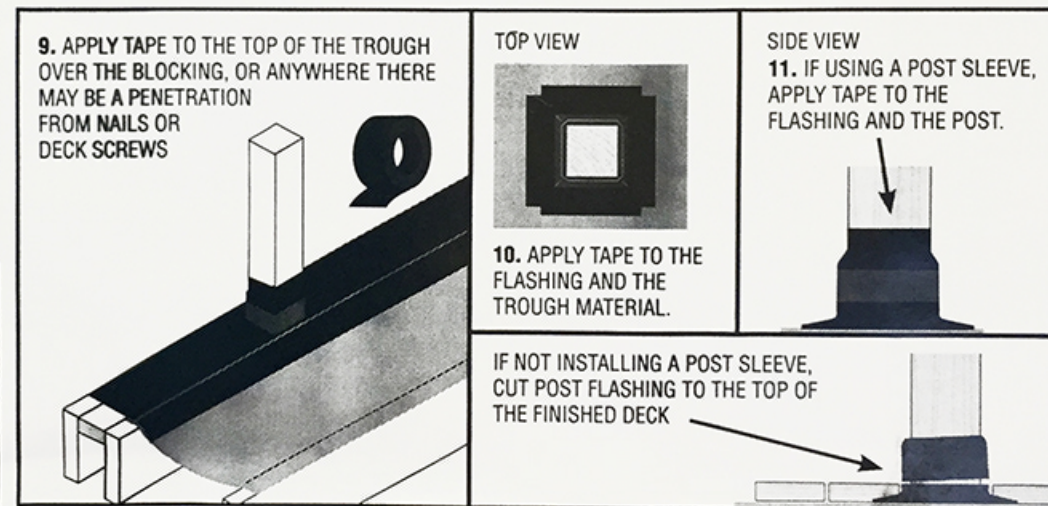

TO VIEW TREX RAINESCAPE POST FLASHING VIDEO INSTRUCTIONS PLEASE SNAP THE QR CODE.