





## 6" Rail Kit Installation Instructions:


Please read instructions before installing for best results.

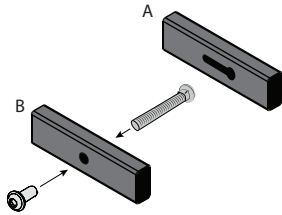

1. Insert sleeve nut into Rail A and loosely screw bolt into the other side.

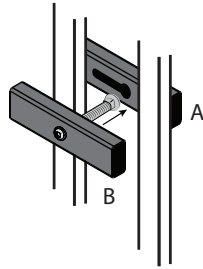


2. Attach Rail A to Rail B by sliding round bolt end into key slot.

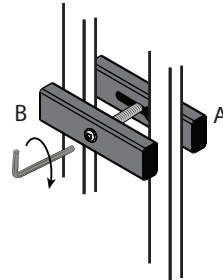

3. Be sure that Rail A is level with Rail B and tighten\* until very snug.

\*Check tightness once per month.

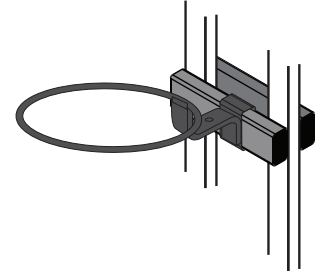

4. Snap on your Hold it Mate™ accessory.