




A DIVISION OF CENDEK RAILINGS LTD.

## Wall Bracket Installation

Residential installation only. Commercial applications may differ.  
Always check with local building codes prior to purchasing and installing this product.

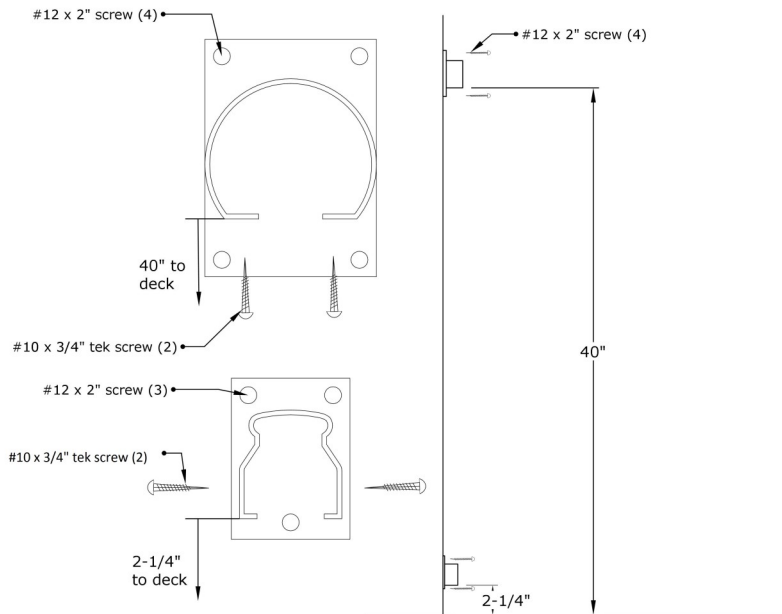

Wall brackets can be used to attach top and bottom rail to existing wood posts or walls. To locate the bottom wall bracket, measure up 2 1/4" from deck to the bottom of bracket as shown in drawing. To locate the top wall bracket, measure up 40" from deck to the bottom of the top bracket as shown in drawing. Secure with supplied screws. To mount wall brackets to aluminum posts, secure with #10 x 3/4" tek screws. (not supplied)

For 36" high railing, measure up 34" from deck to the bottom of the top bracket.

Note: For sections with a wall bracket at each end, and no line post, measure the opening and cut the top and bottom rail as per the CRTBR Instructions. Place the wall brackets on each end of the top and bottom rails first, then attach to the wall as above.

9685 Agur St. Summerland B.C. V0H 1Z2

Phone: 778-516-6250 Fax: 778-516-6003 Toll Free 1-888-493-1103

[www.centuryrailings.com](http://www.centuryrailings.com)

For further detailed instructions visit our website or call us toll free