




DESIGN

PURCHASE

CONSTRUCT

ENJOY

Installation Instructions,
56640 6-8" Joist Hanger Tab (JHT-68-LS)
51740 6-8" Joist Hanger Tab (JHT-68-IW)

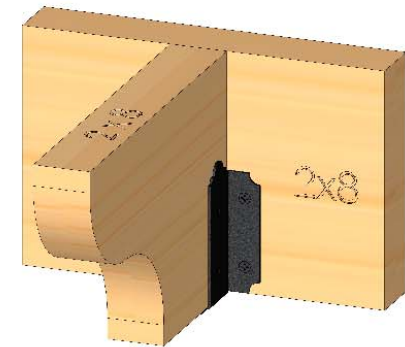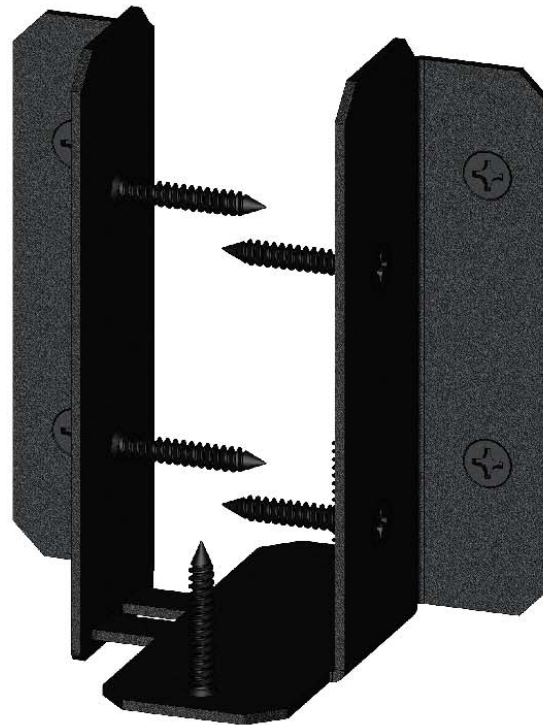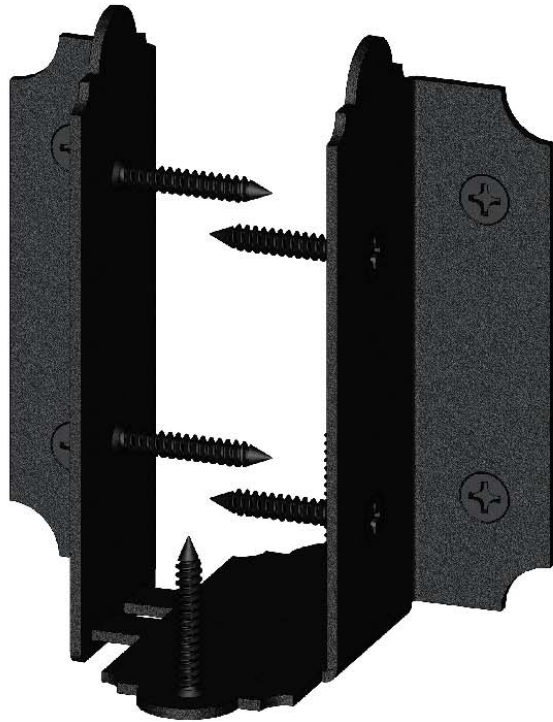

Typical Installation
Laredo Sunset shown

DESIGN


PURCHASE

CONSTRUCT

ENJOY

Laredo Sunset vs. Ironwood

2 great styles
same functionality

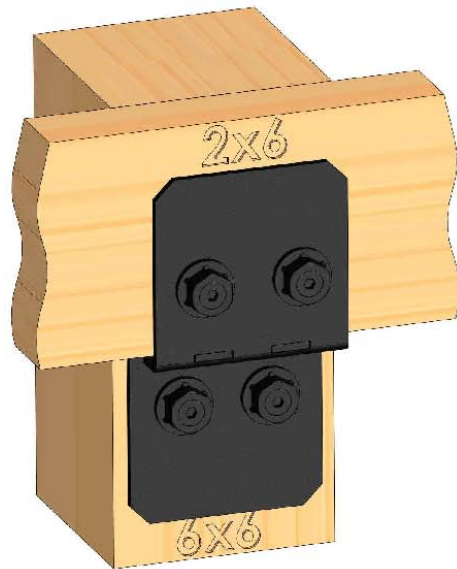

Ironwood
(517XX series)







Laredo Sunset
(566XX series)

choose your connection lifestyle
both styles available for most products







OZCO BUILDING PRODUCTS

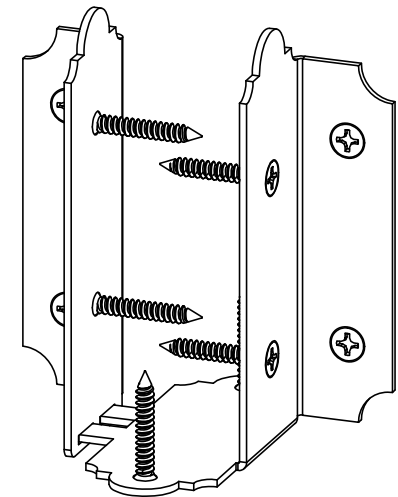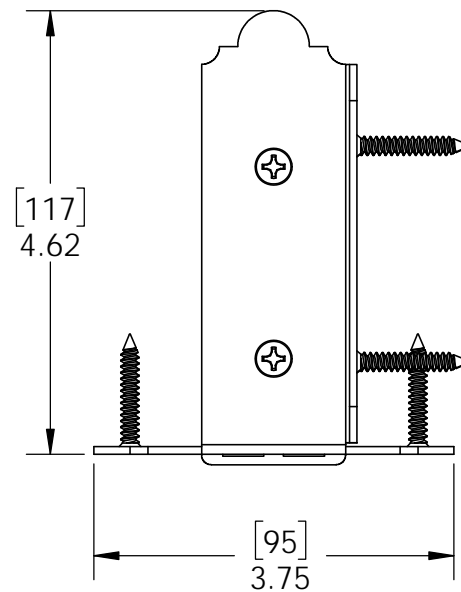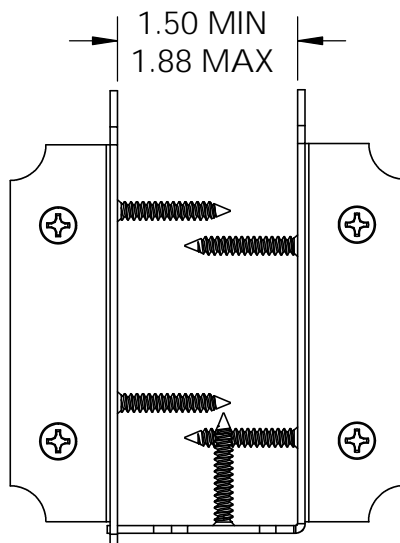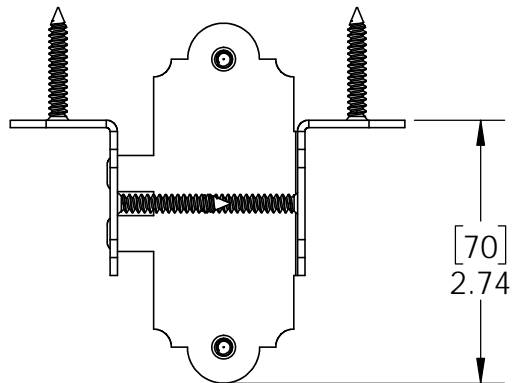

kit contains 6 assemblies

56640


Installation Instructions, 56640

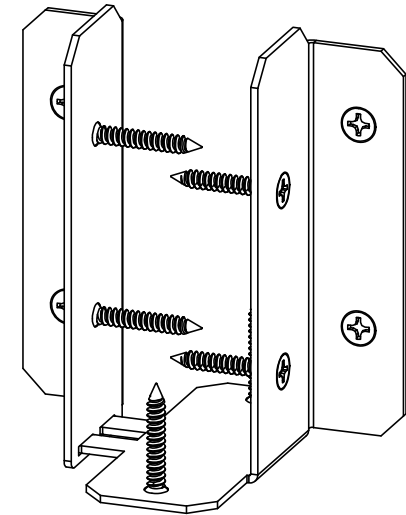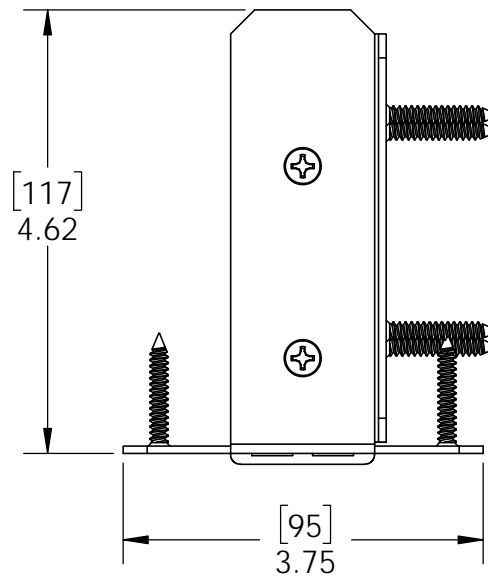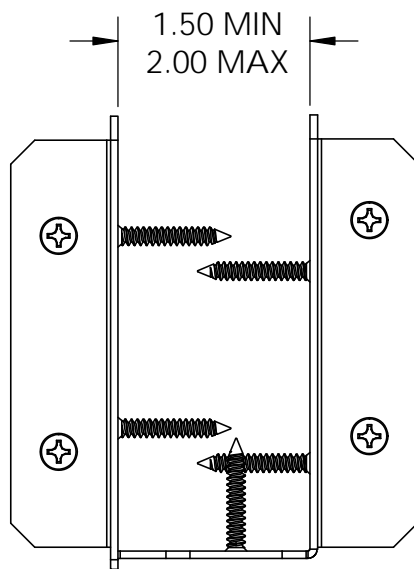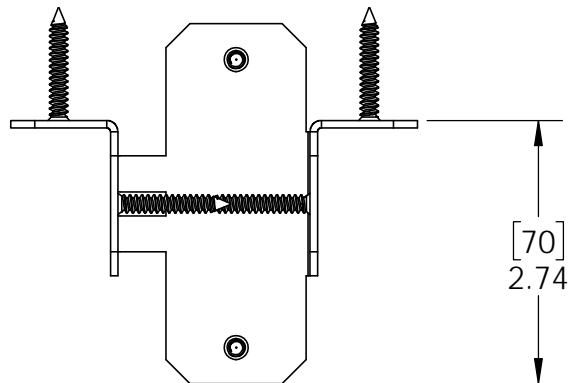

kit contains 6 assemblies

51740


Installation Instructions, 56640

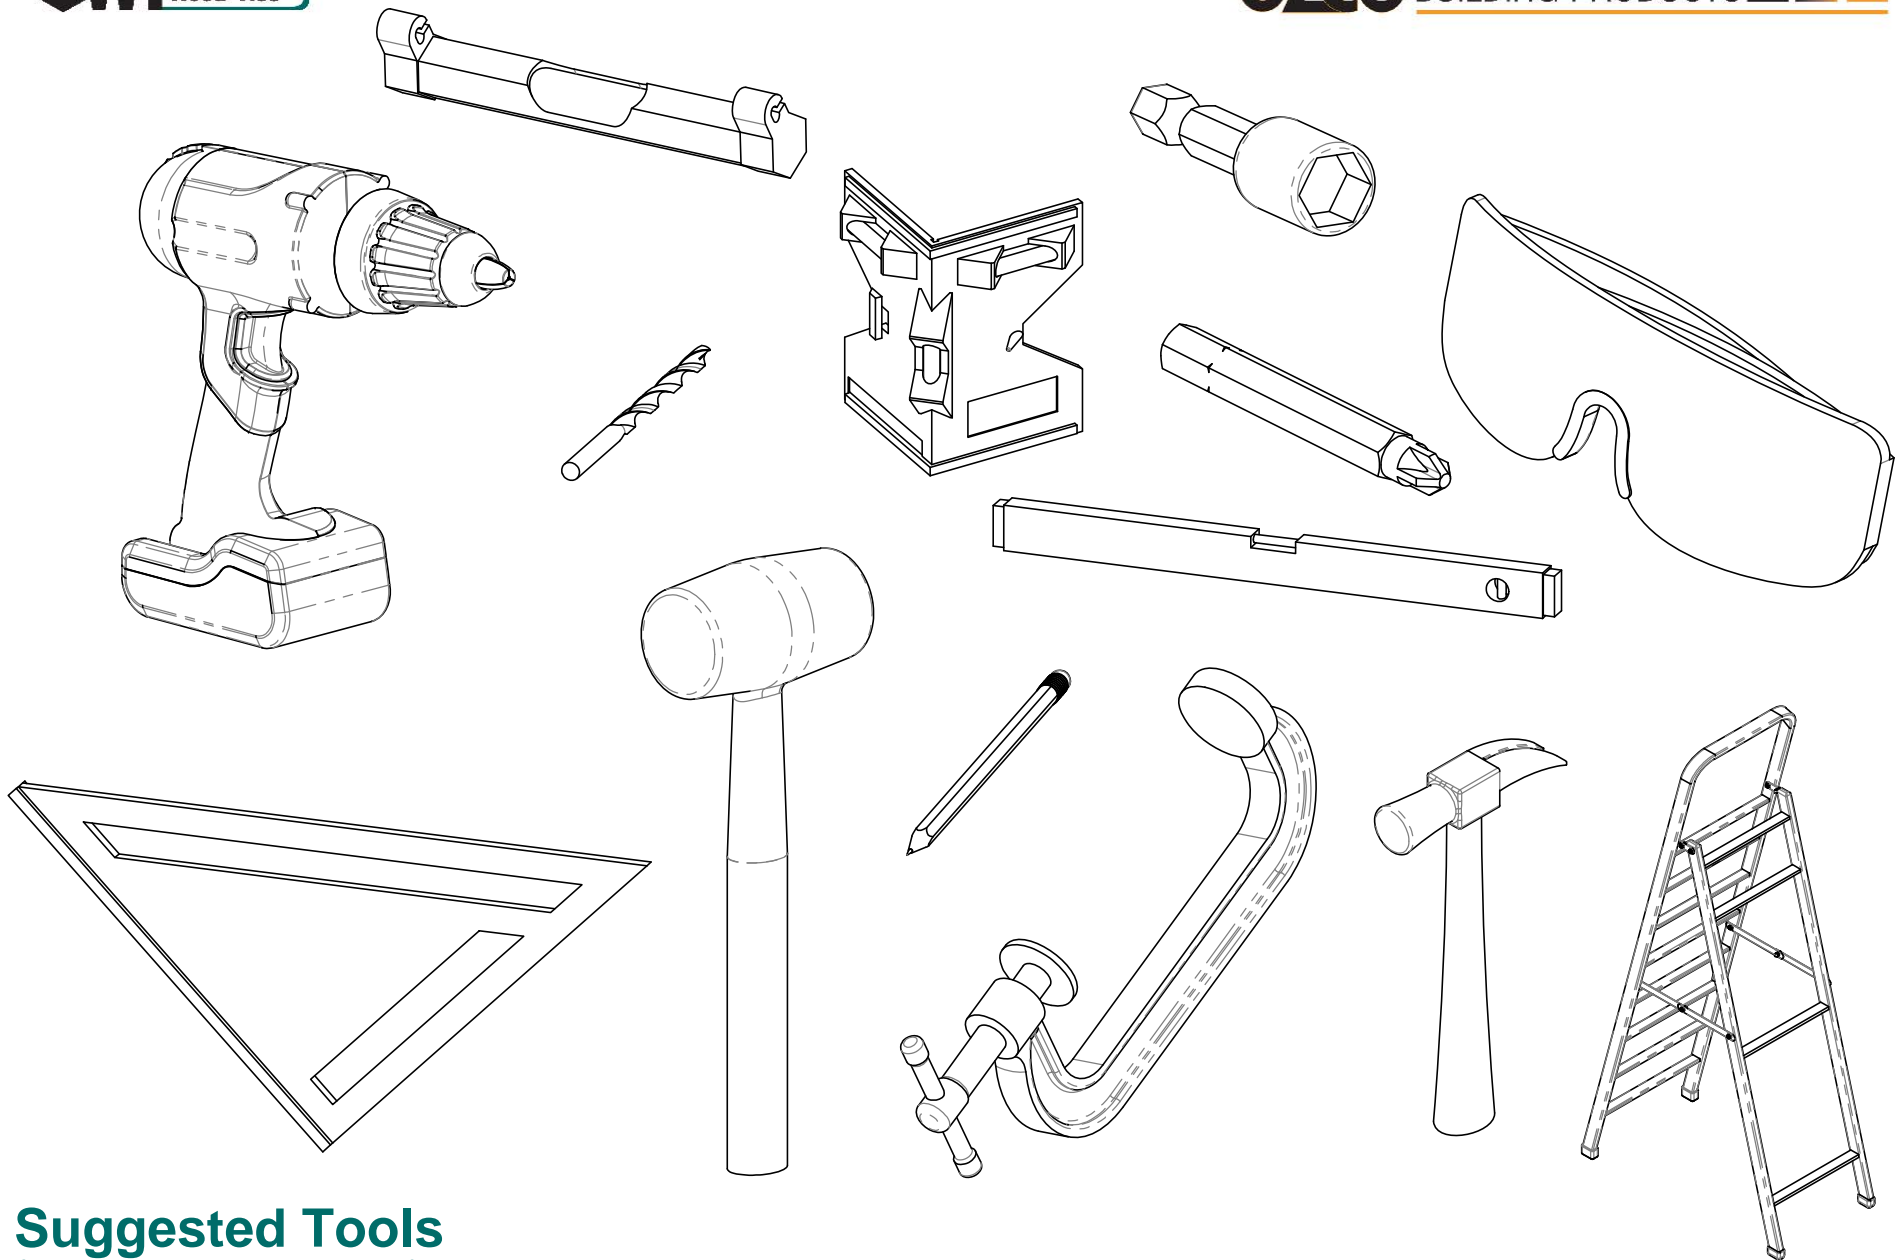

Suggested Tools

(others may be required)

Installation Instructions, 56640

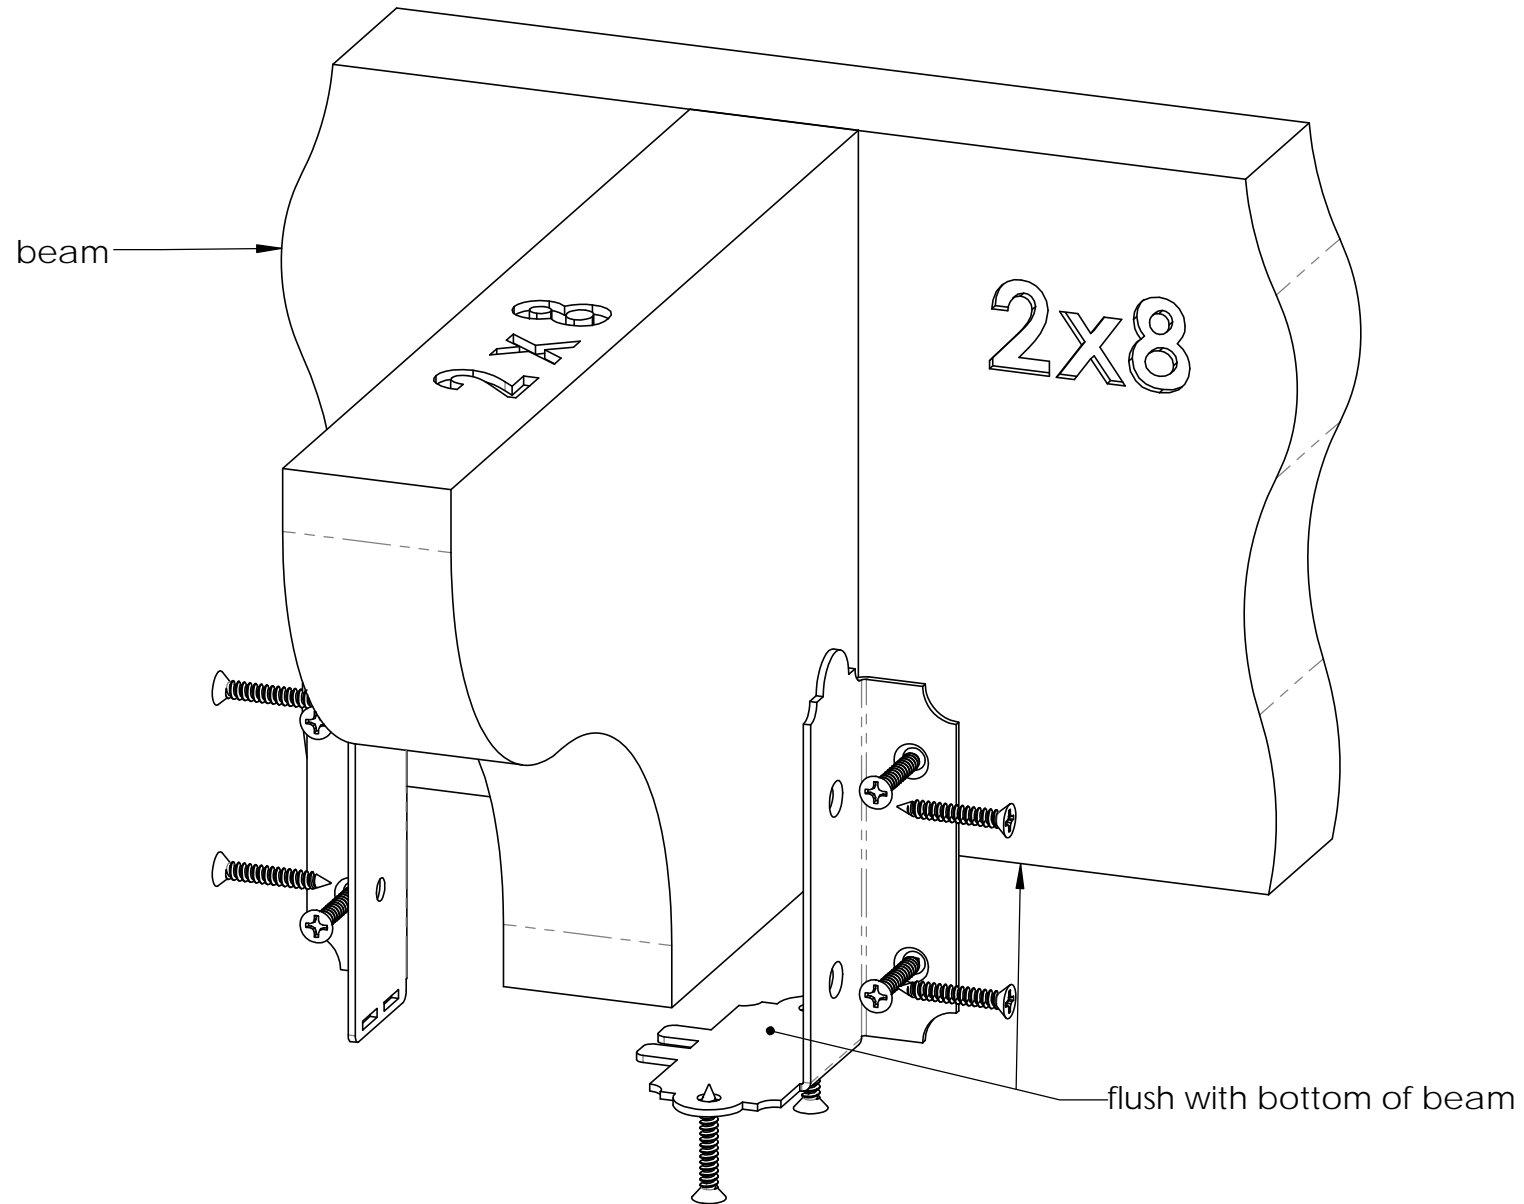

step 1

Installation Instructions, 56640

V1.00 - Installation Instructions effective May 1, 2015 and reflects information that available as of April 10, 2014. This information is updated periodically and should not be relied upon after May 1, 2015. Please visit www.OZCOBP.com to get current information