DESIGN PURCHASE CONSTRUCT ENJOY

Installation Instructions,
51774 4" 90 Flush Outside (FO-90-IW-4)
56674 4" 90 Flush Outside (FO-90-LS-4)

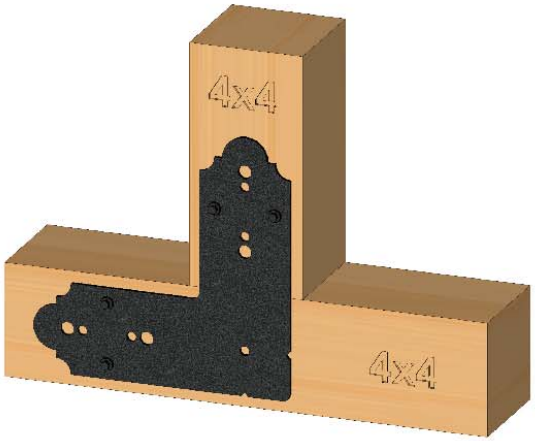

Typical Installation
Laredo Sunset shown

OWT Ornamental Wood Ties

OZCO BUILDING PRODUCTS

V2.00 - Installation Instructions, Specifications and Project Plans are effective 8/3/2016 . This information is updated periodically and should not be relied upon after 2 years from 8/3/2016 . Please visit OZCOBP.com to get current information.

Laredo Sunset & Ironwood

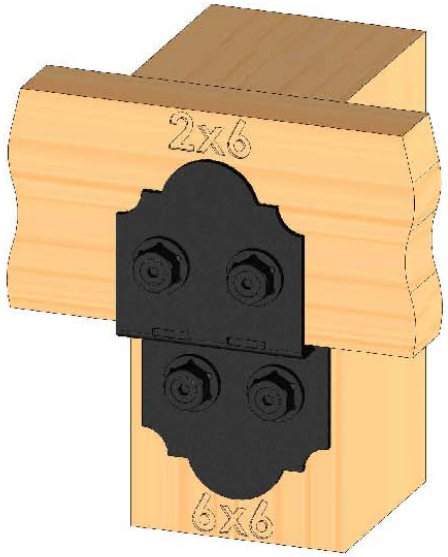

Laredo Sunset
(566XX series)

2 great styles

Same functionality

choose your connection lifestyle

both styles available for most products

Ironwood
(517XX series)

OWT Ornamental Wood Ties

OZCO BUILDING PRODUCTS

V2.00 - Installation Instructions, Specifications and Project Plans are effective 8/3/2016 . This information is updated periodically and should not be relied upon after 2 years from 8/3/2016 . Please visit OZCOBP.com to get current information.

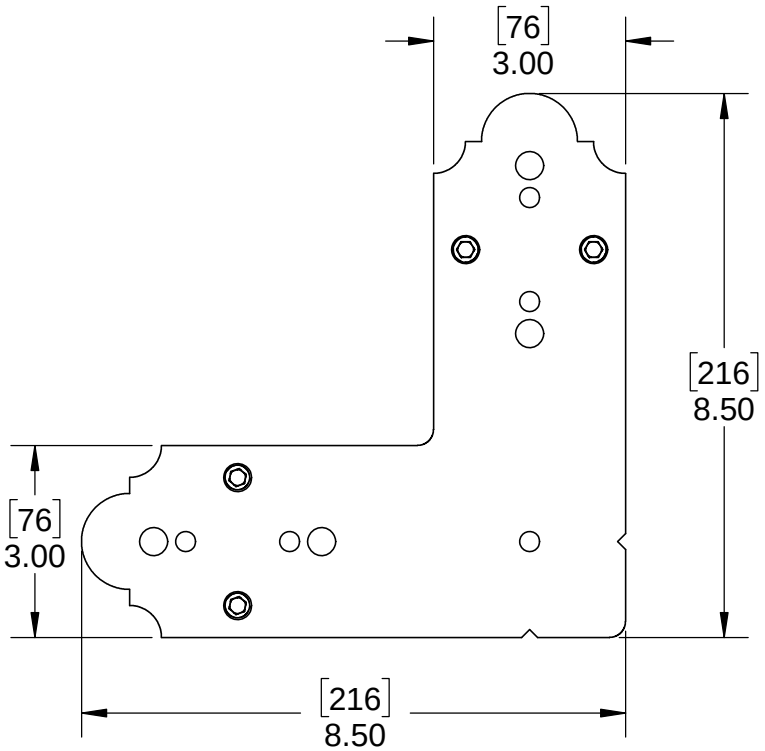

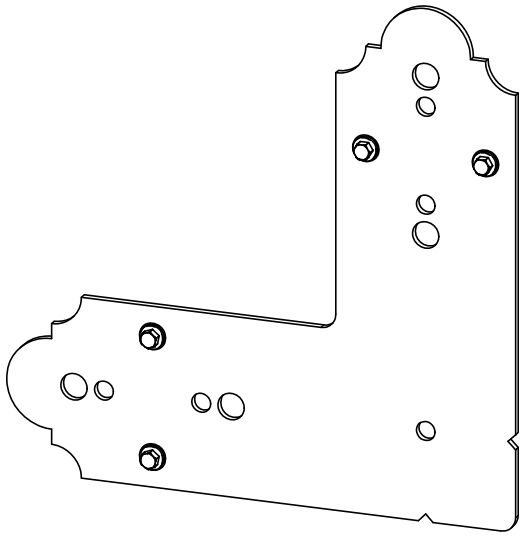

56674

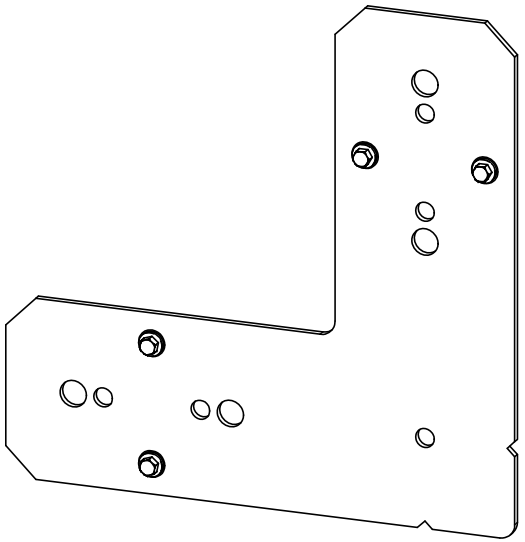

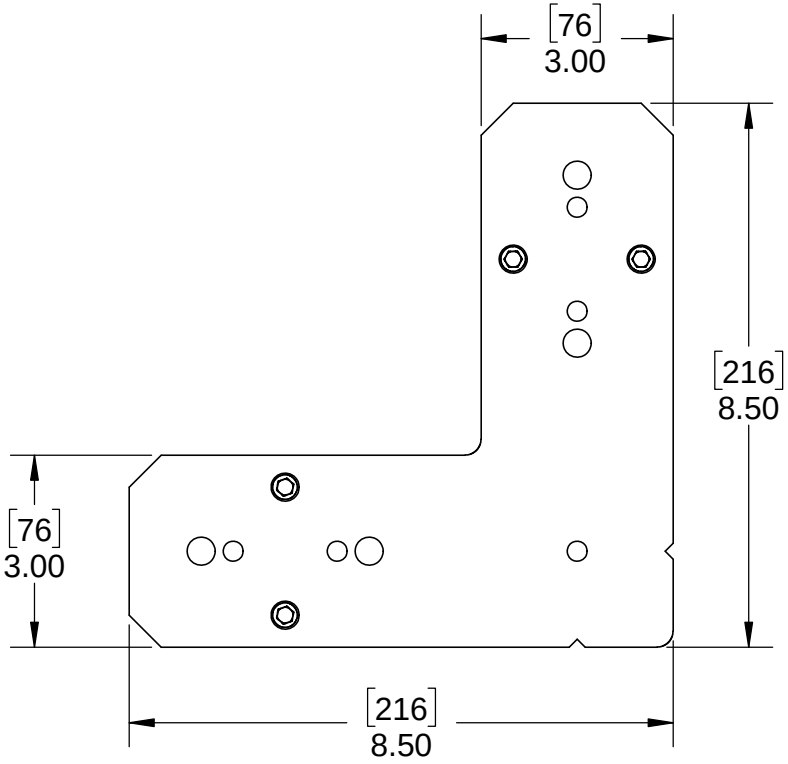

51774

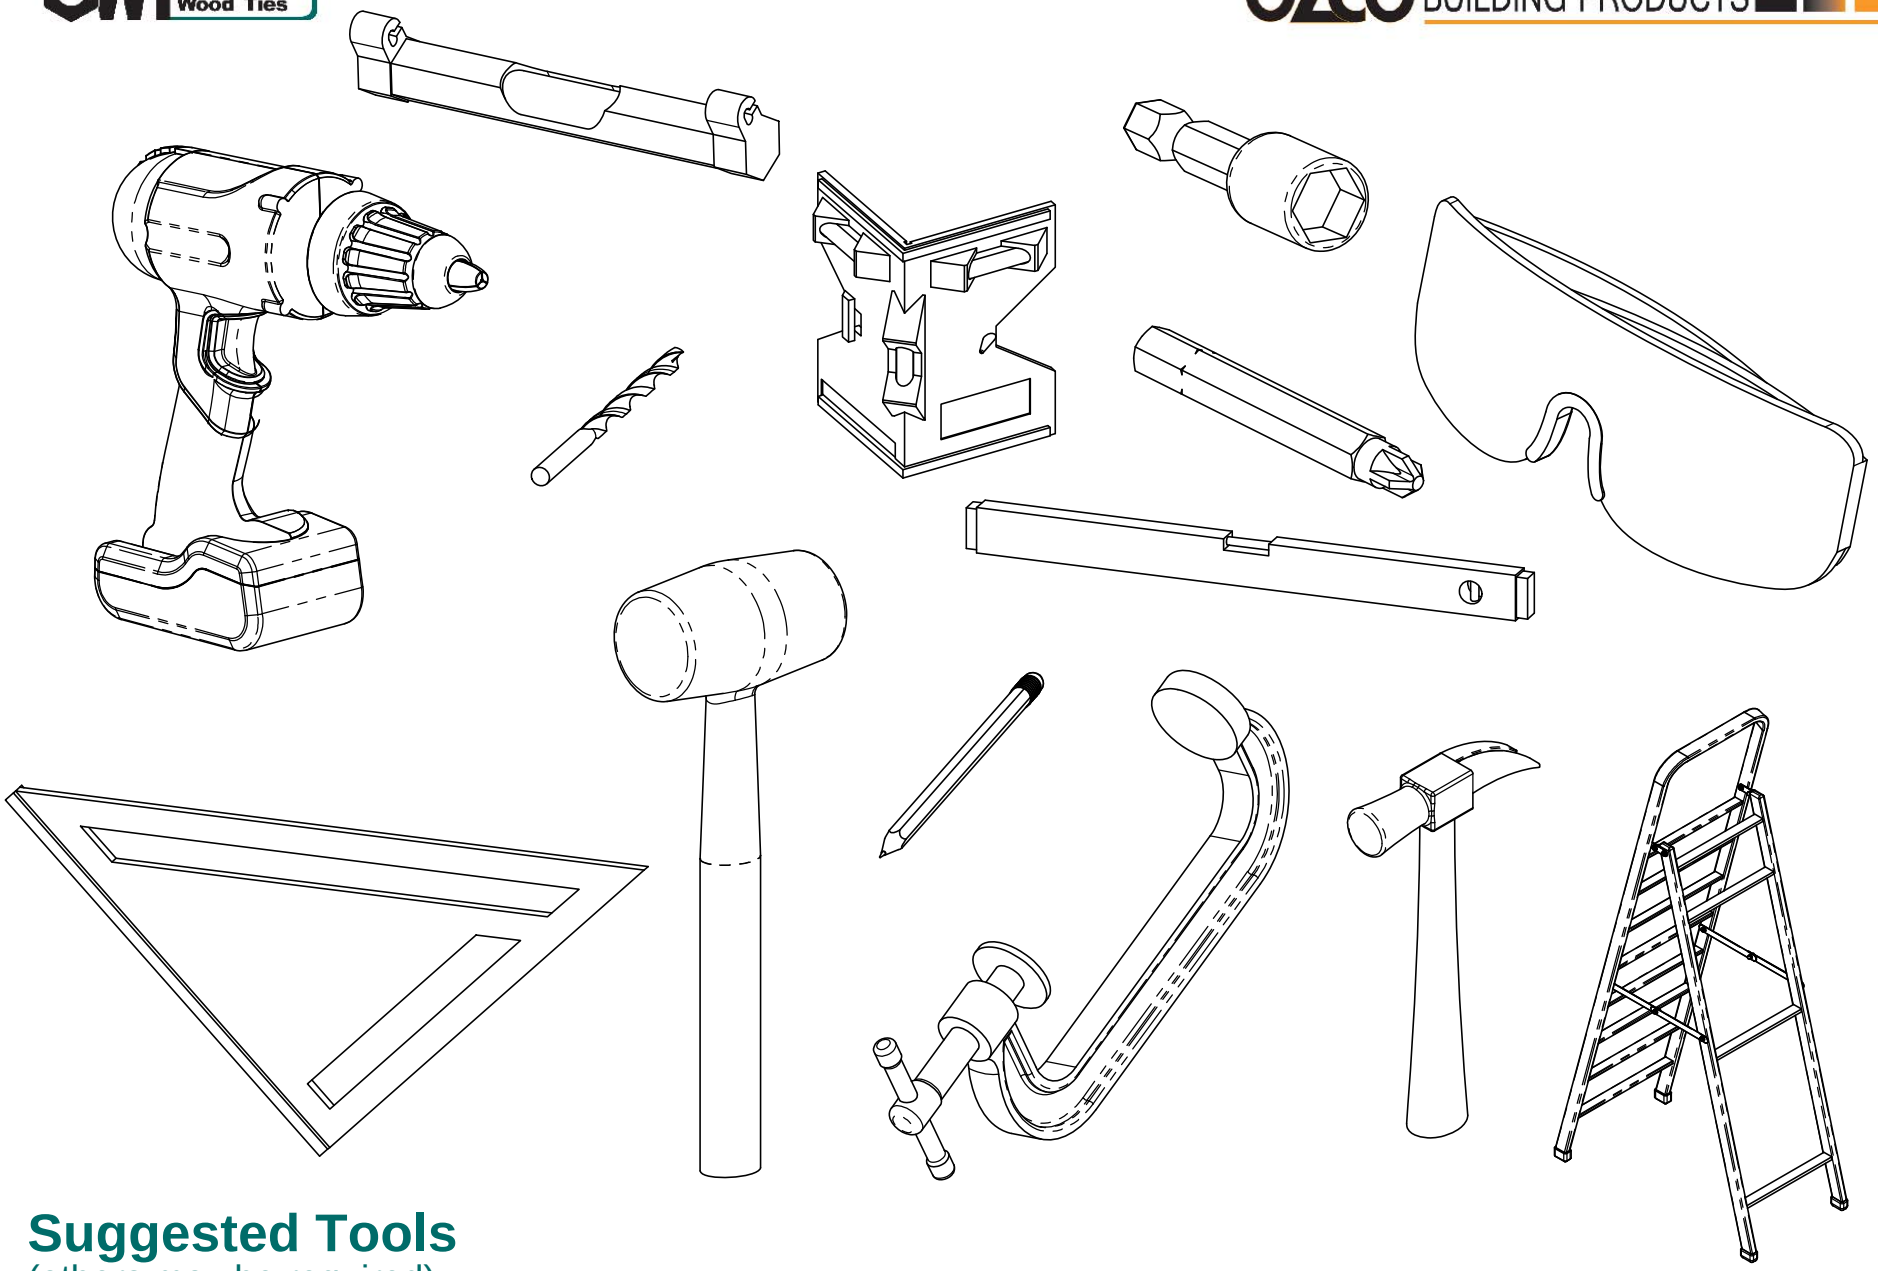

Suggested Tools
(others may be required)

V2.00 - Installation Instructions, Specifications and Project Plans are effective 8/3/2016 . This information is updated periodically and should not be relied upon after 2 years from 8/3/2016 . Please visit OZCOBP.com to get current information.

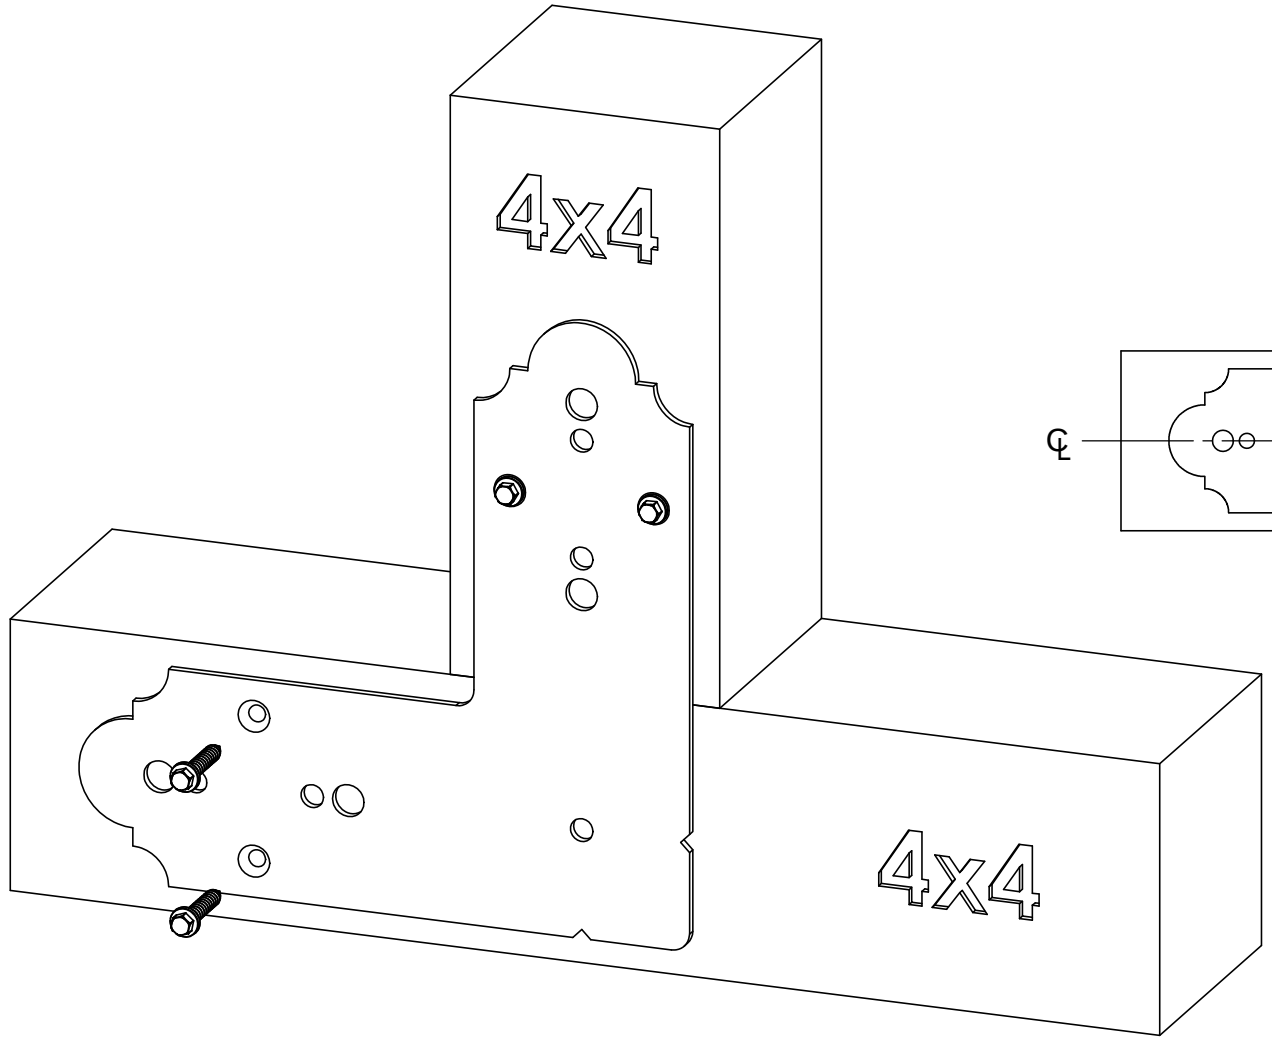

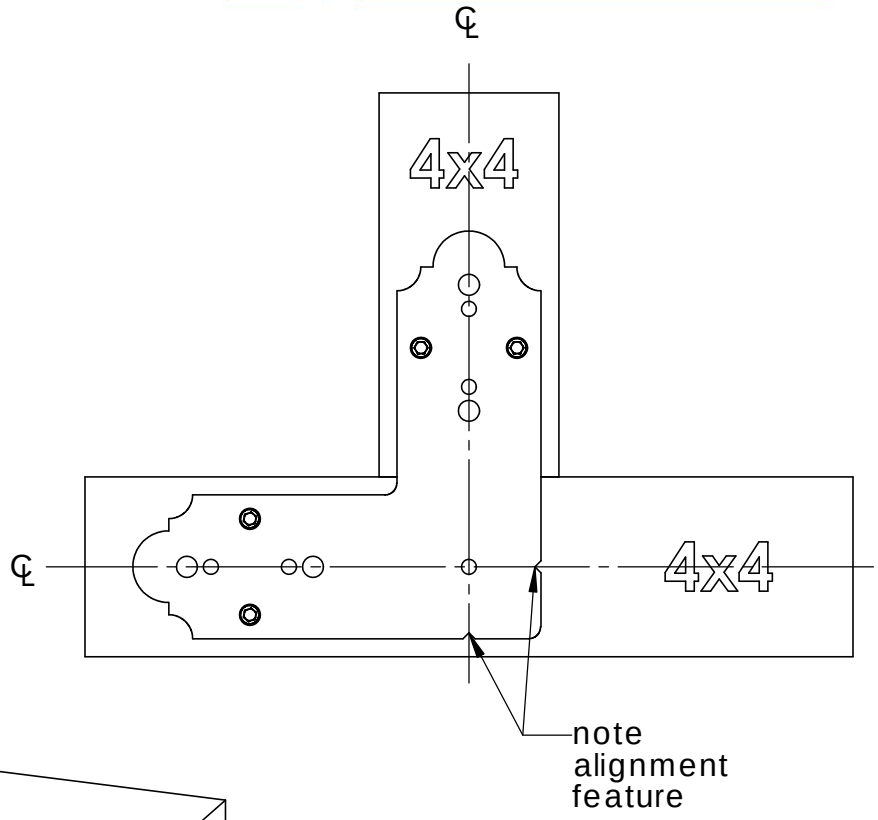

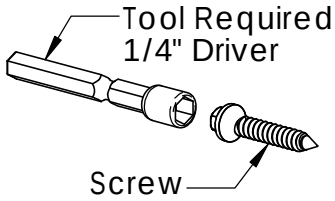

Standard Installation

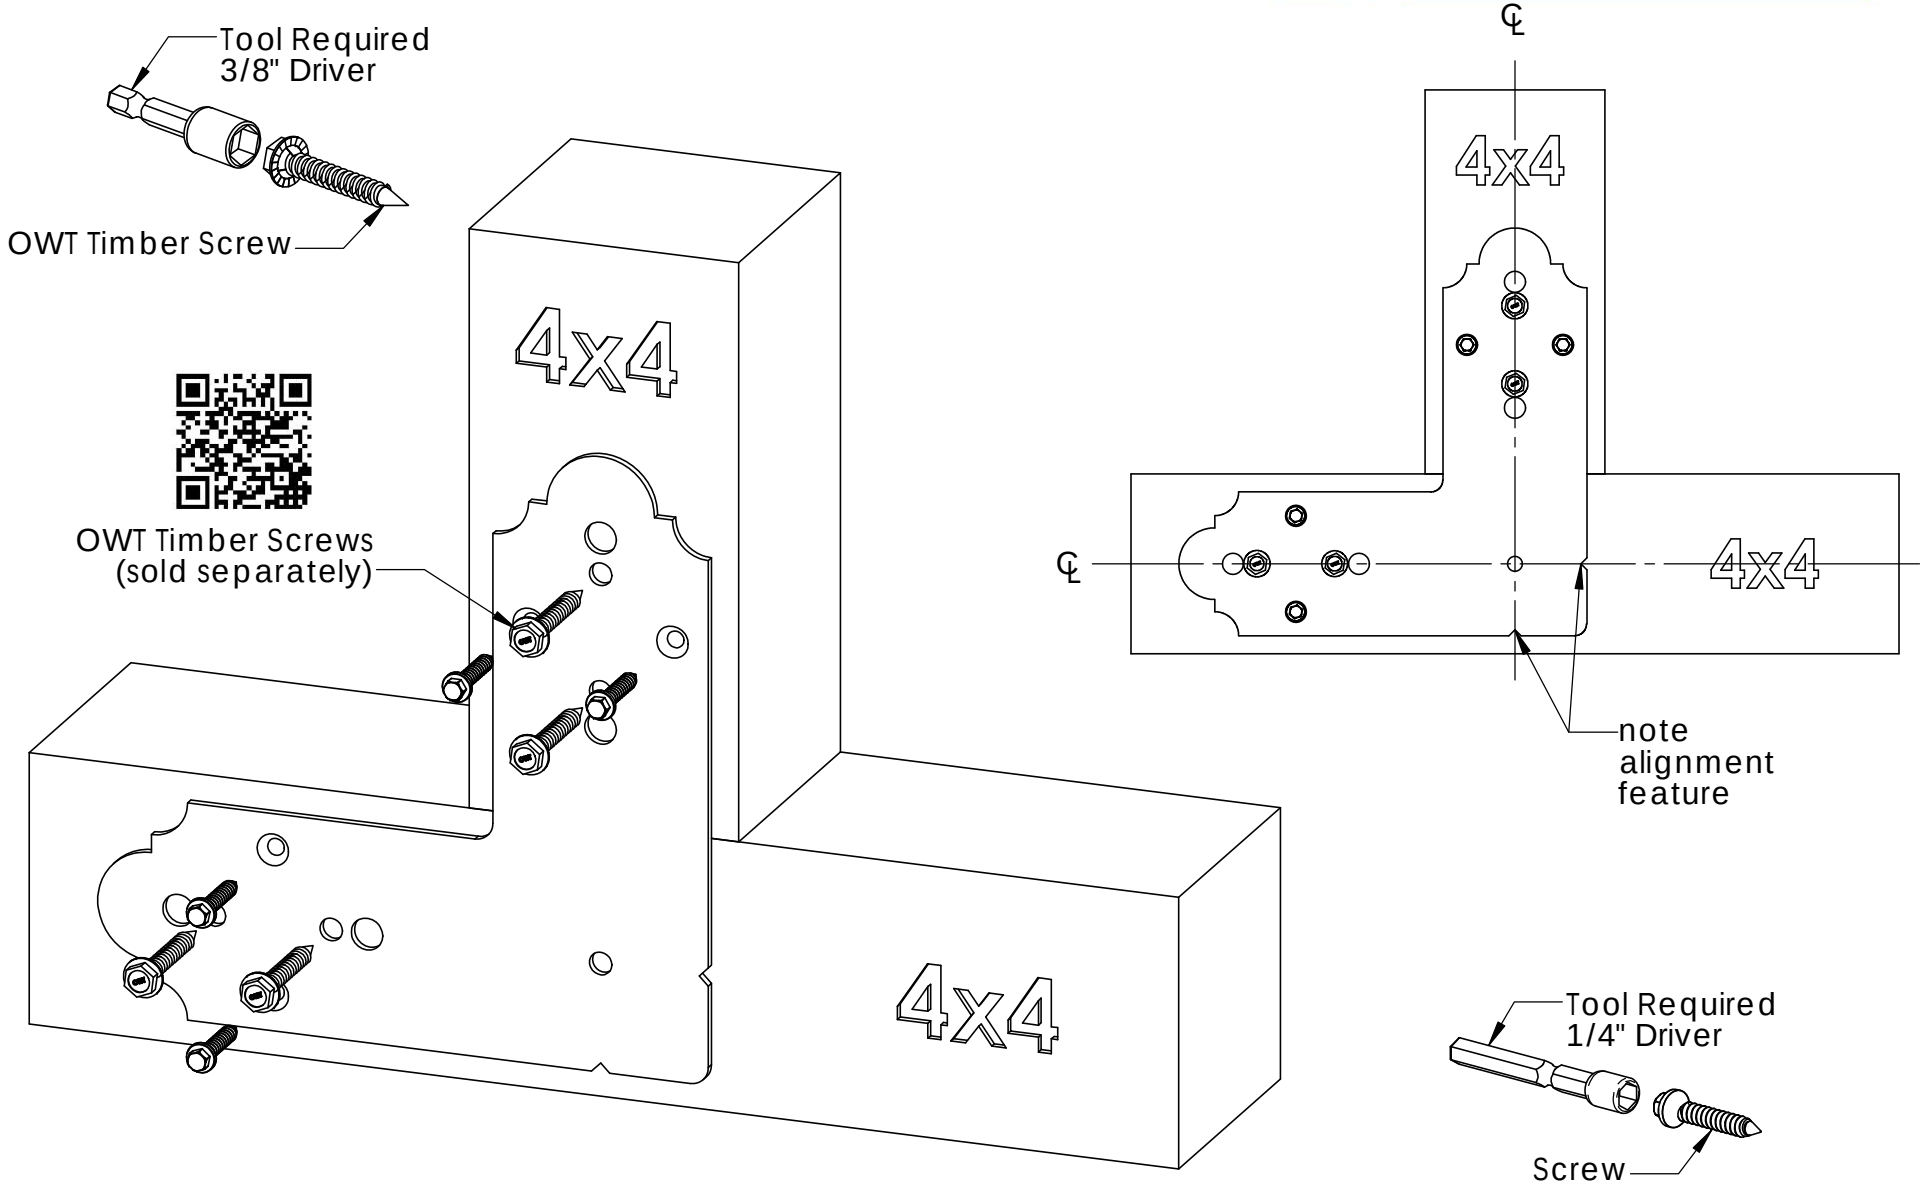

Standard Installation with Timber Screws

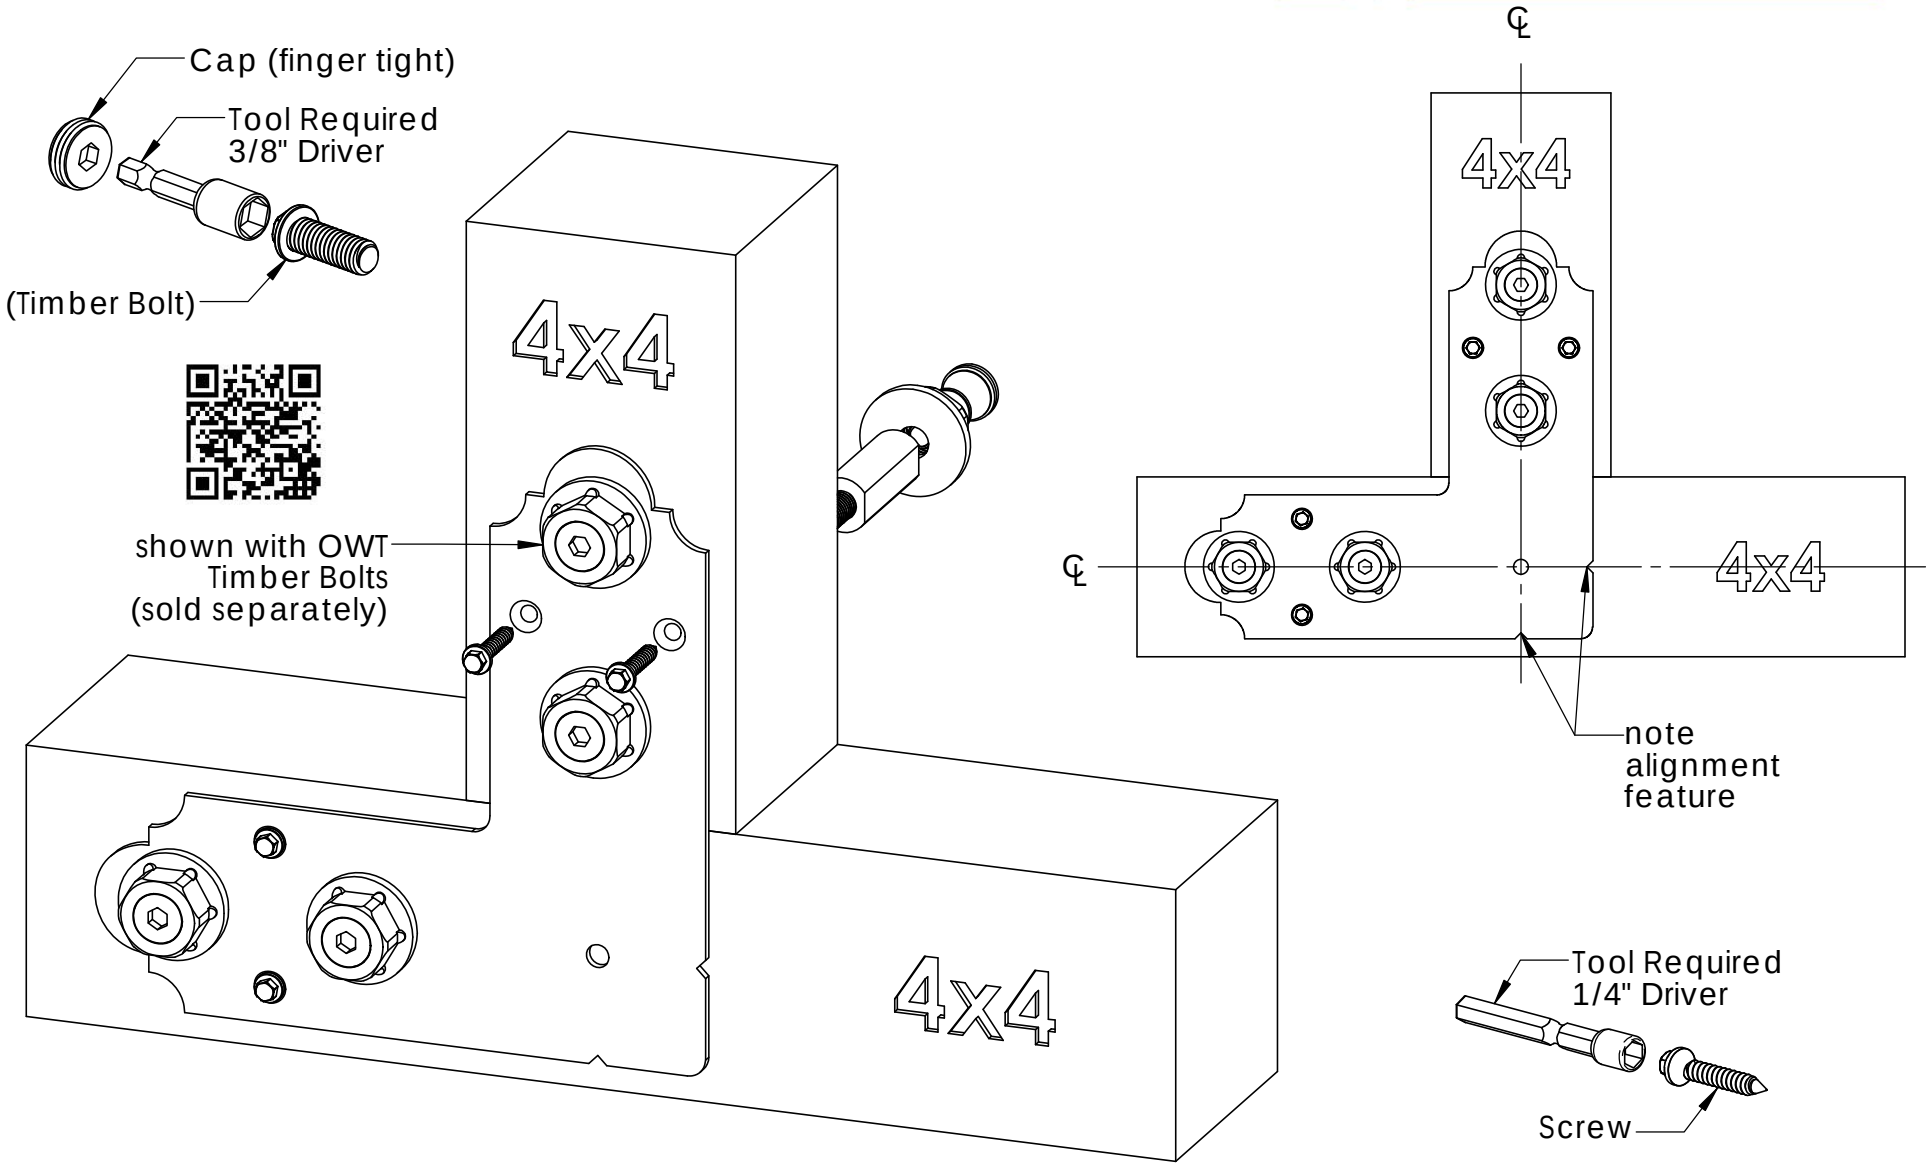

Standard Installation with Timber Bolts

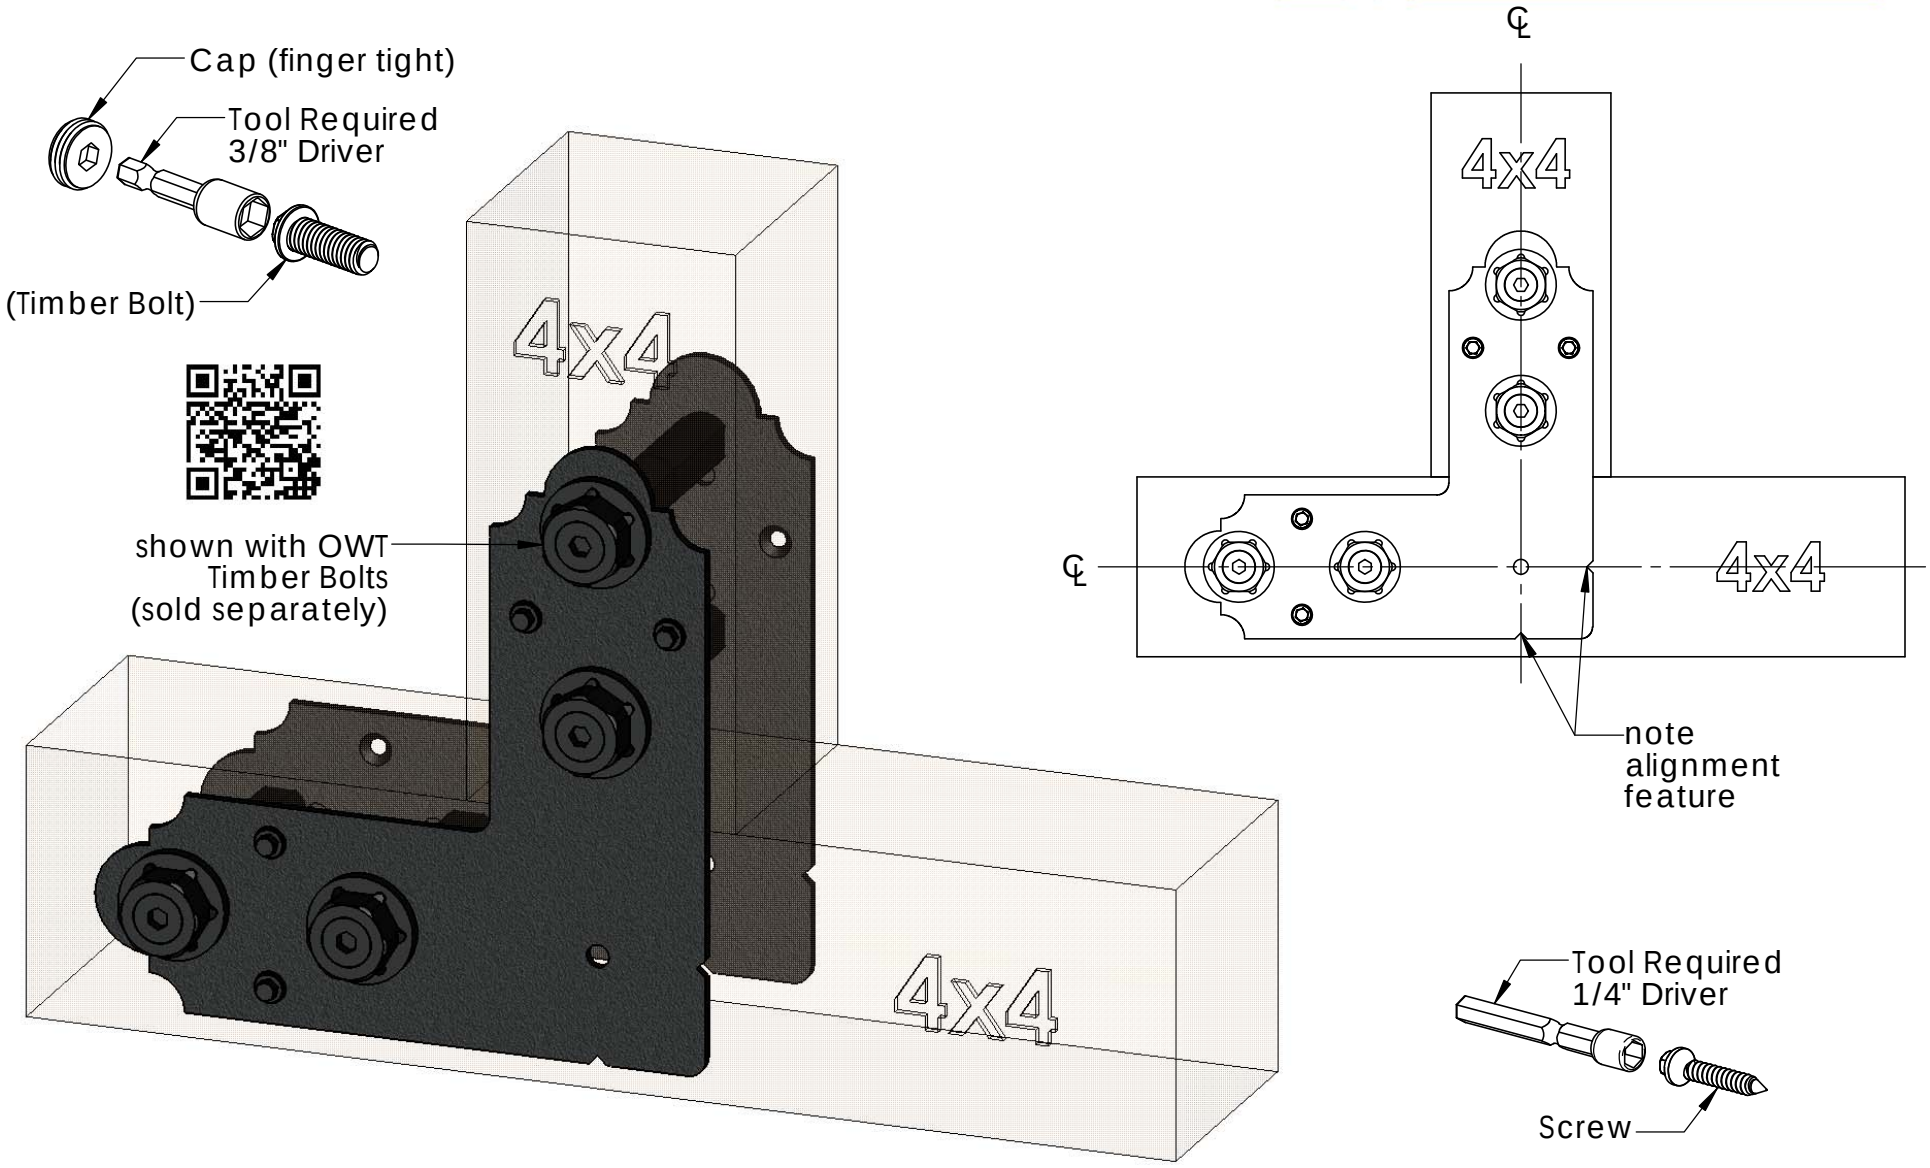

Double Installation with Timber Bolts

V2.00 - Installation Instructions, Specifications and Project Plans are effective 8/3/2016 . This information is updated periodically and should not be relied upon after 2 years from 8/3/2016 . Please visit OZCOBP.com to get current information.