



56610


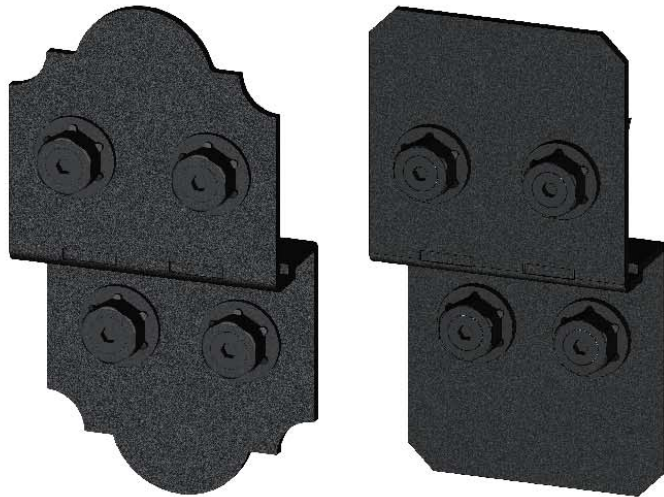


56635

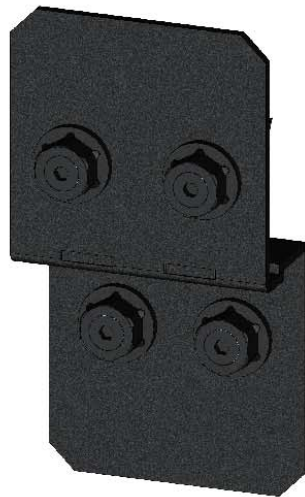



51735

Installation Instructions,  
 56610 8" Post to Beam (P2B-LS-8)  
 51710 8" Post to Beam (P2B-IW-8)  
 56635 6" Post to Beam (P2B-LS-6)  
 51735 6" Post to Beam (P2B-IW-6)

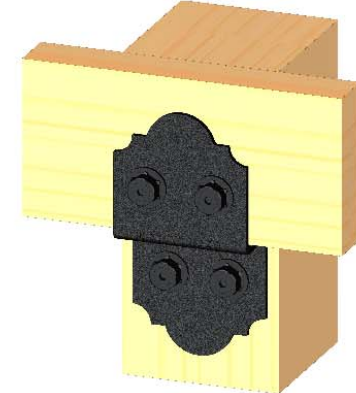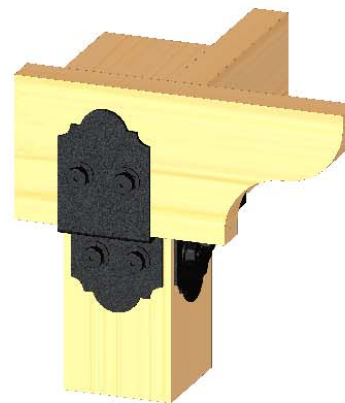


Typical Installation  
Laredo Sunset shown



kit contains 2 assemblies

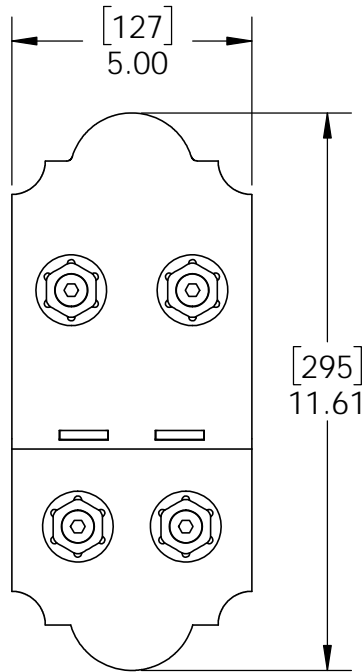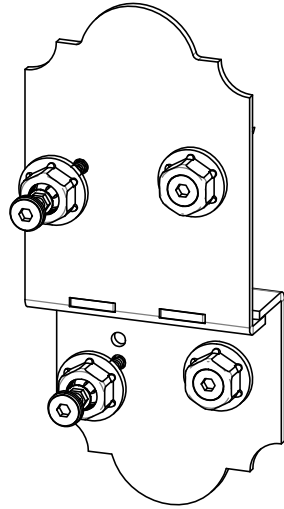


1.47 MIN  
1.88 MAX

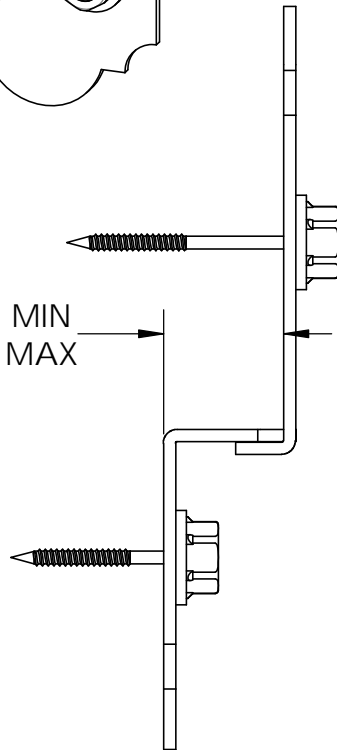

kit contains 2 assemblies

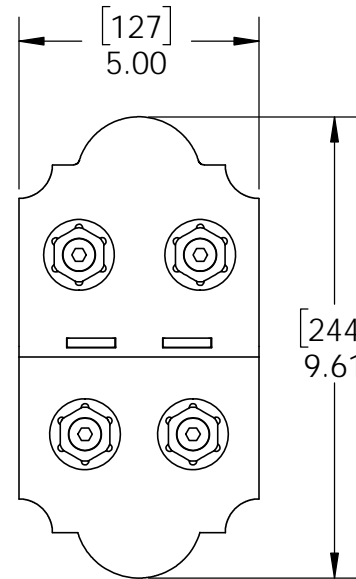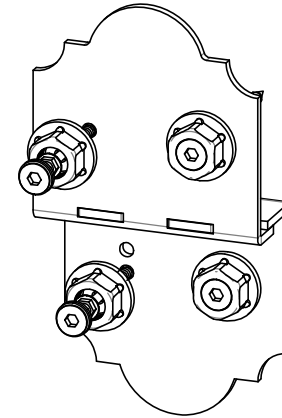


1.47 MIN  
1.88 MAX



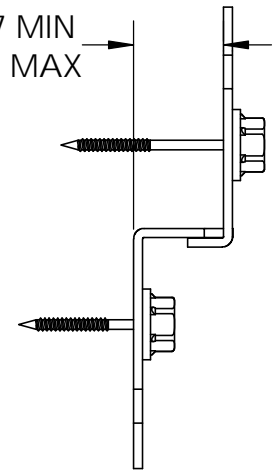


## Laredo Sunset



Installation Instructions, 56610 & 56635

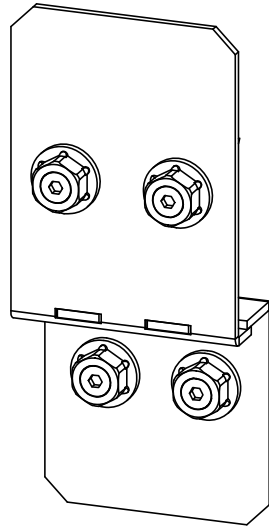

kit contains 2 assemblies

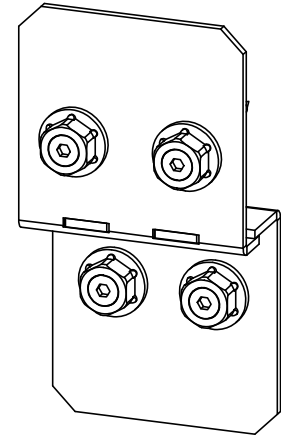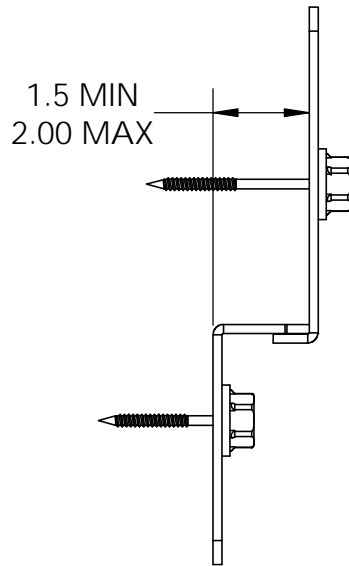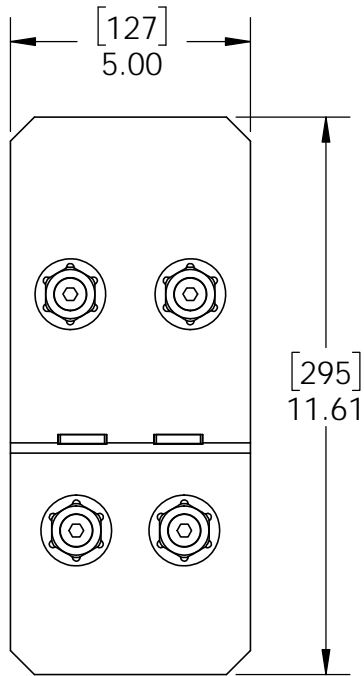


kit contains 2 assemblies

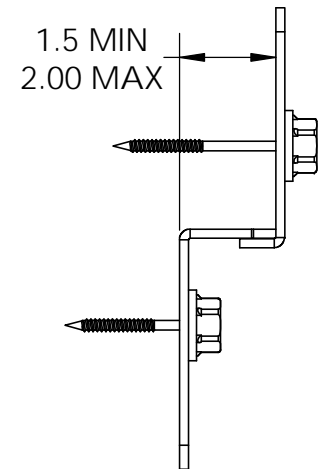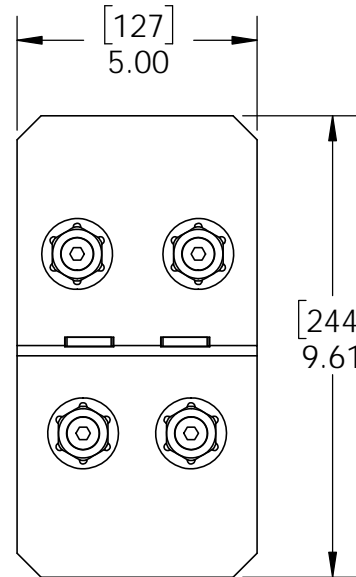


## Ironwood

Installation Instructions, 56610 & 56635

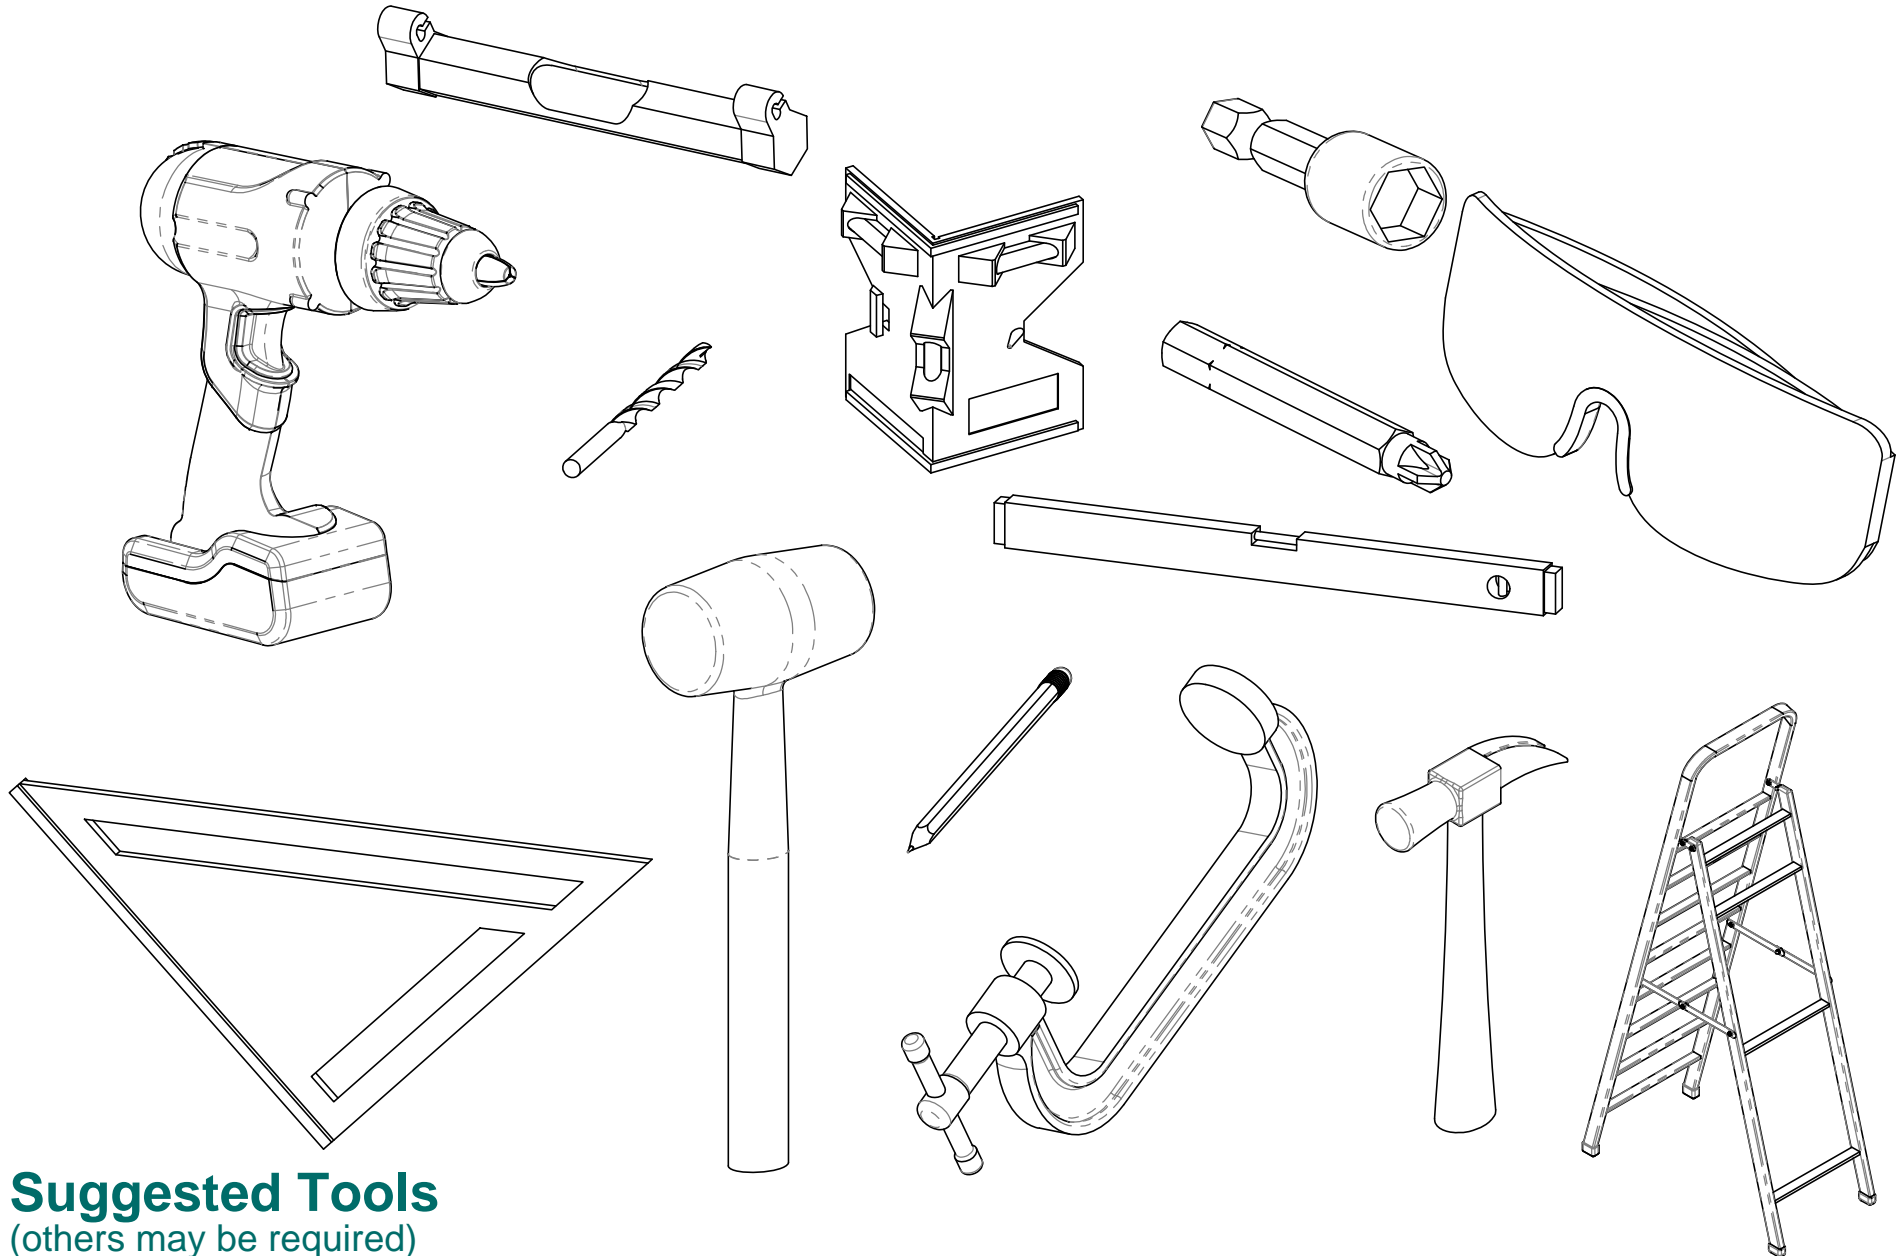



**Suggested Tools**  
(others may be required)

Installation Instructions, 56610 & 56635

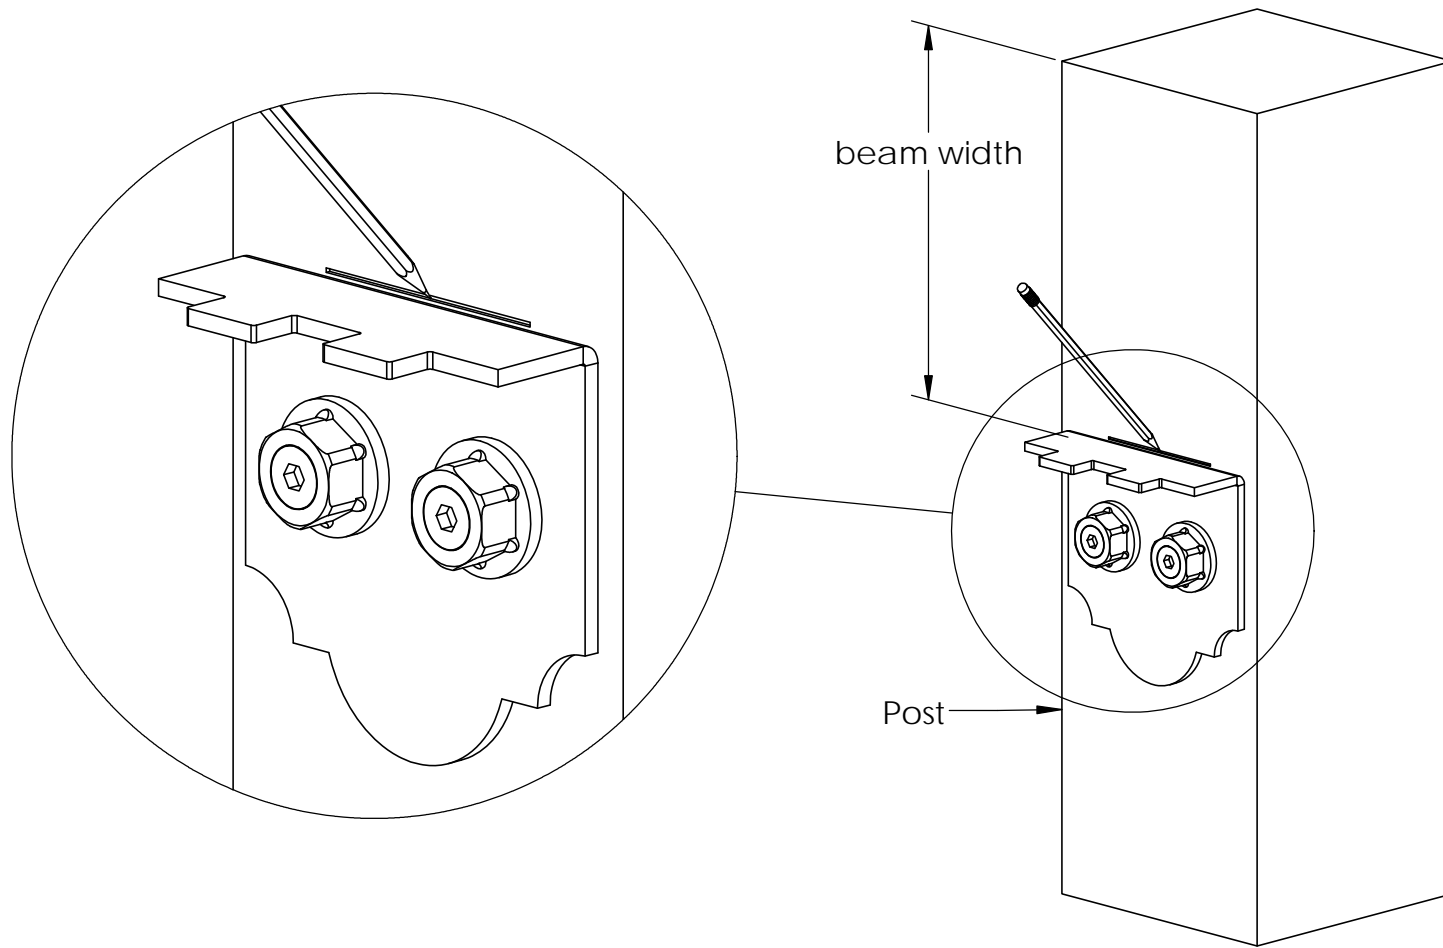


## step 1

Installation Instructions, 56610 & 56635

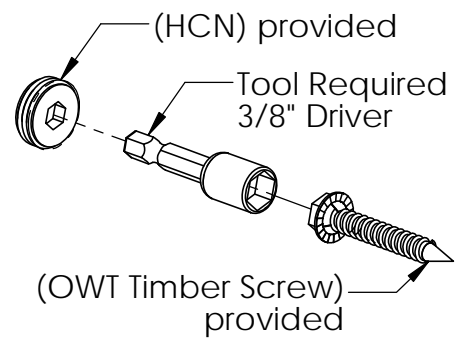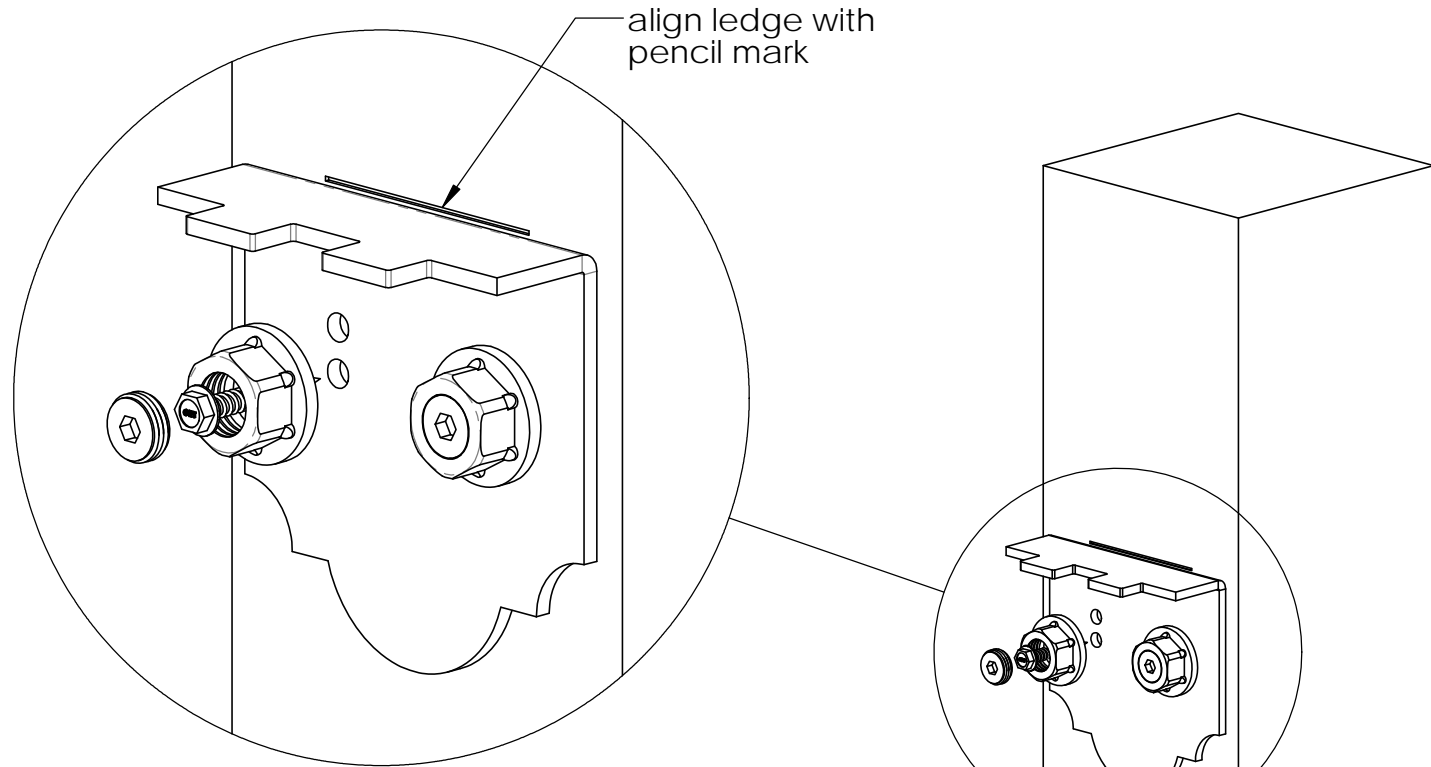



## step 2

Installation Instructions, 56610 & 56635

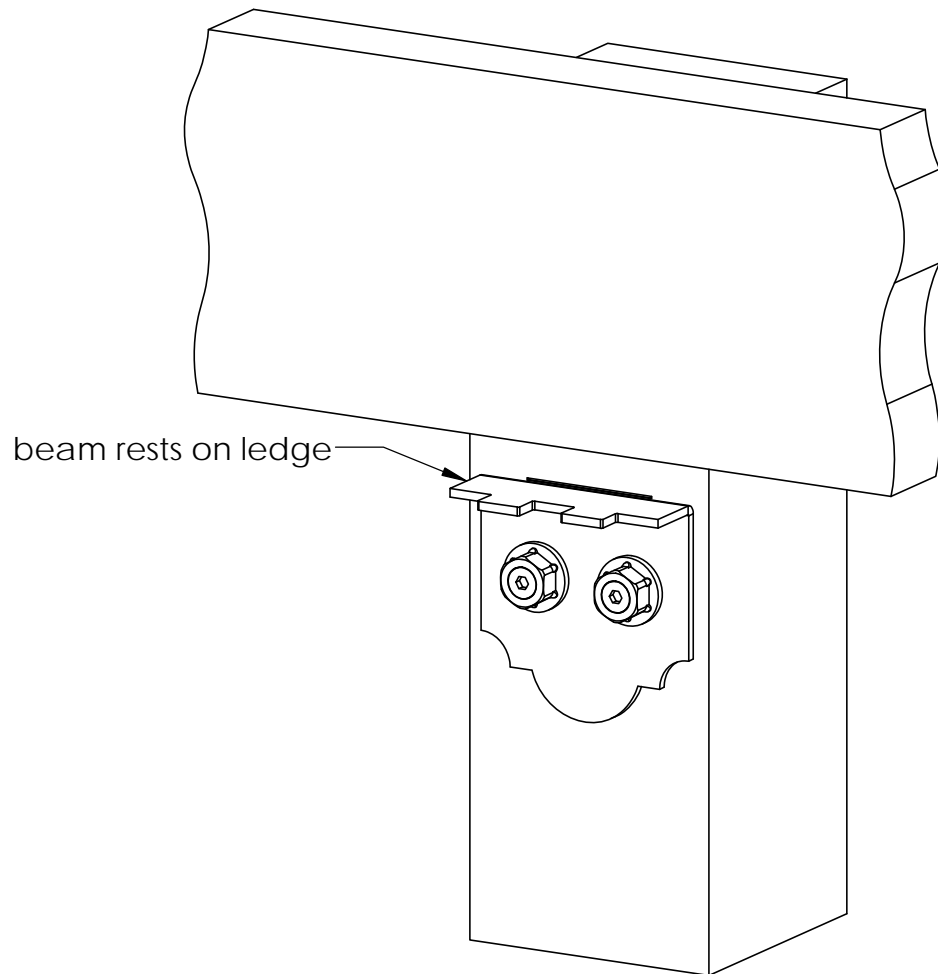

### step 3

Installation Instructions, 56610 & 56635

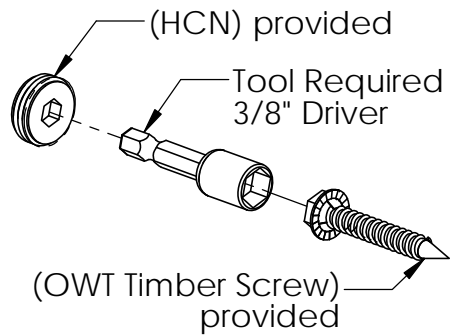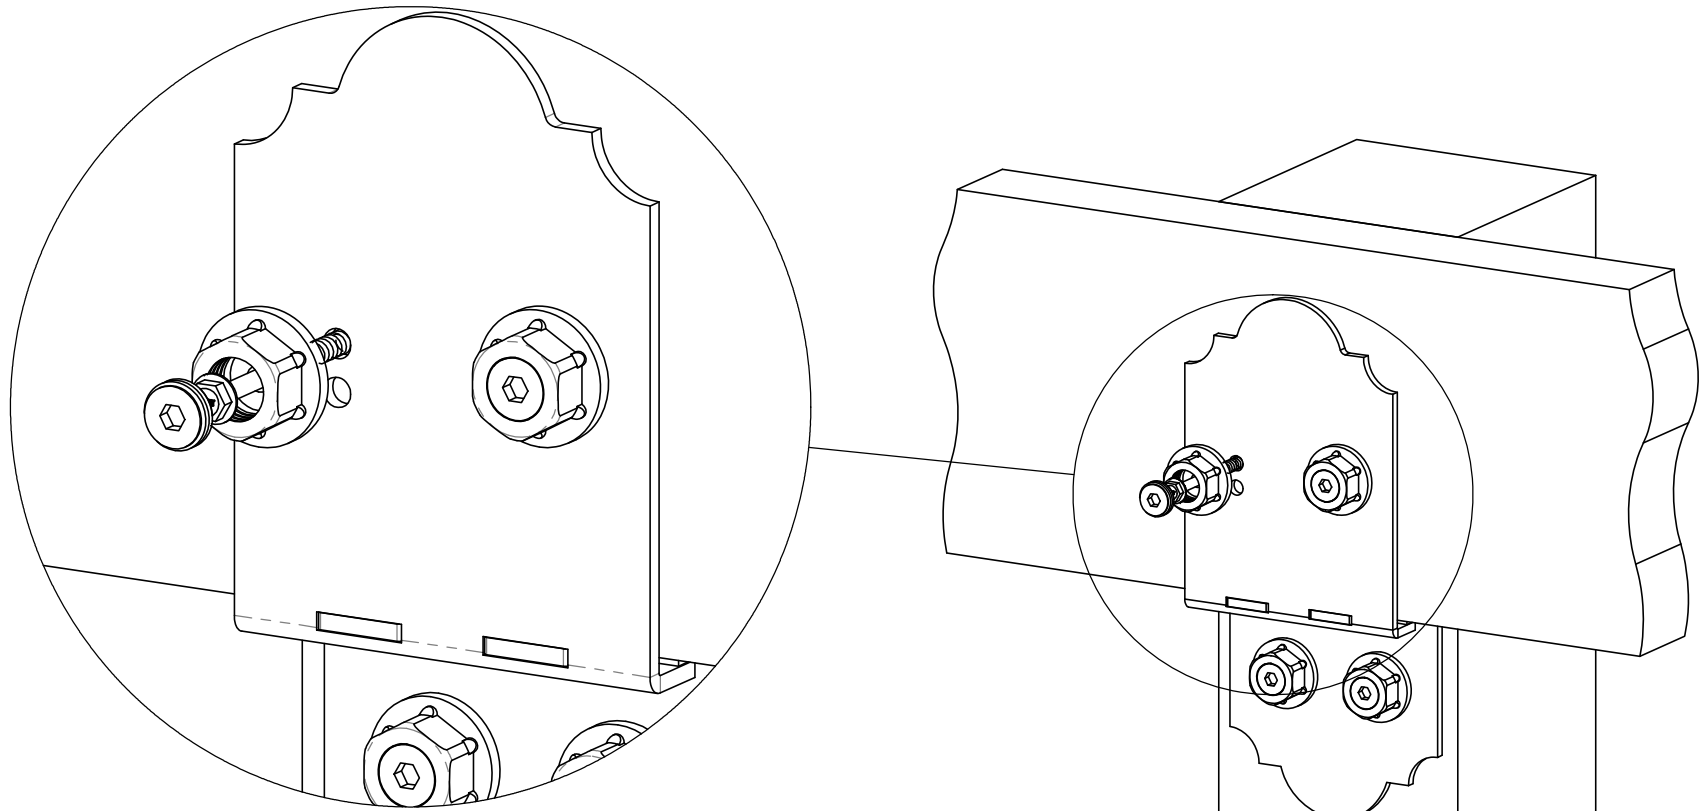

## step 4

Installation Instructions, 56610 & 56635