


DESIGN

PURCHASE

CONSTRUCT

ENJOY

**OZCO Project #205 -
10x10 Pavilion
6x6 Posts**

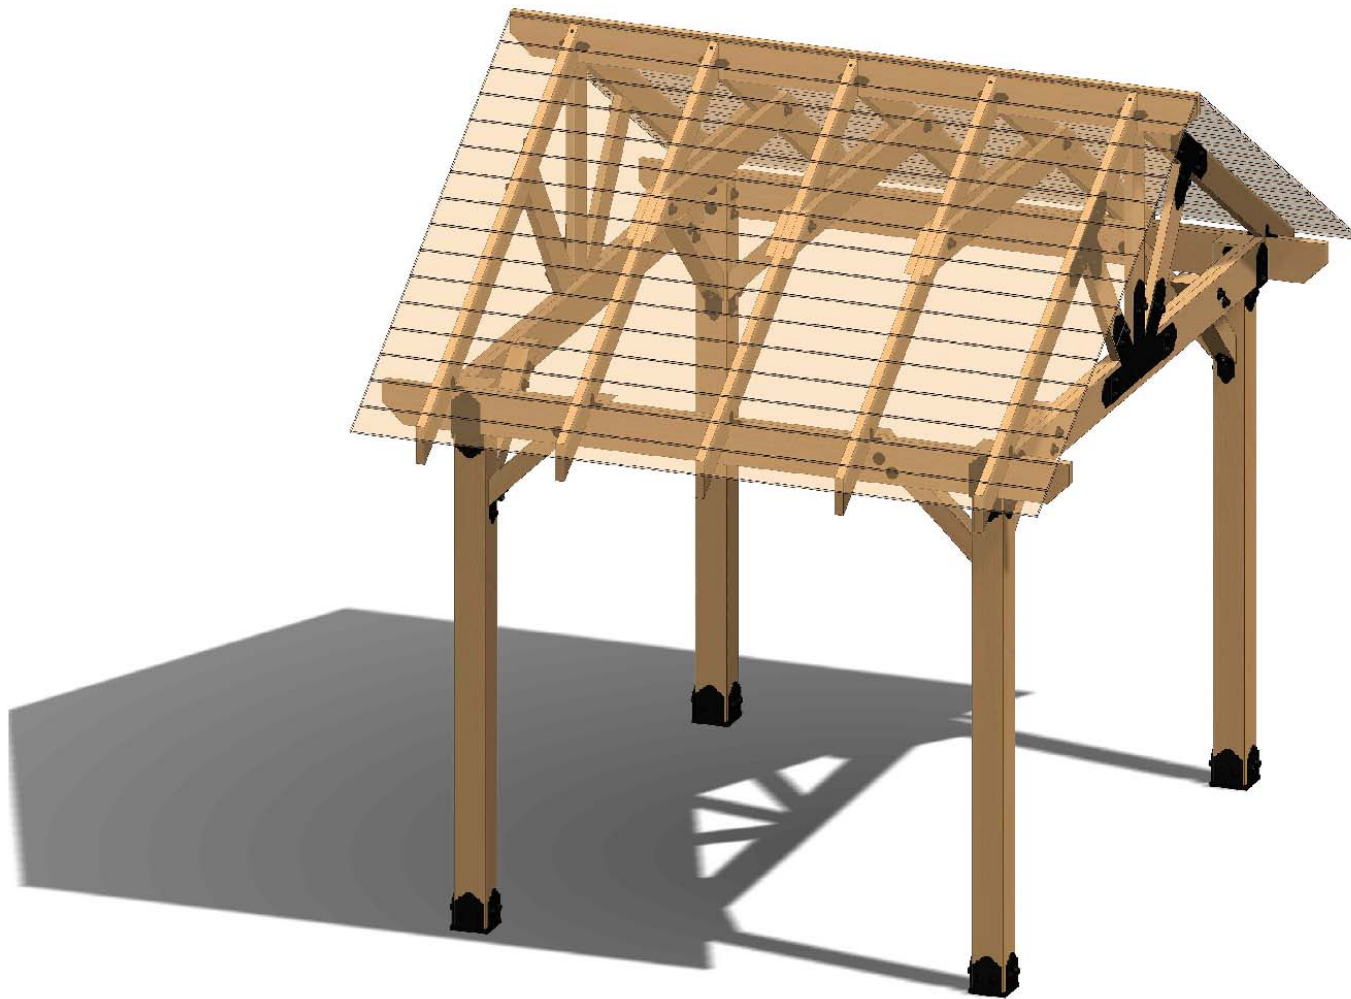

roofing shown translucent for clarity



OZCO BUILDING PRODUCTS


Pavilion Overview



V2.00 - Installation Instructions, Specifications and Project Plans are effective 2/21/2017 . This information is updated periodically and should not be relied upon after 2 years from 2/21/2017 . Please visit OZCOBP.com to get current information.



Printing Documents from ISSUU

Unfortunately, there is currently no way to print content directly through issuu. To print a publication, you will need to download it and print it from your computer.

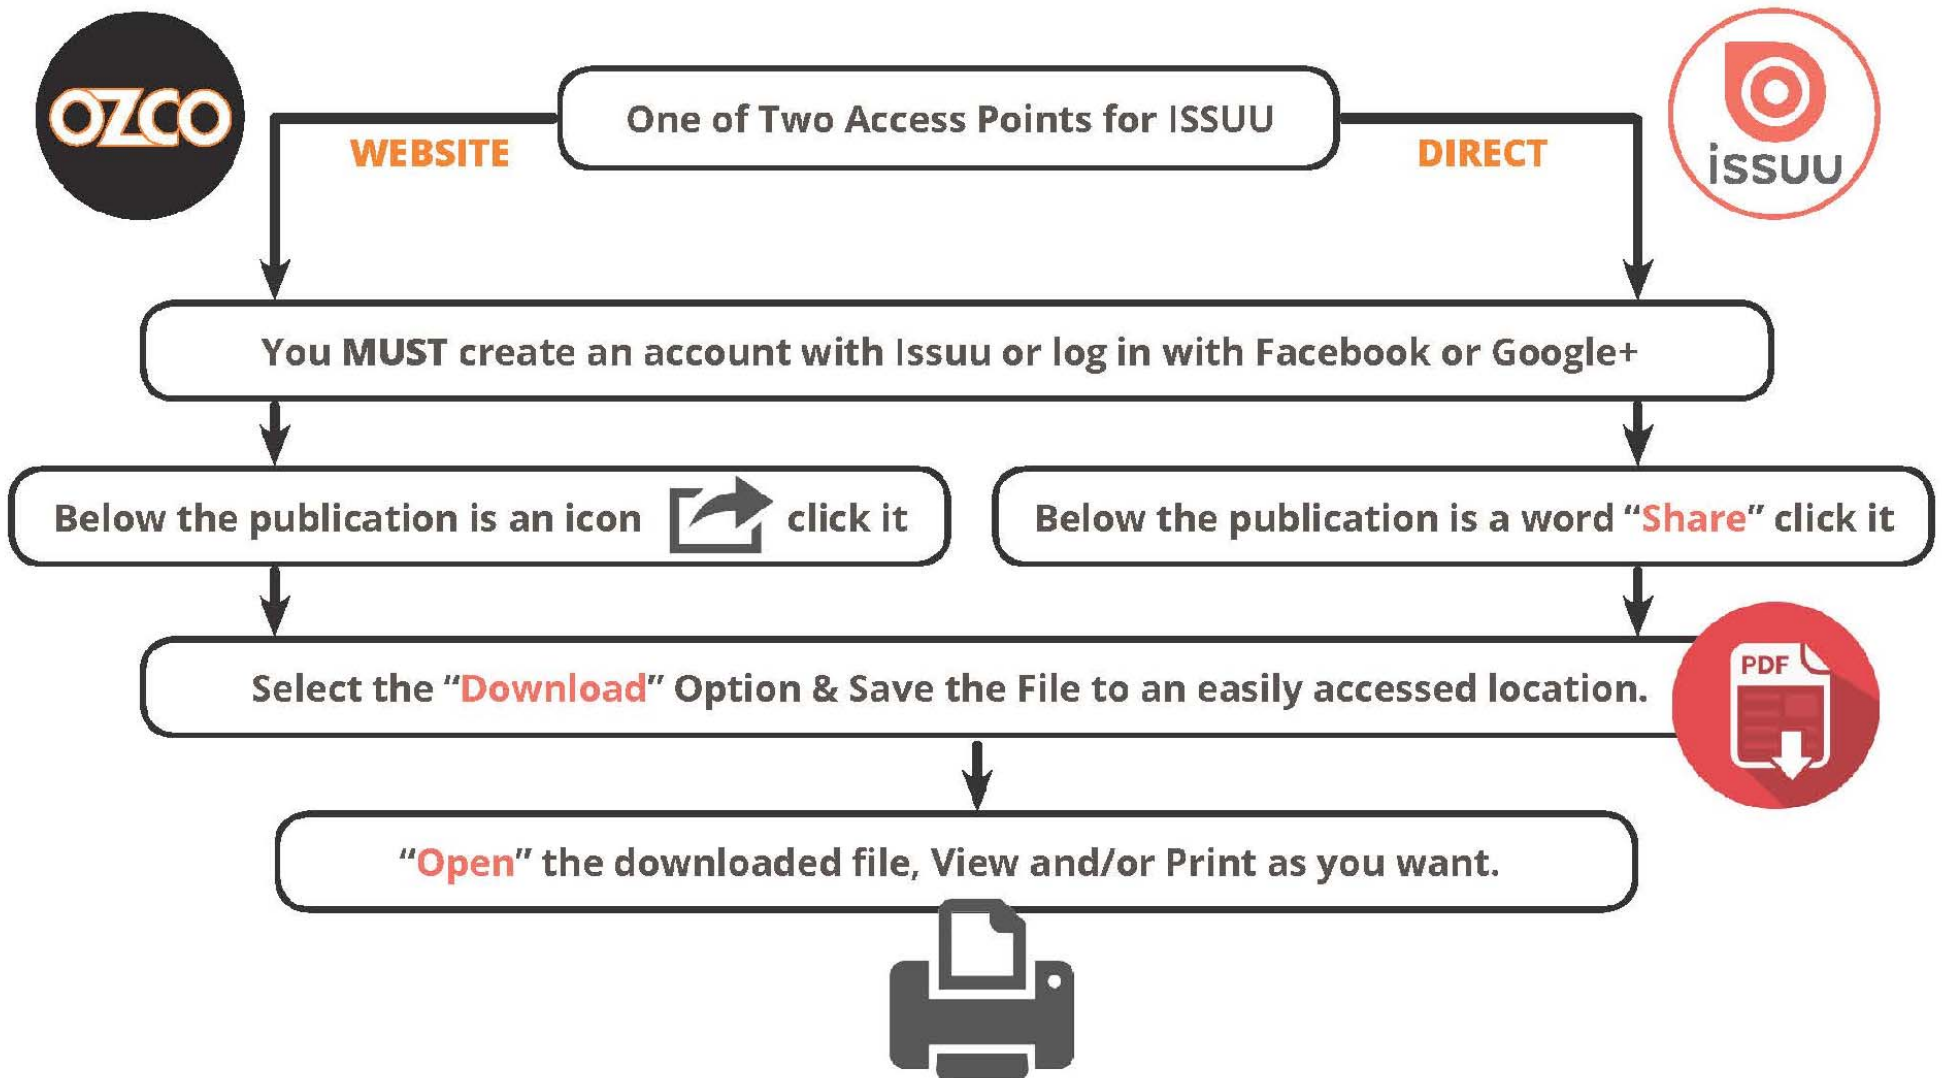

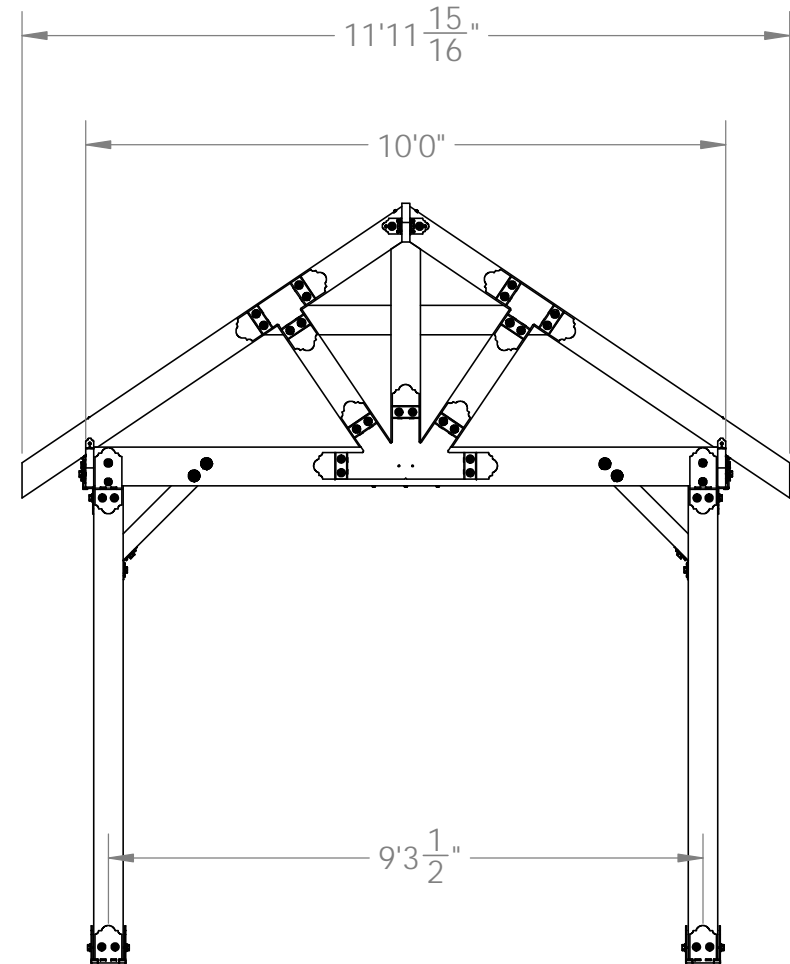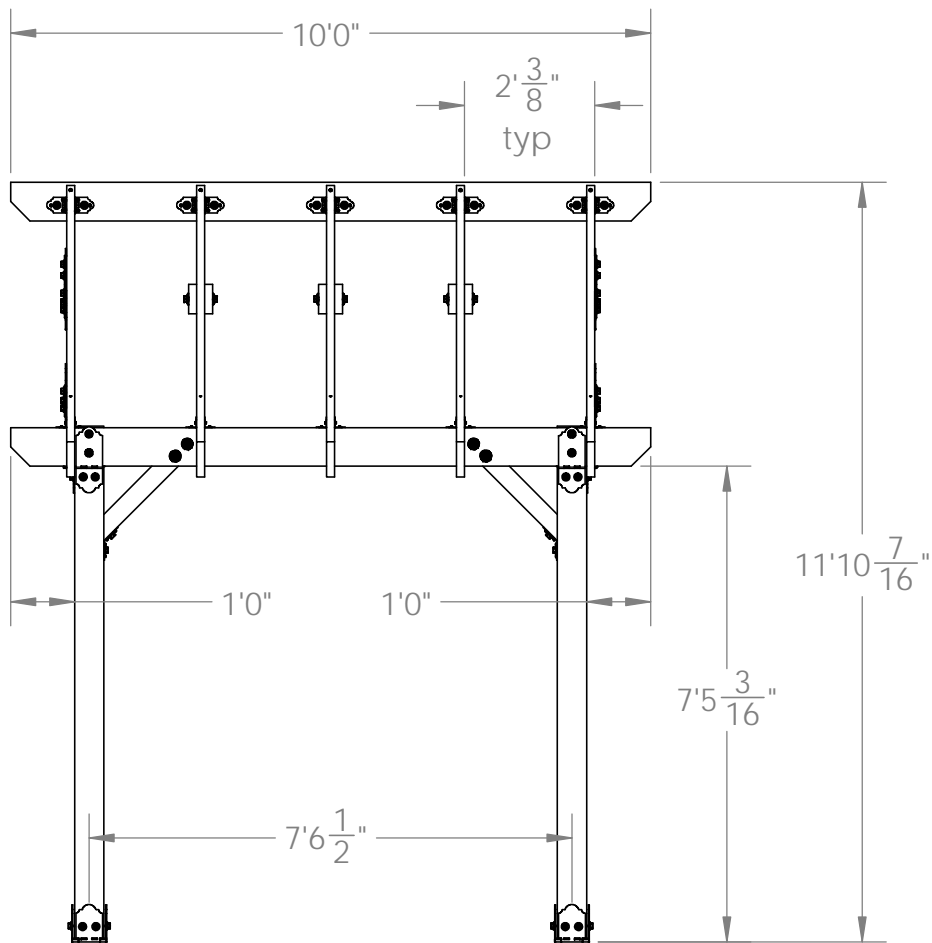


shown without roofing for clarity

OZCO Project #205 - 10x10 Pavilion w 6x6 Posts

Pavilion Overview

V2.00 - Installation Instructions, Specifications and Project Plans are effective 2/21/2017. This information is updated periodically and should not be relied upon after 2 years from 2/21/2017. Please visit OZCOBP.com to get current information.

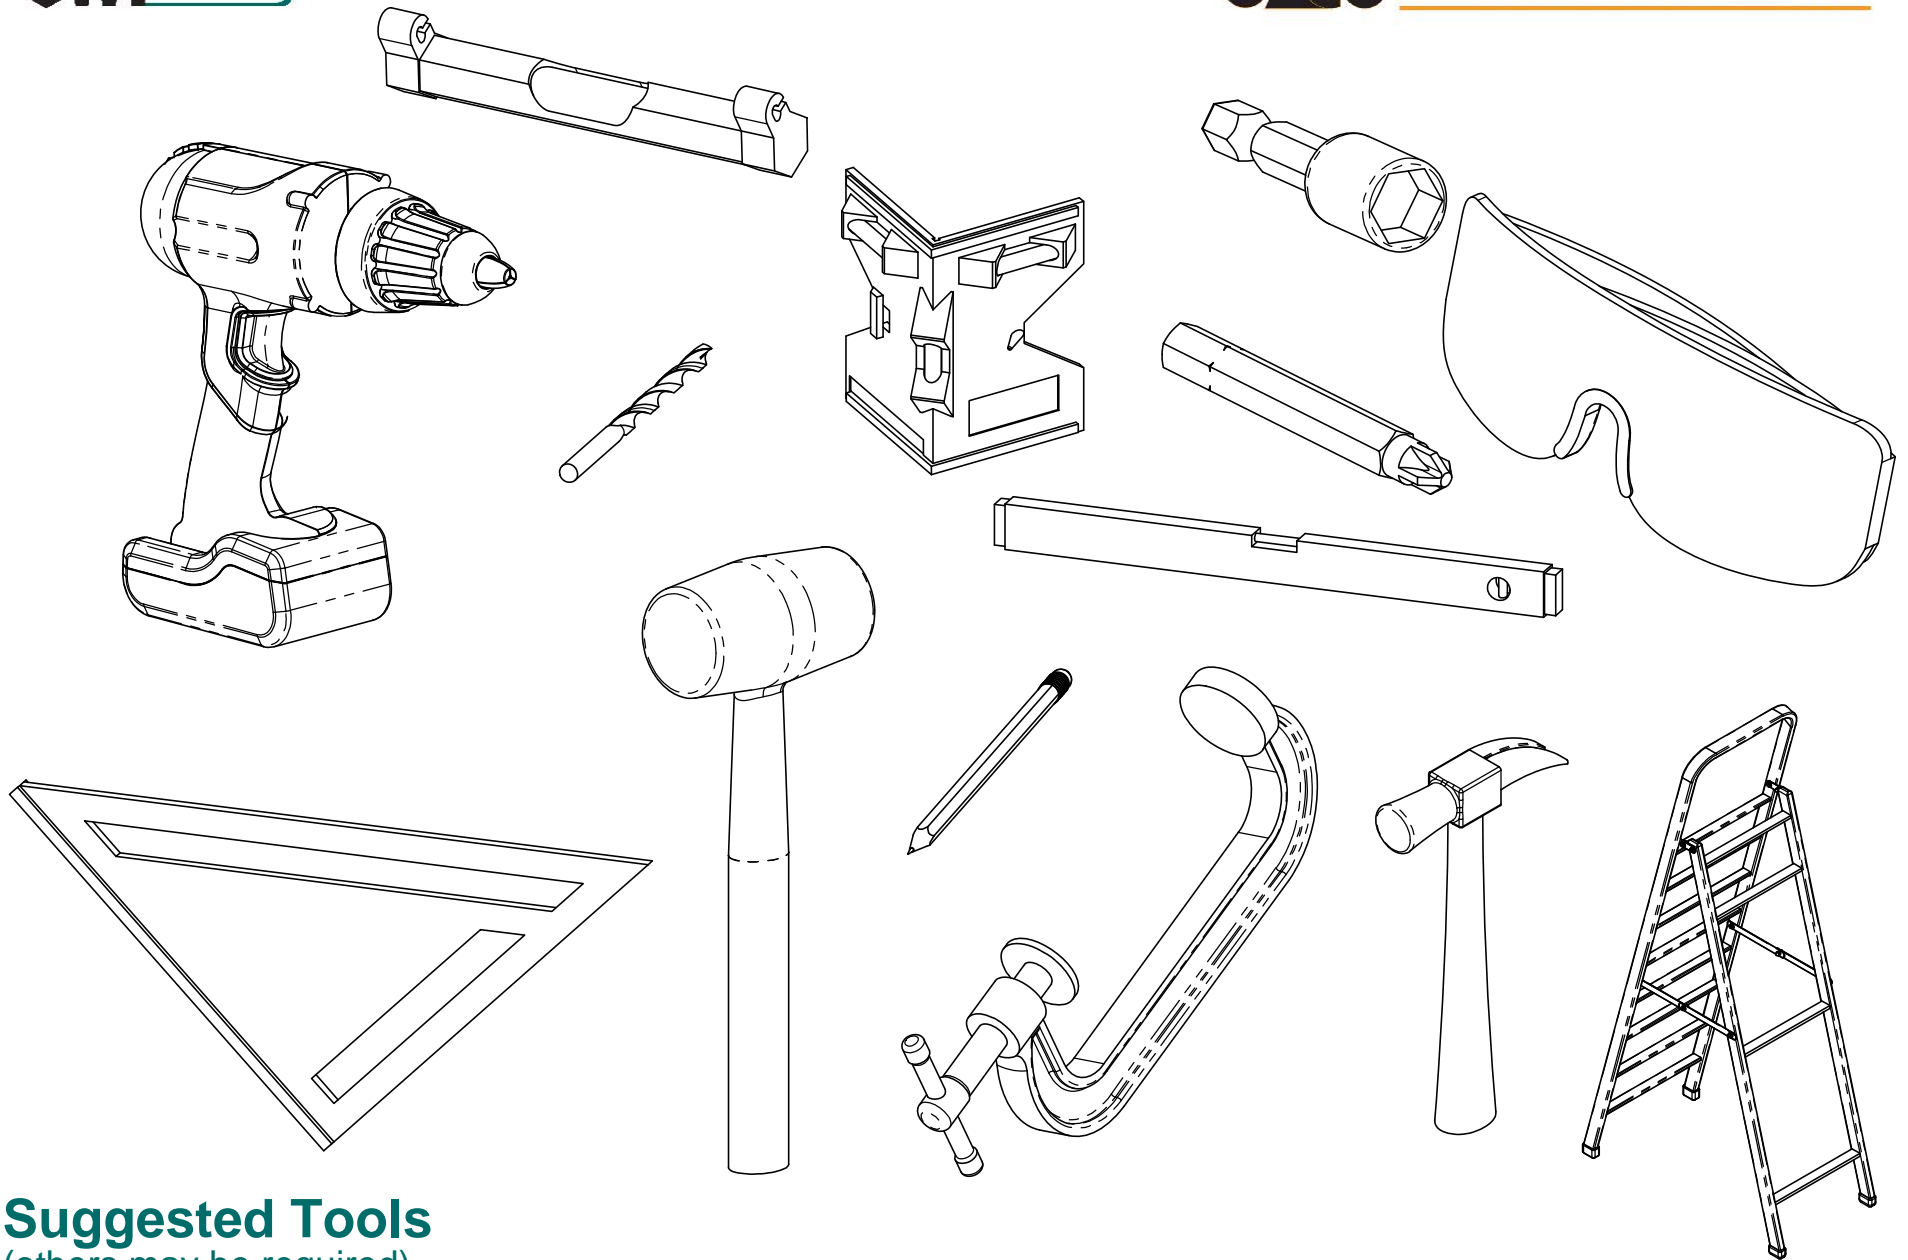


Suggested Tools

(others may be required)


QTY.	PART NUMBER	DESCRIPTION
4	56608	6x6 Post Base (6x6-PB-LS)
4	56636	Post to Beam Bolt Offset (P2B-BO-LS)
2	56619	Truss Base Fan 8:12
2	56612	"T" Tie Plate (TTP)
11	56611	Truss Accent (TA-LS)
2	56625	OWT Timber Screw 1-3/4"
3	56649	OWT Timber Bolt 4-6"
2	56617	2" Standard Rafter Clip (RC-LS-2)
2	56618	4" Standard Rafter Clip (RC-LS-4)
2	56668	4" Flush Inside 45 (FI45-LS-4)
16	56650	OWT Timber Bolt 6-8"
8	56680	2" Timber Bolt Heavy Duty Washer (OWT-TBW-2)
1	56647	OWT Timber Screw 10"
1	56627	OWT Timber Screw 3-3/4"
1	56629	OWT Timber Screw 7-1/2"
4	6x6x8L	6x6x8
2	4x4X12L	4x4x12
7	2x8X10L	2x8X10
1	2x8X16L	2x8X16
11	2x6X8L	2x6X8
4	2x6X12L	2x6X12

Material List



56612

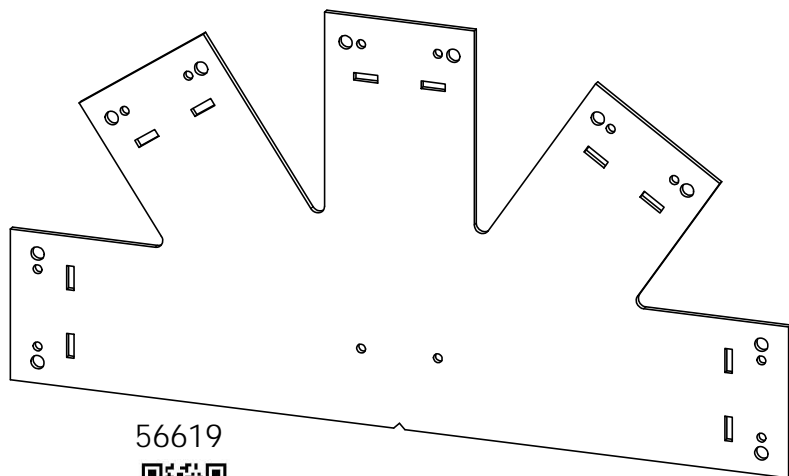

56619



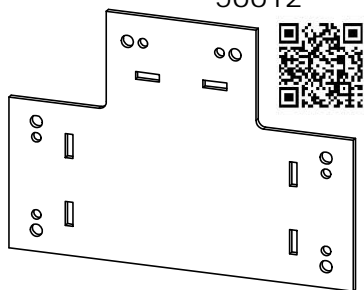


56611

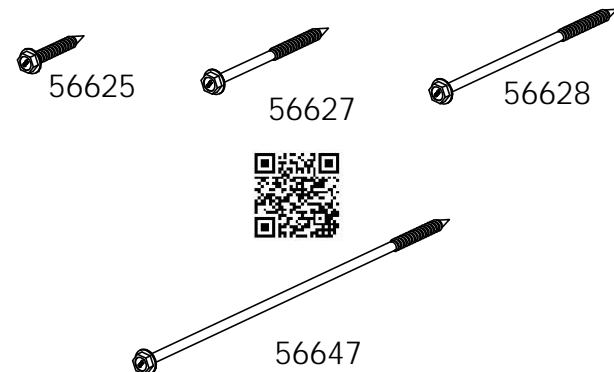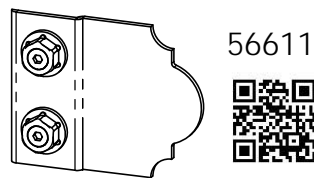


56650


56649

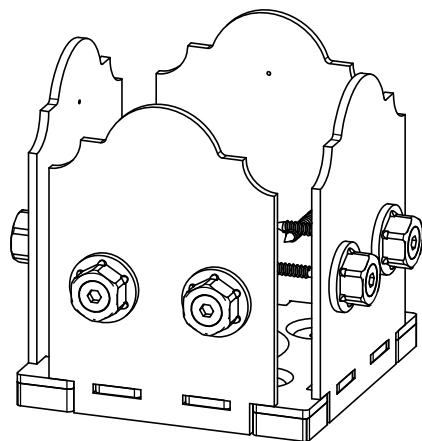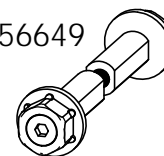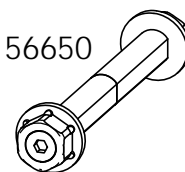

56608

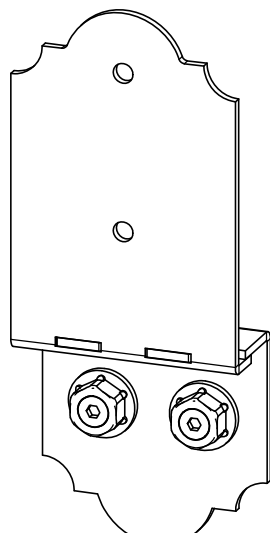


56636

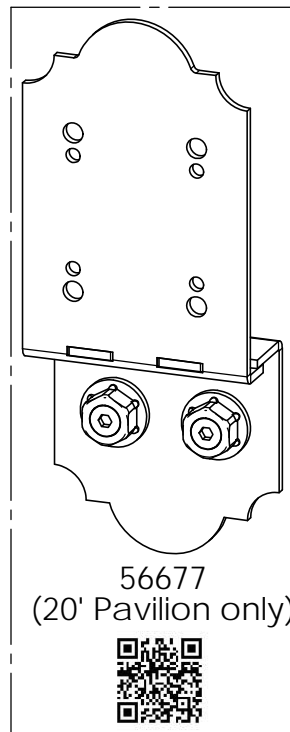


56677


(20' Pavilion only)

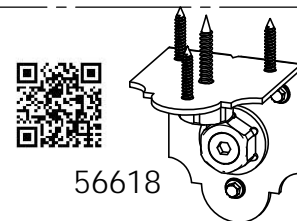


56618



56680



56617

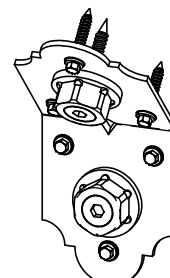

56668



OZCO

Scan QR barcode with smartphone for quick access to product installation instructions

Pavilion OZCO


V2.00 - Installation Instructions, Specifications and Project Plans are effective 2/21/2017. This information is updated periodically and should not be relied upon after 2 years from 2/21/2017. Please visit OZCOBP.com to get current information.

Laredo Sunset & Ironwood




Laredo Sunset
(566XX series)

2 great styles
Same functionality
choose your
connection lifestyle
both styles available for
most products

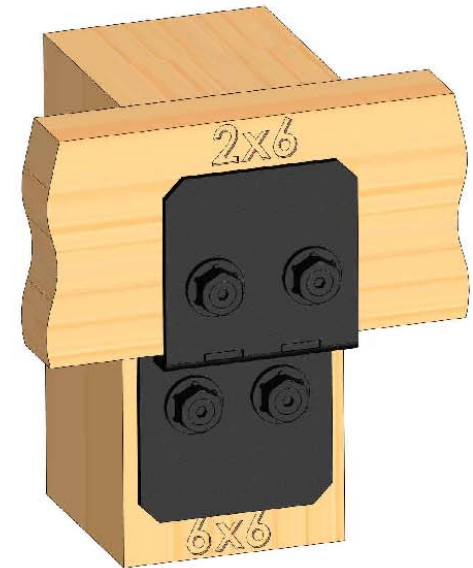


Ironwood
(517XX series)




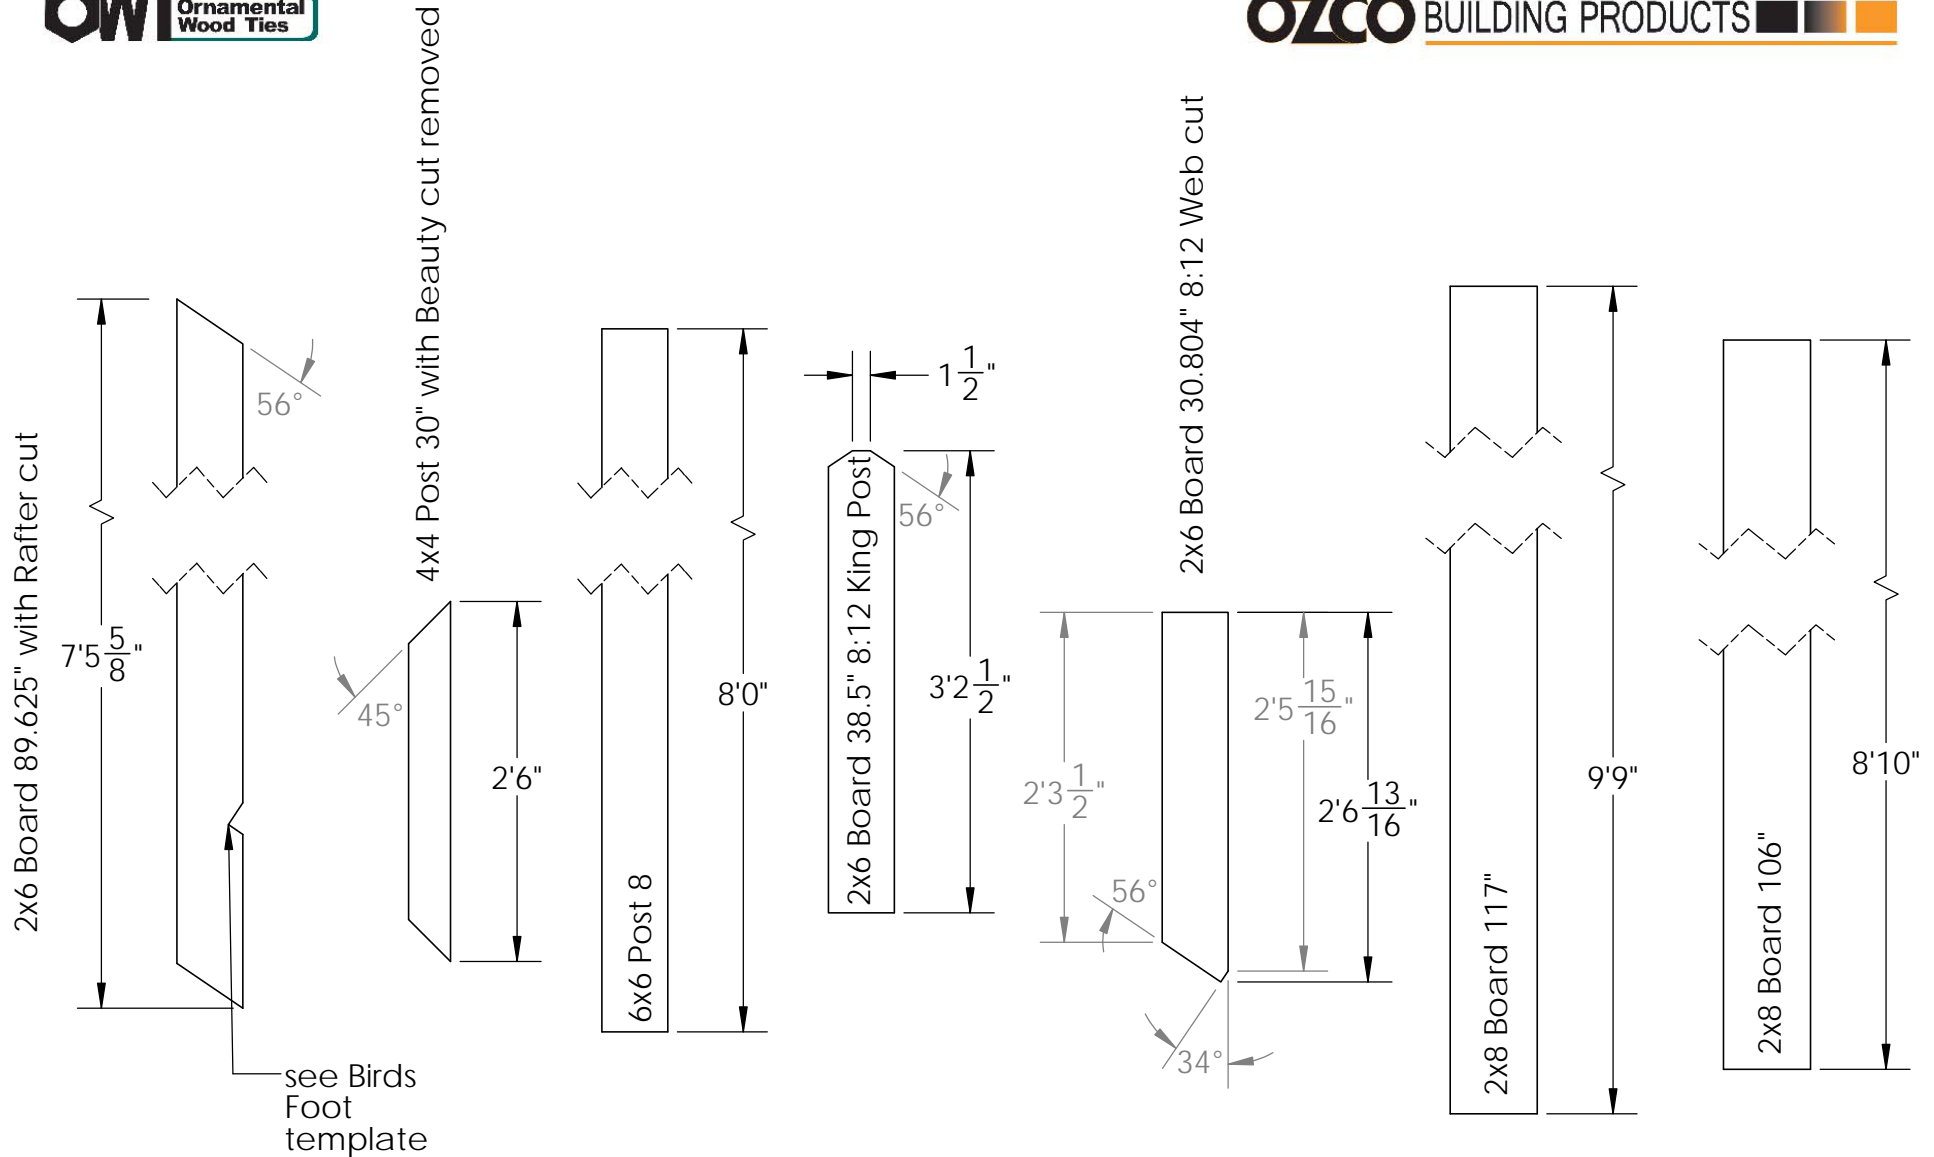


10x(length) Pavilion cut list: common to all 10' wide Pavilions

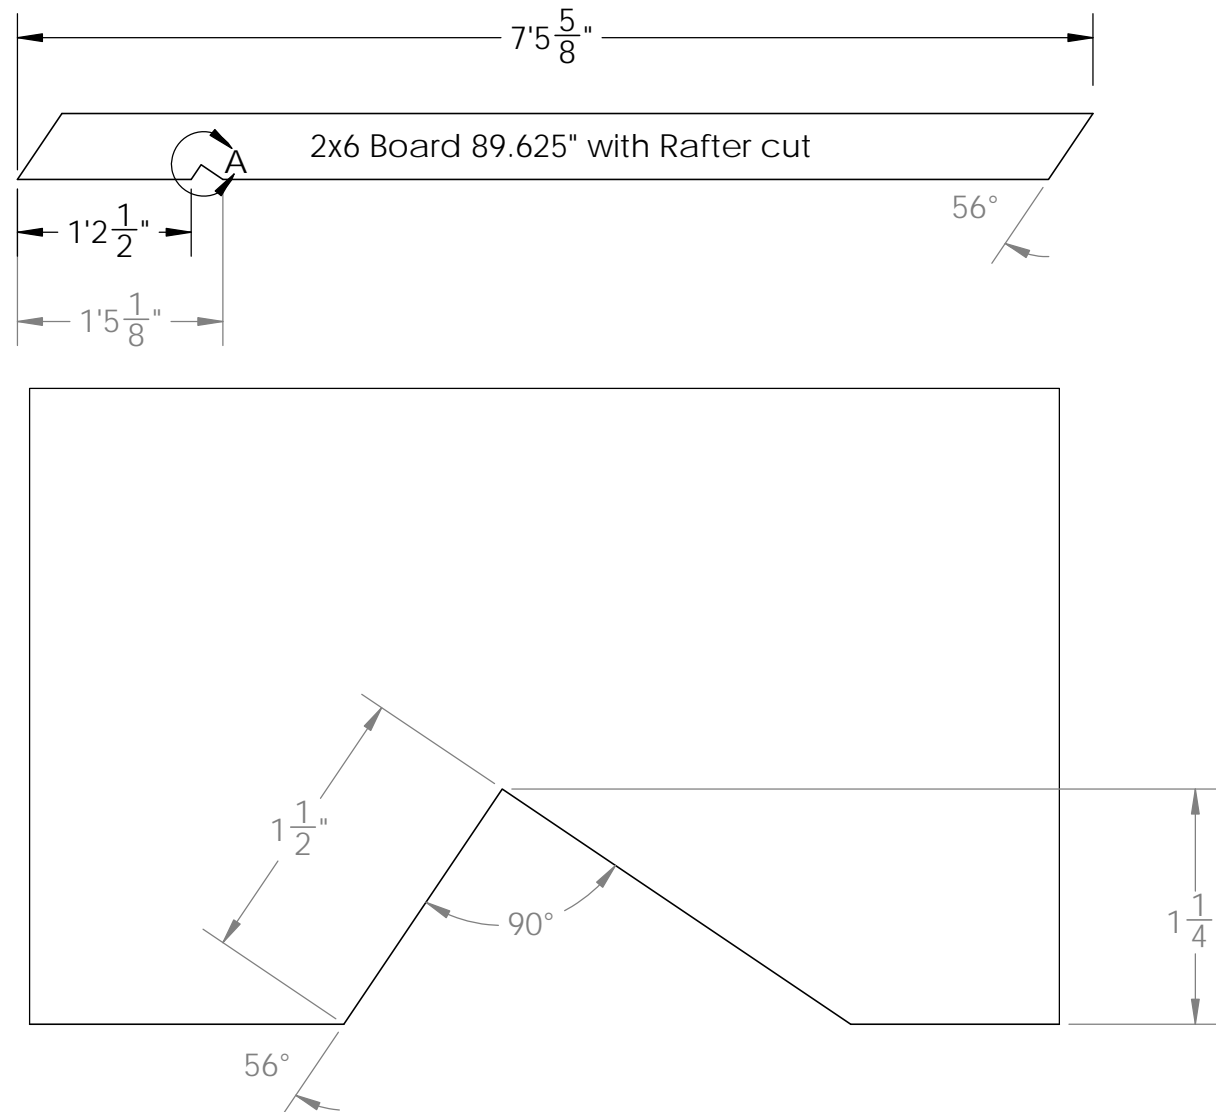


Birds Foot 1:1 template

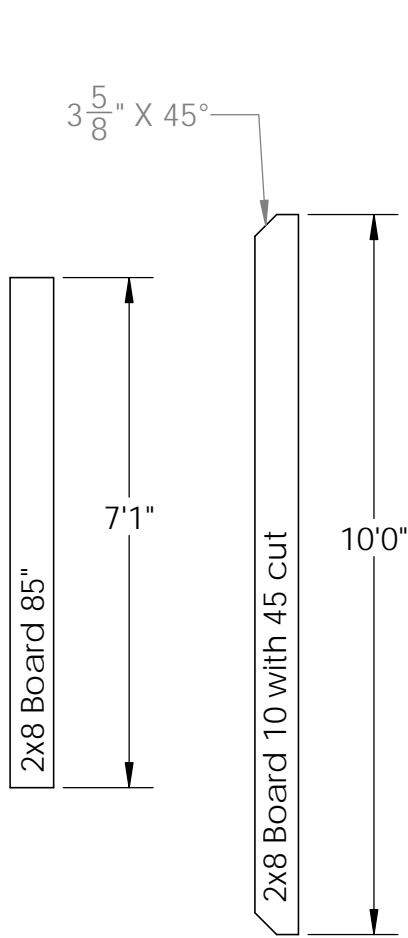


10x10

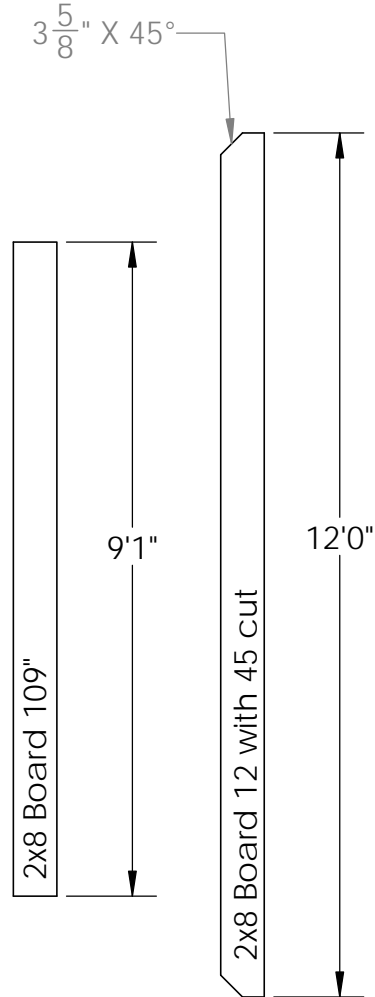

10x12

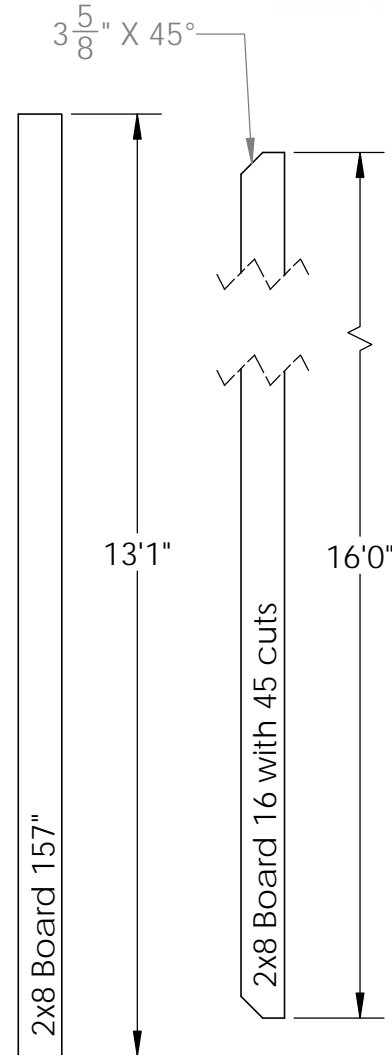


10x16

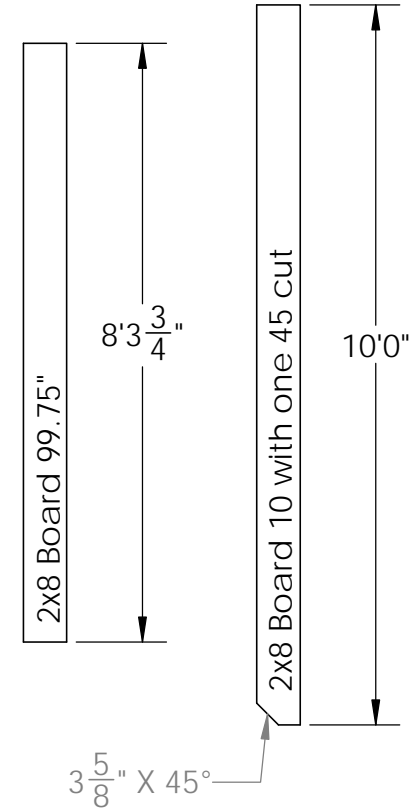

10x20

10x(length) Pavilion cut list: 2x8 length wise boards

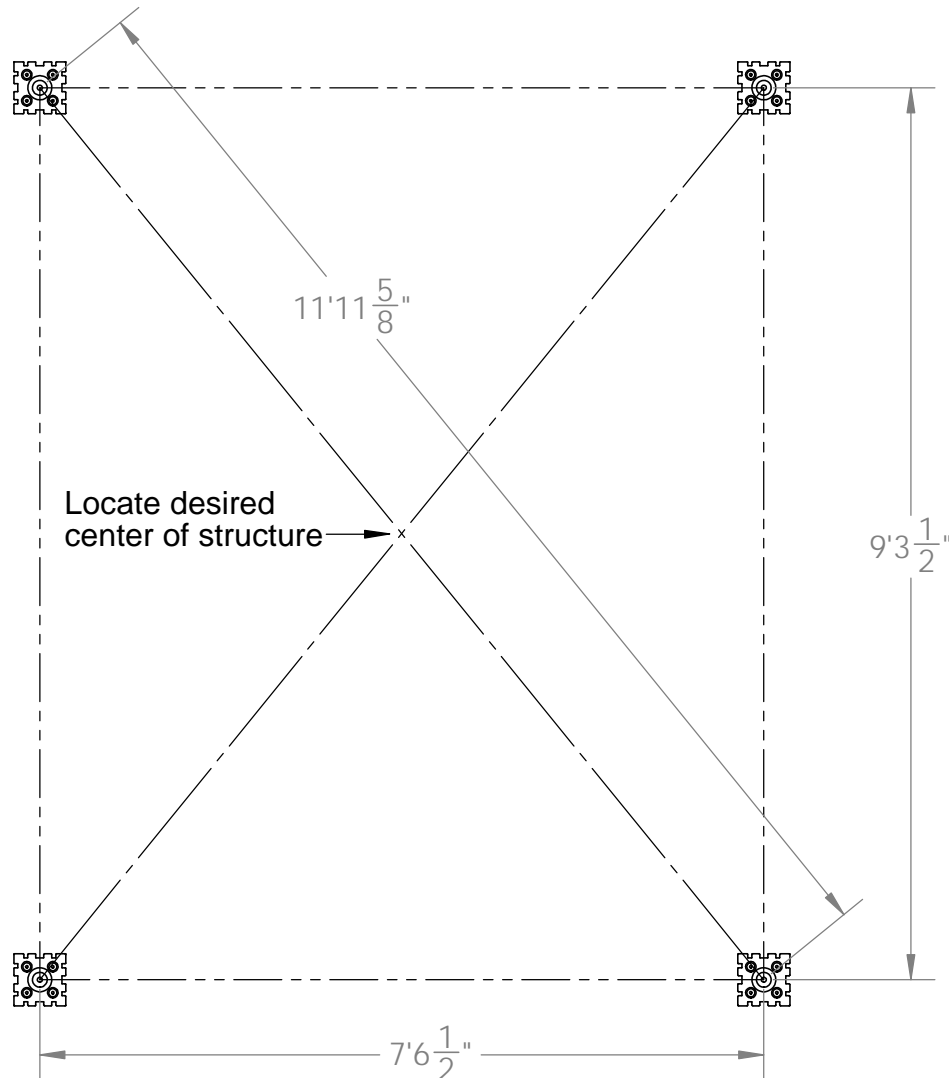


if site is not level,
see Ozco Site
Leveling
instruction



Site Plan - OZCO Project #205 - 10x10 Pavilion w 6x6 Posts

Pavilion Site Plan

V2.00 - Installation Instructions, Specifications and Project Plans are effective 2/21/2017 . This information is updated periodically and should not be relied upon after 2 years from 2/21/2017 . Please visit OZCOBP.com to get current information.

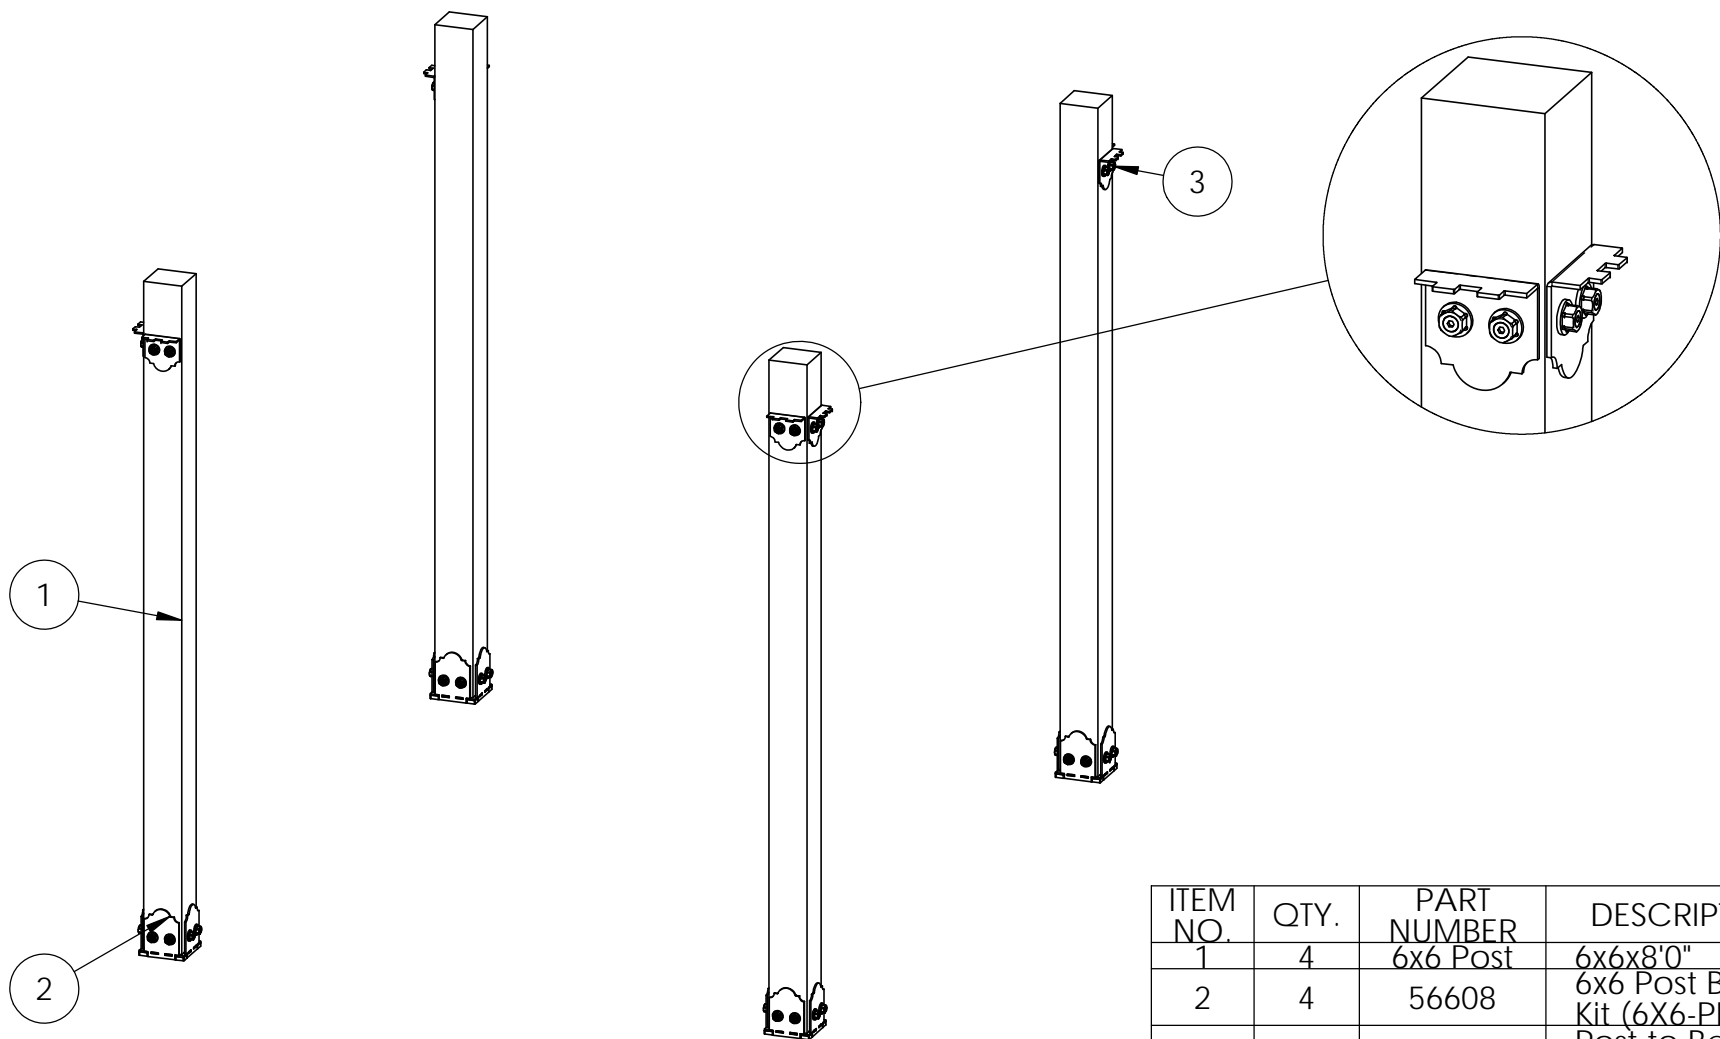


ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	4	6x6 Post	6x6x8'0"
2	4	56608	6x6 Post Base Kit (6X6-PB-LS)
3	4	56636	Post to Beam Bolt Offset (P2B-BO-LS)

OZCO Project #205 - 10x10 Pavilion w 6x6 Posts ledge

Pavilion Base

V2.00 - Installation Instructions, Specifications and Project Plans are effective 2/21/2017 . This information is updated periodically and should not be relied upon after 2 years from 2/21/2017 . Please visit OZCOBP.com to get current information.

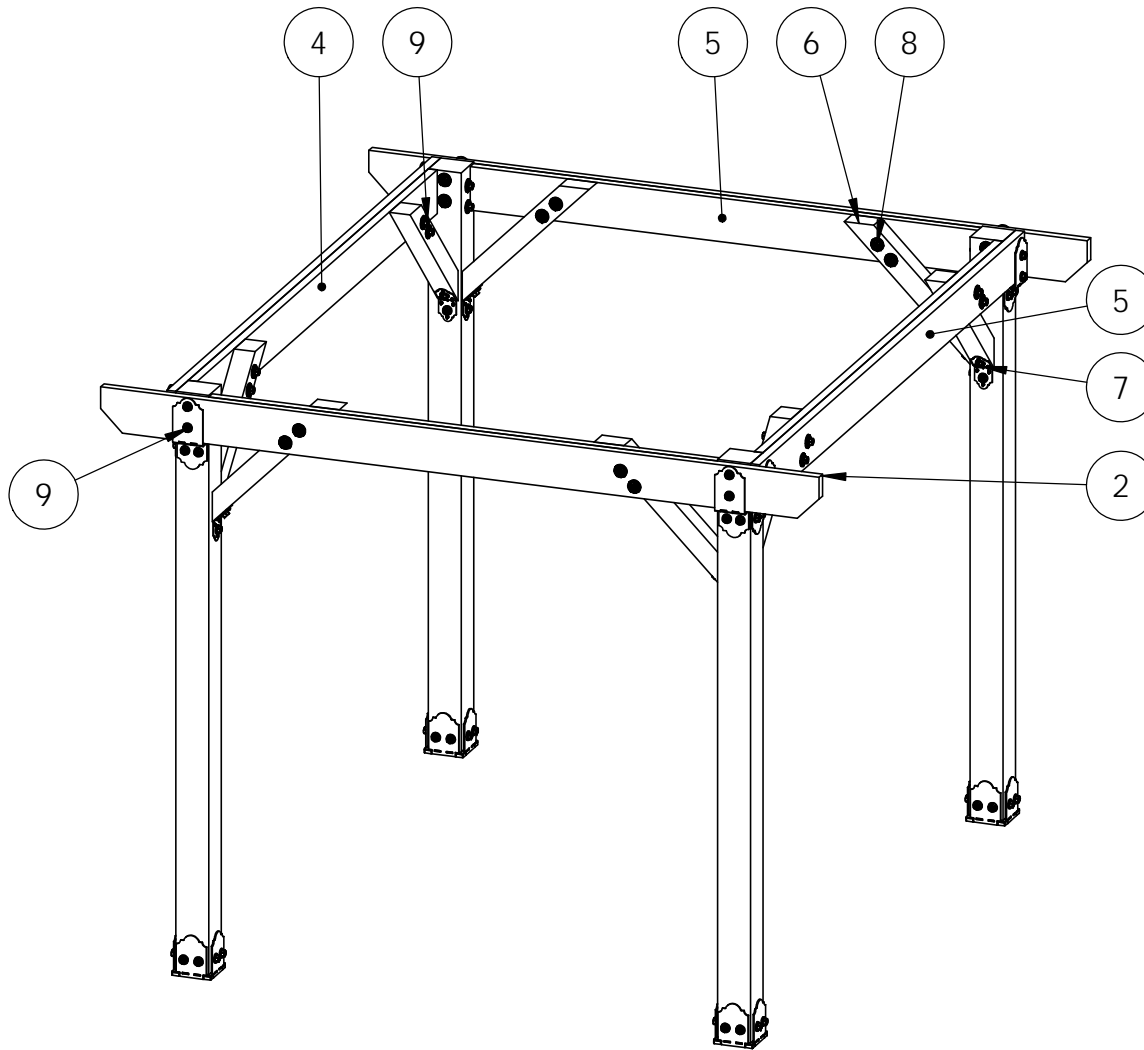


ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	Pavilion Base	OZCO Project #205 - 10x10 Pavilion w 6x6 Posts
2	2	2x8 Board	2x8x10'0"
5	2	2x8 Board	2x8x9'9"
4	2	2x8 Board	2x8x8'10"
5	2	2x8 Board	2x8x7'1"
6	8	4x4 Post	4x4x2'6"
7	2	56668	4" Flush Inside 45 (FI45-LS-4)
9	8	56650	OWT Timber Bolt 6-8"
	8	56680	2" Timber Bolt Heavy Duty Washer (OWT-TBW-2)
9	8	56650	OWT Timber Bolt 6-8"
	4	56680	2" Timber Bolt Heavy Duty Washer (OWT-TBW-2)

OZCO Project #205 - 10x10 Pavilion w 6x6 Posts


Pavilion Beam & Support

V2.00 - Installation Instructions, Specifications and Project Plans are effective 2/21/2017. This information is updated periodically and should not be relied upon after 2 years from 2/21/2017. Please visit OZCOBP.com to get current information.

Building your Canopy... Simple 3 step procedure common to all size Pavilions

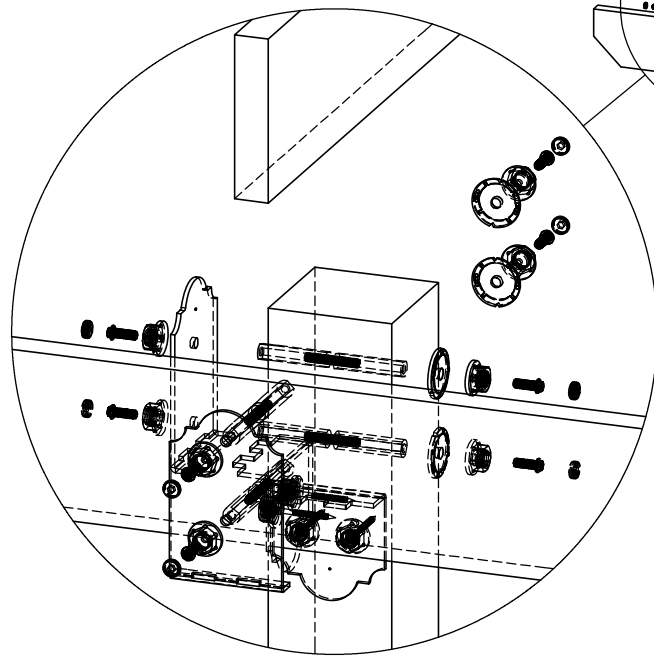

use this procedure for all
size Pavilions (10x10 shown).
same construction steps
and techniques apply

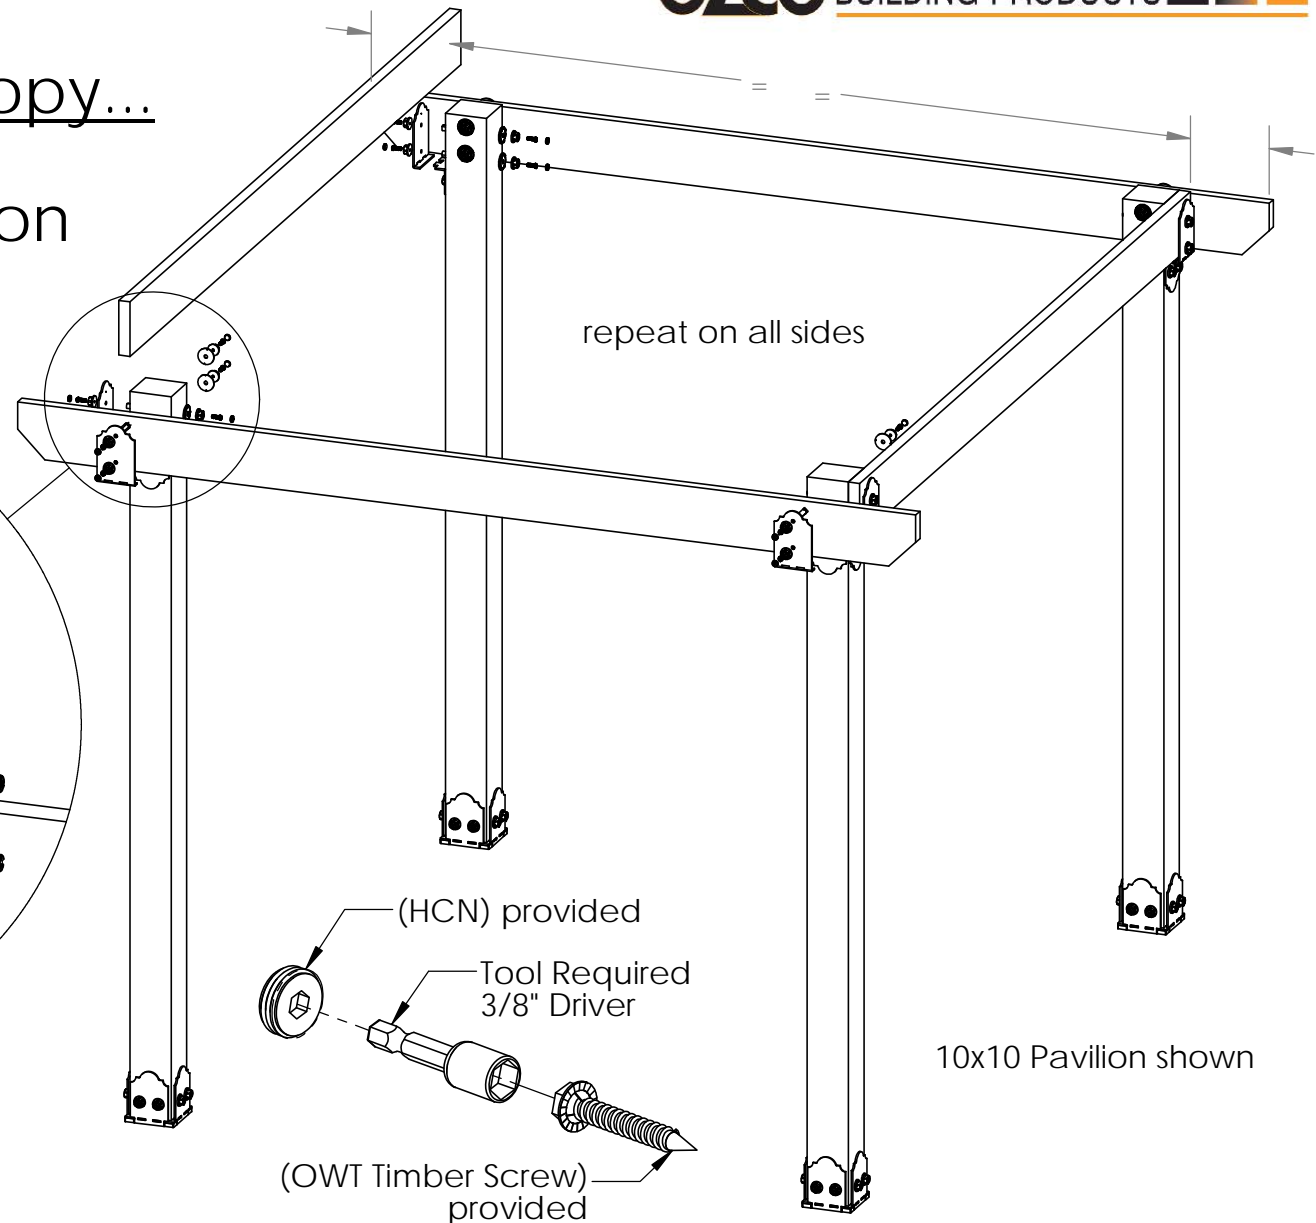


10x10 Pavilion shown

step 1 Outer Beams

Pavilion Beam & Support


Secure with nails or screws
Repeat on all sides

for additional beam rigidity
apply polyurethane adhesive
between boards

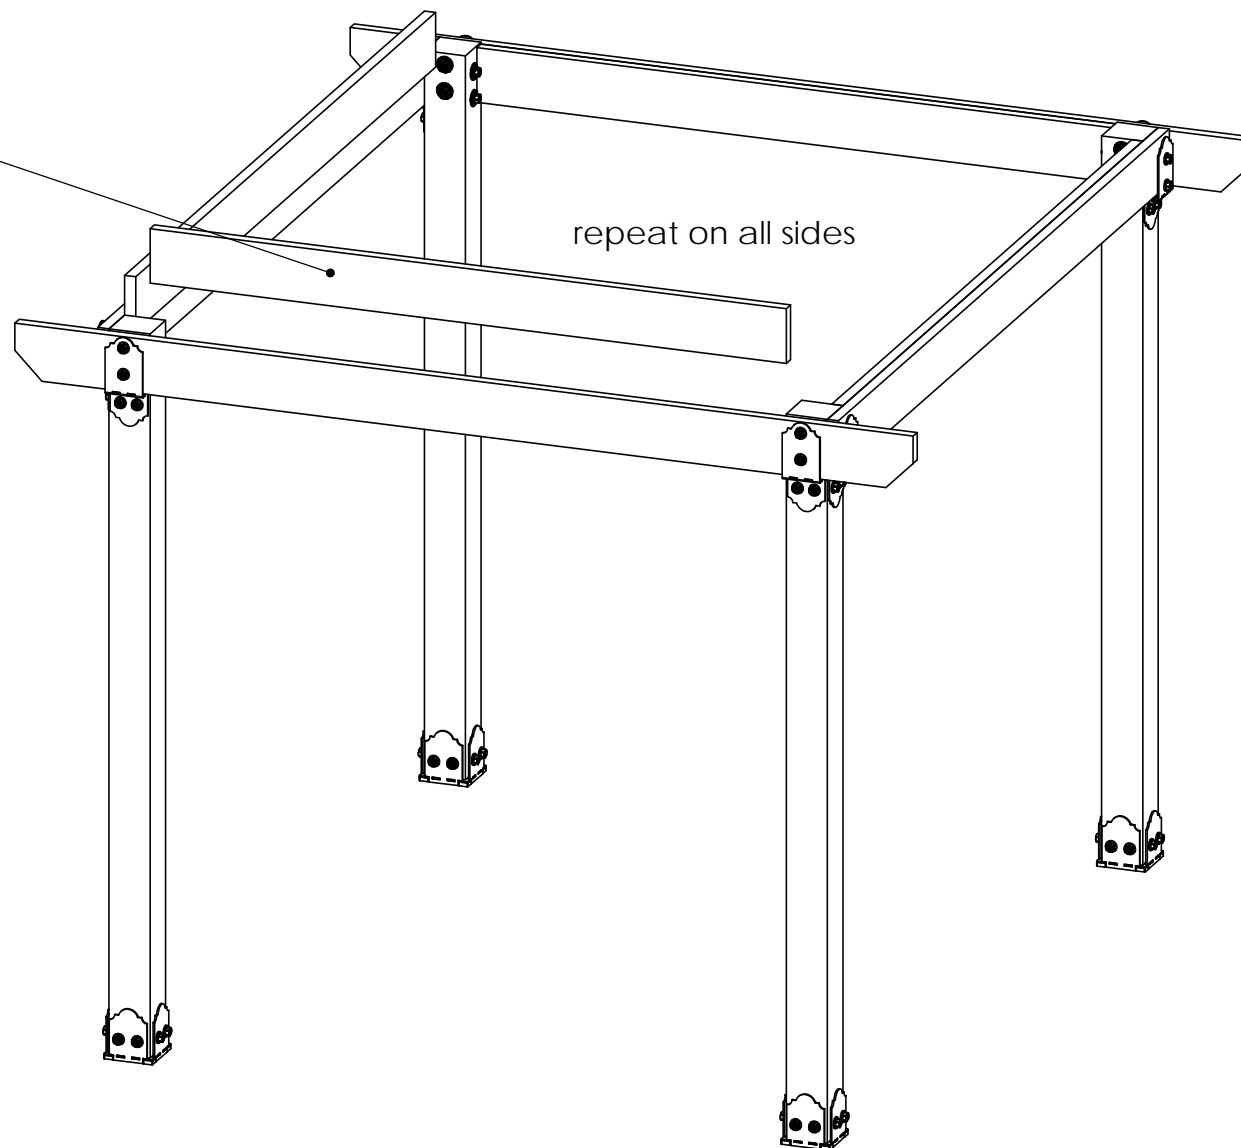


step 2 Inside Beams

Pavilion Beam & Support

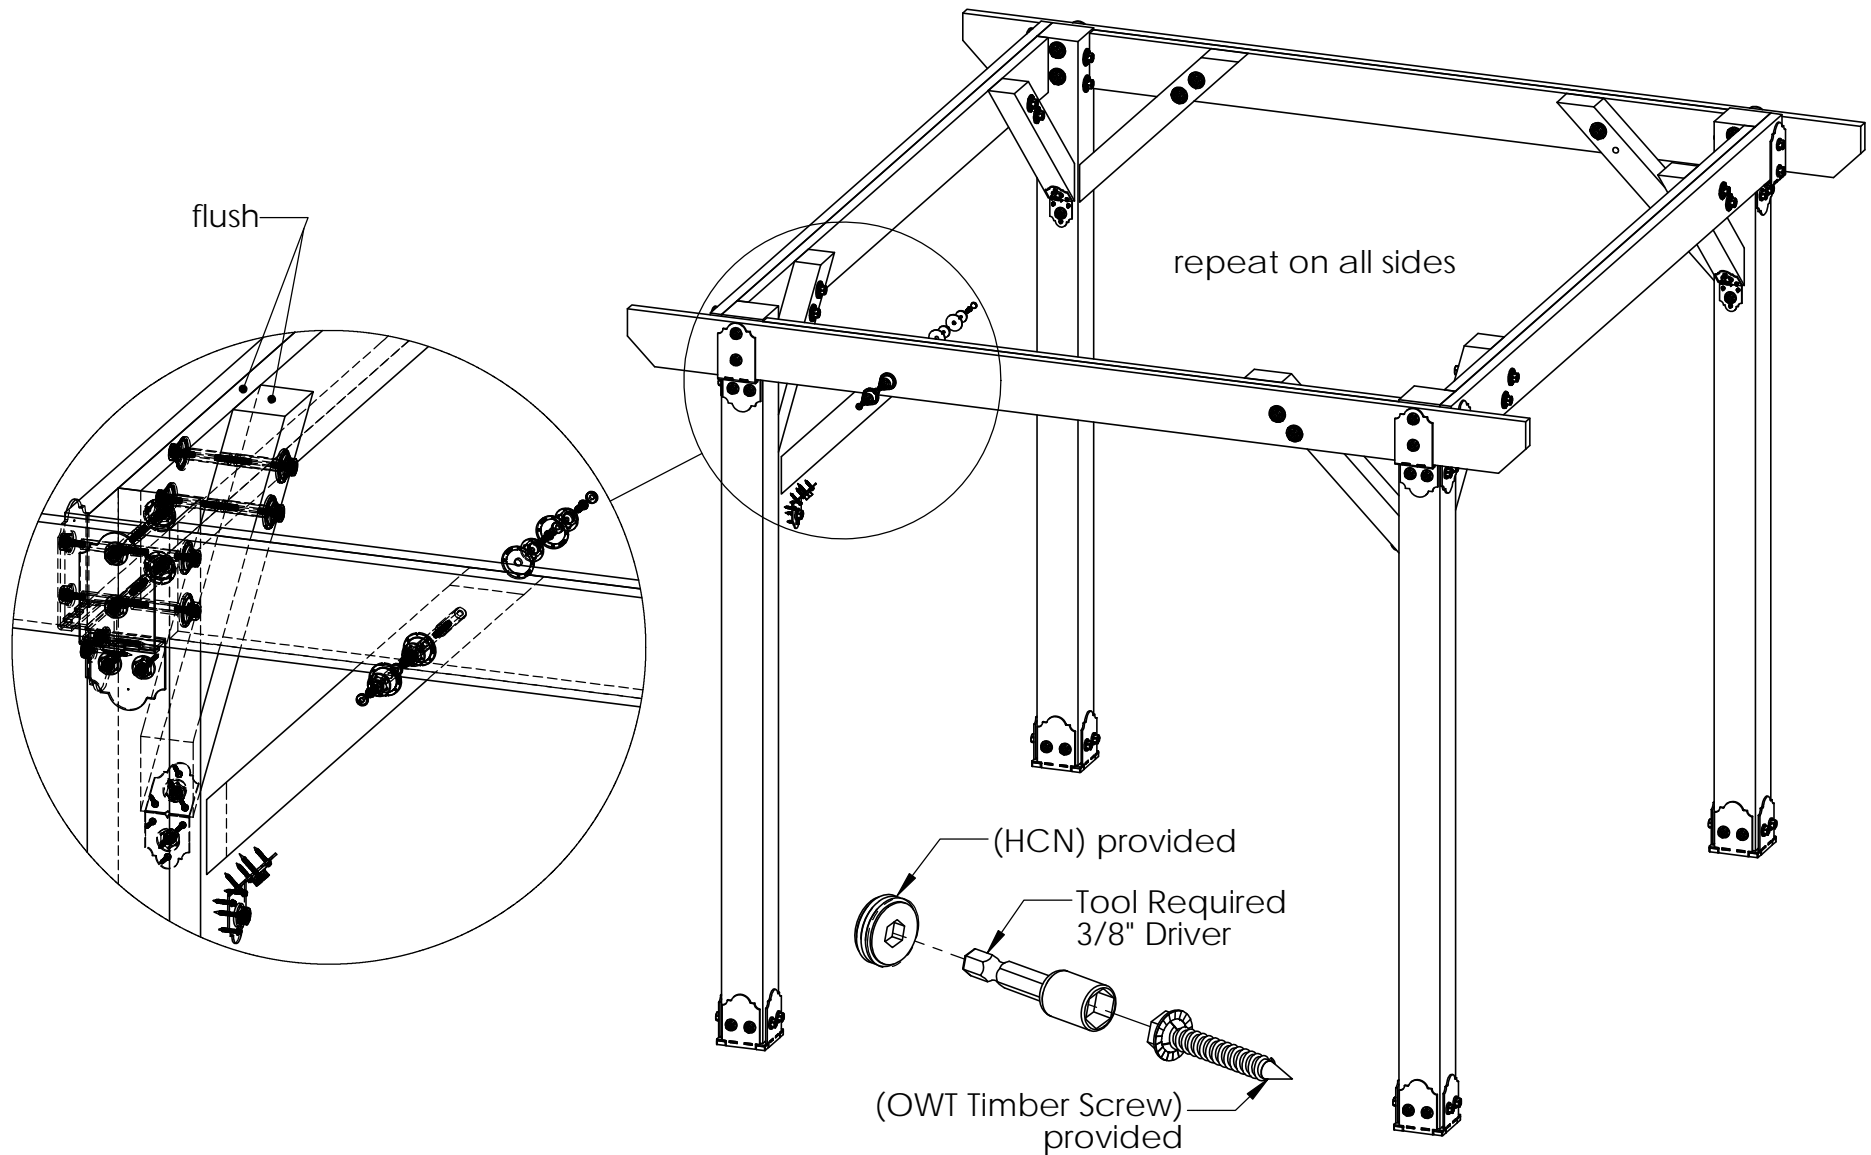

step 3 Knee Braces

Pavilion Beam & Support

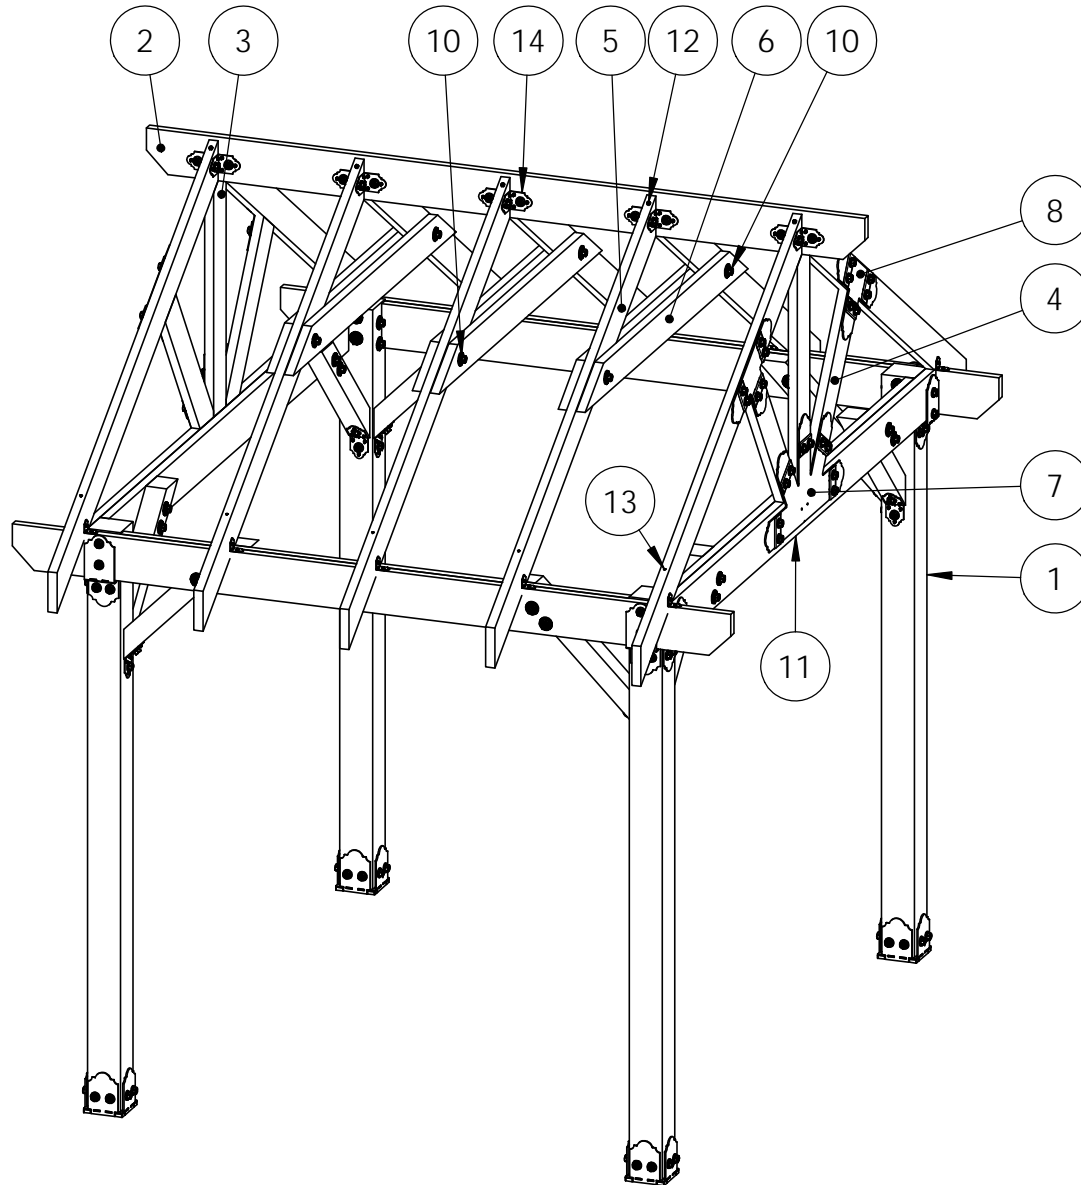

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	Pavilion Beam & Support	OZCO Project #205 - 10x10 Pavilion w 6x6 Posts
2	1	2x8 Board	2x8x10'0"
3	2	2x6 Board	2x6x3'2 1/2"
4	4	2x6 Board	2x6x2'6 13/16"
5	10	2x6 Board	2x6x7'5 5/8"
6	6	2x6 Board	2x6x6'0"
7	2	56619	Truss Base Fan 8:12
	5	56611	Truss Accent (TA-LS)
	1	56625	OWT Timber Screw 1-3/4"
8	2	56612	"T" Tie Plate (TTP)
	6	56611	Truss Accent (TA-LS)
	1	56625	OWT Timber Screw 1-3/4"
9	2	56617	2" Standard Rafter Clip (RC-LS-2)
10	3	56649	OWT Timber Bolt 4-6"
	3	56680	2" Timber Bolt Heavy Duty Washer (OWT-TBW-2)
11	1	56647	OWT Timber Screw 10"
12	1	56627	OWT Timber Screw 3-3/4"
13	1	56629	OWT Timber Screw 7-1/2"
14	2	56618	4" Standard Rafter Clips (RC-LS-4)


OZCO Project #205 - 10x10 Pavilion w 6x6 Posts

Pavilion Truss 10

V2.00 - Installation Instructions, Specifications and Project Plans are effective 2/21/2017 . This information is updated periodically and should not be relied upon after 2 years from 2/21/2017 . Please visit OZCOBP.com to get current information.

Building your Truss... Simple 7 step procedure common to all size Pavilions

use this procedure for all
size Pavilions (10x10 shown).
same construction steps
and techniques apply

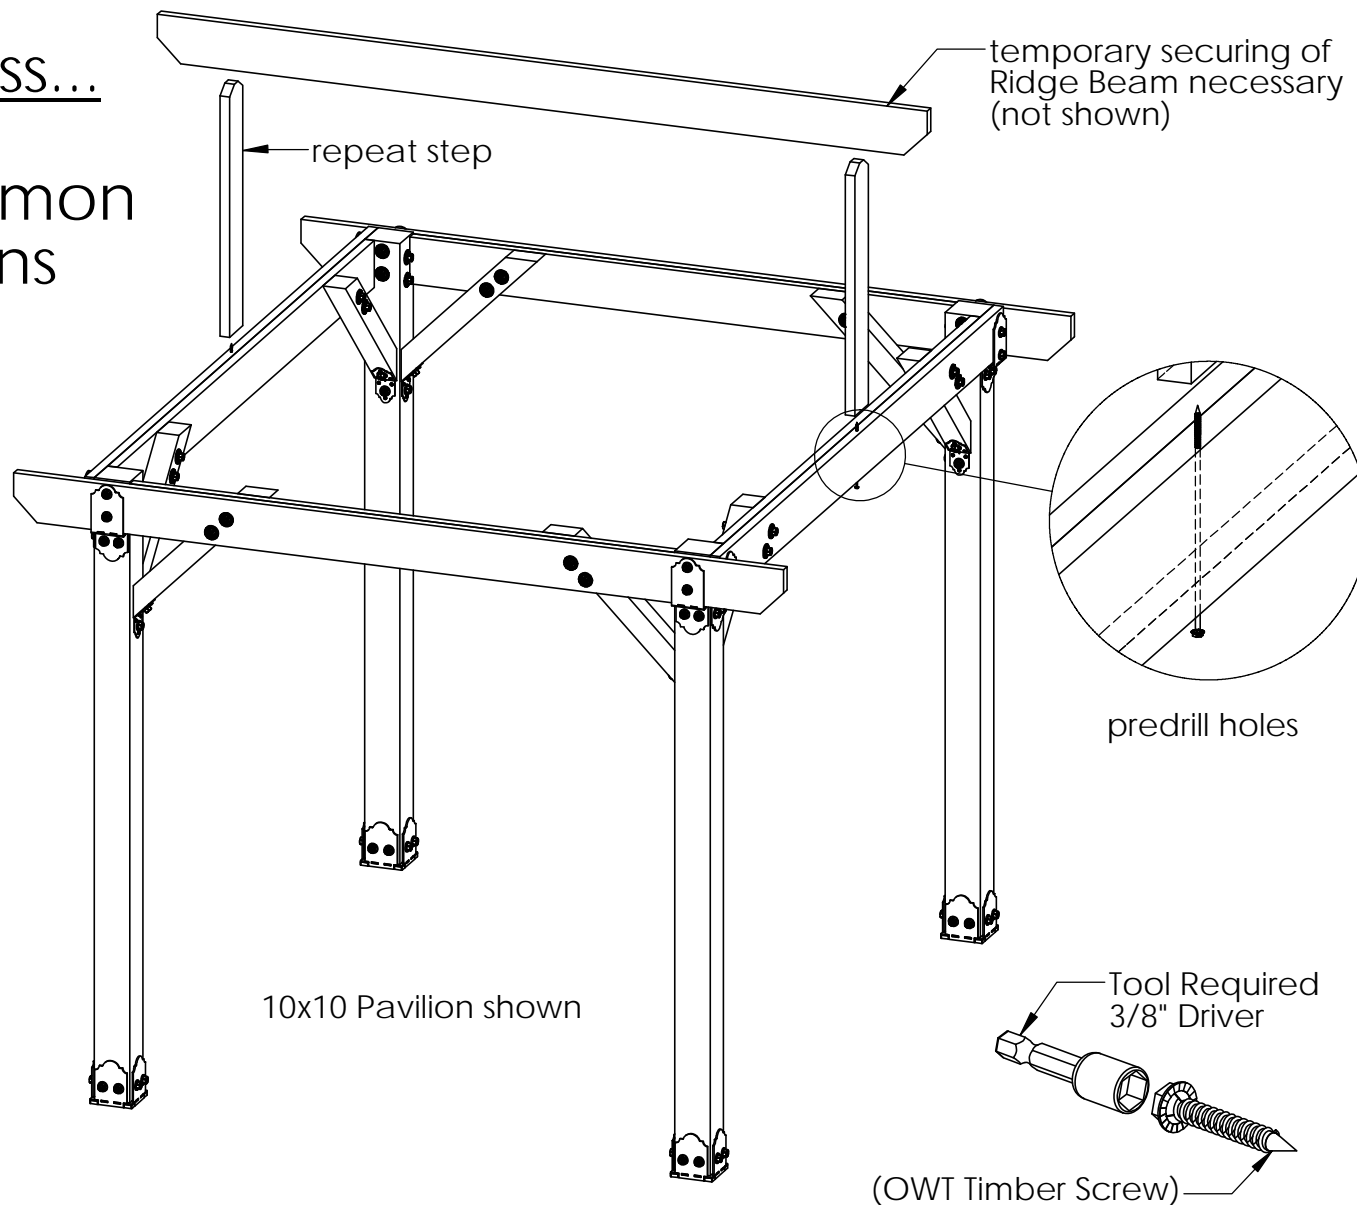


step 1


Pavilion Truss 10

repeat step


tip: rafter screw heads might interfere with roofing. secure flush/below rafter or modify roofing material as needed.

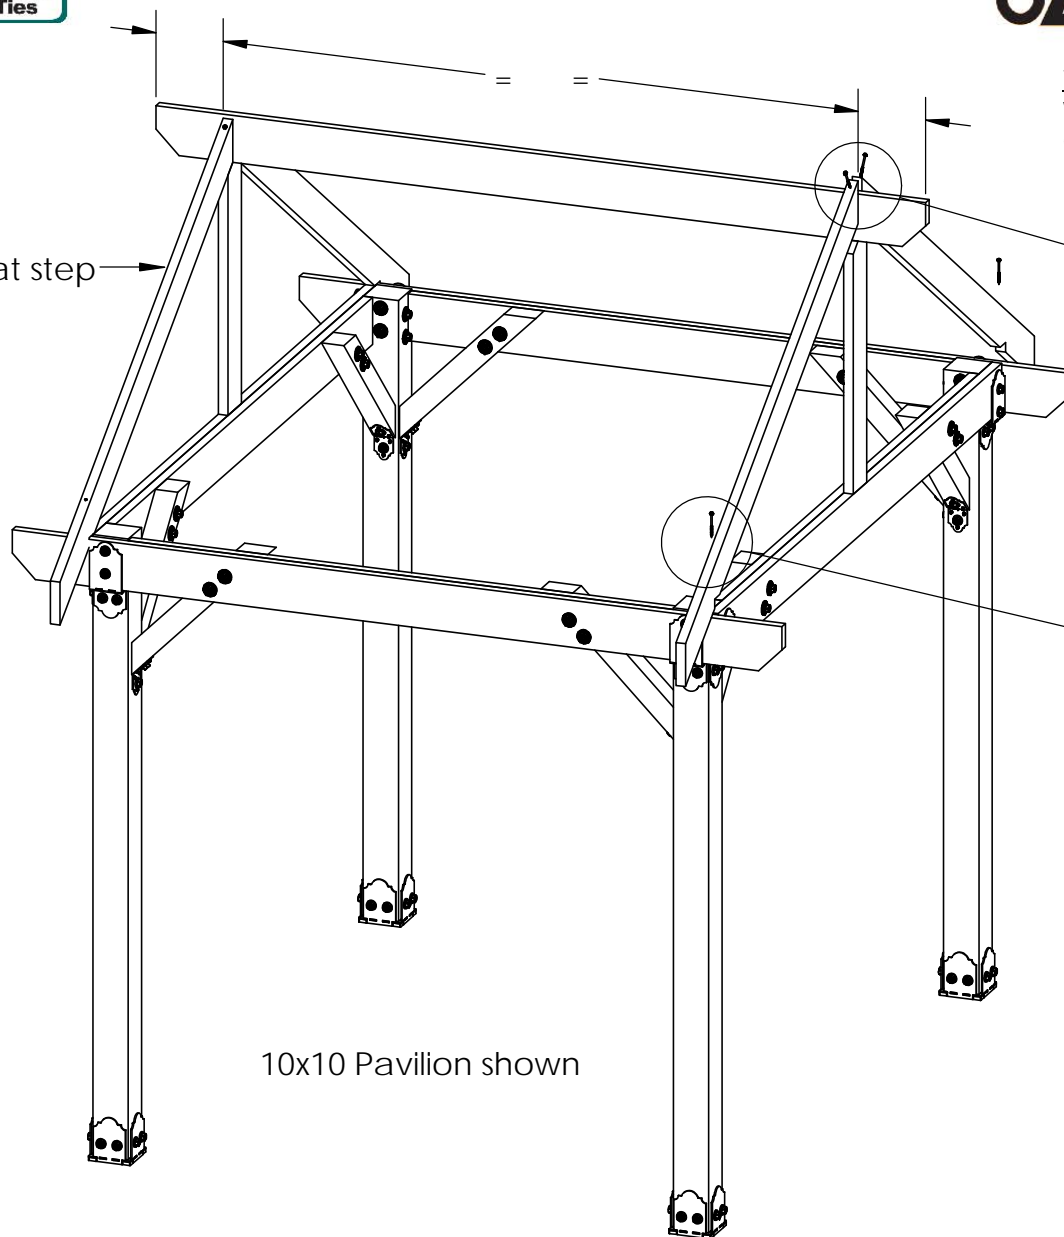


10x10 Pavilion shown

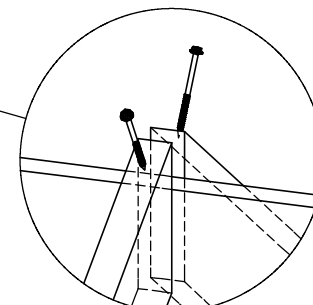

predrill holes

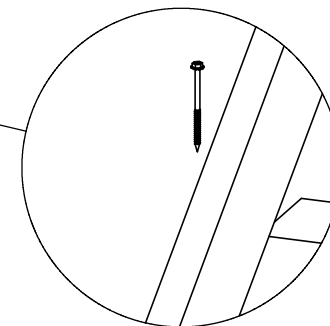

Tool Required
3/8" Driver

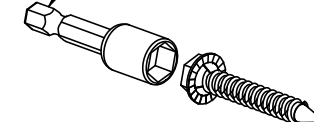


(OWT Timber Screw)


step 2

Pavilion Truss 10

repeat step 2
see overview page
for spacing and
quantity of Trusses

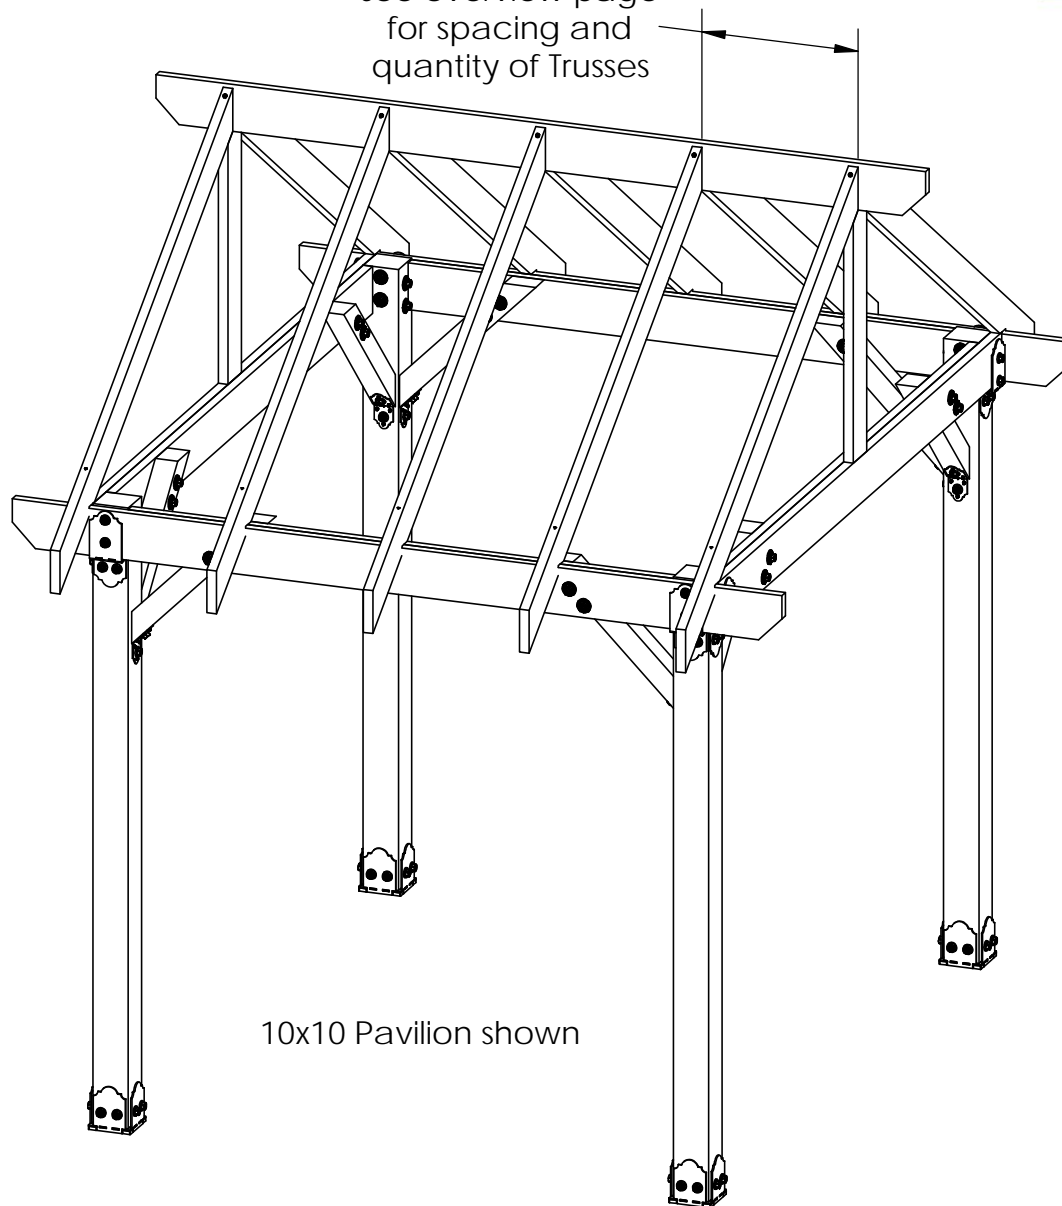


10x10 Pavilion shown

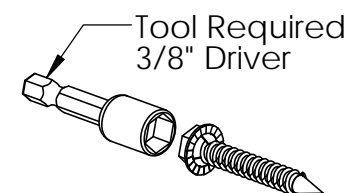

(OWT Timber Screw)


step 3

Pavilion Truss 10

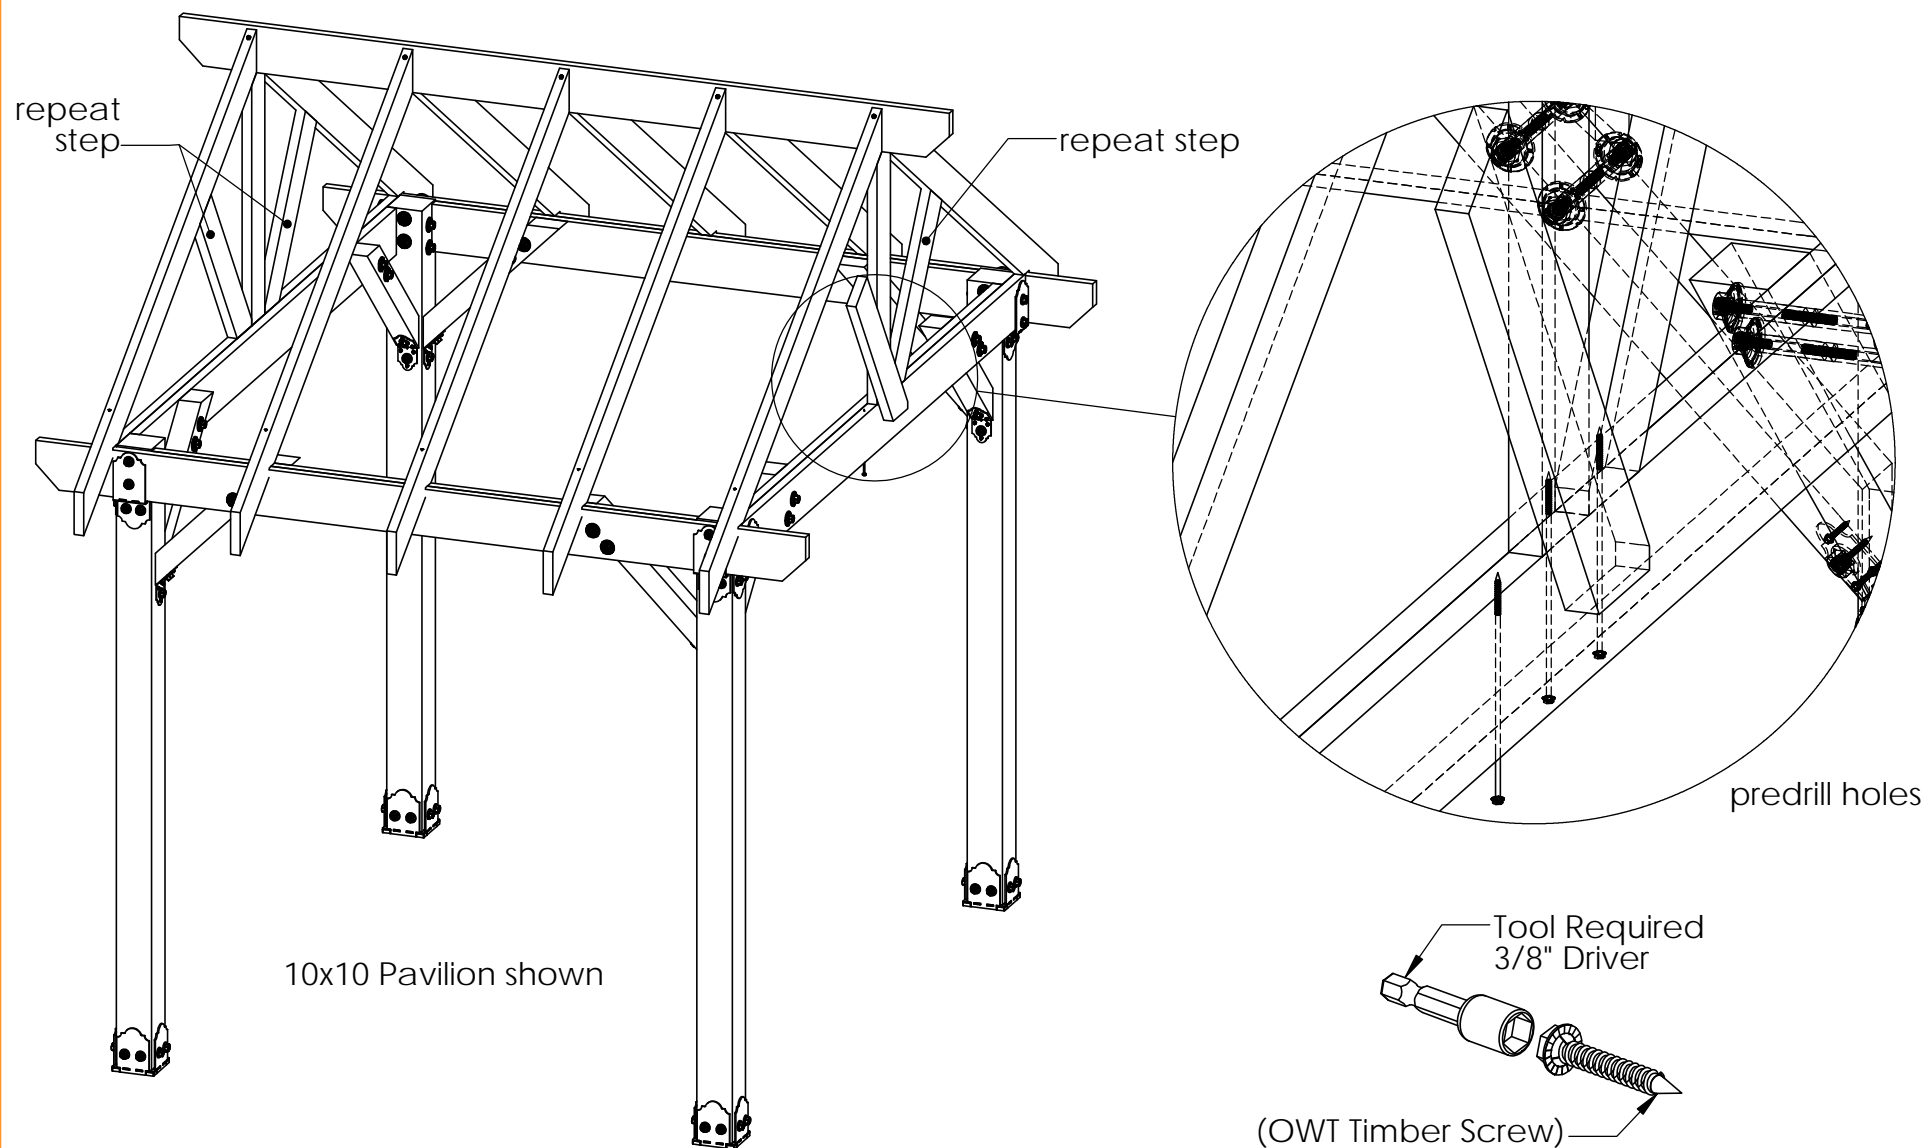


step 4

Pavilion Truss 10

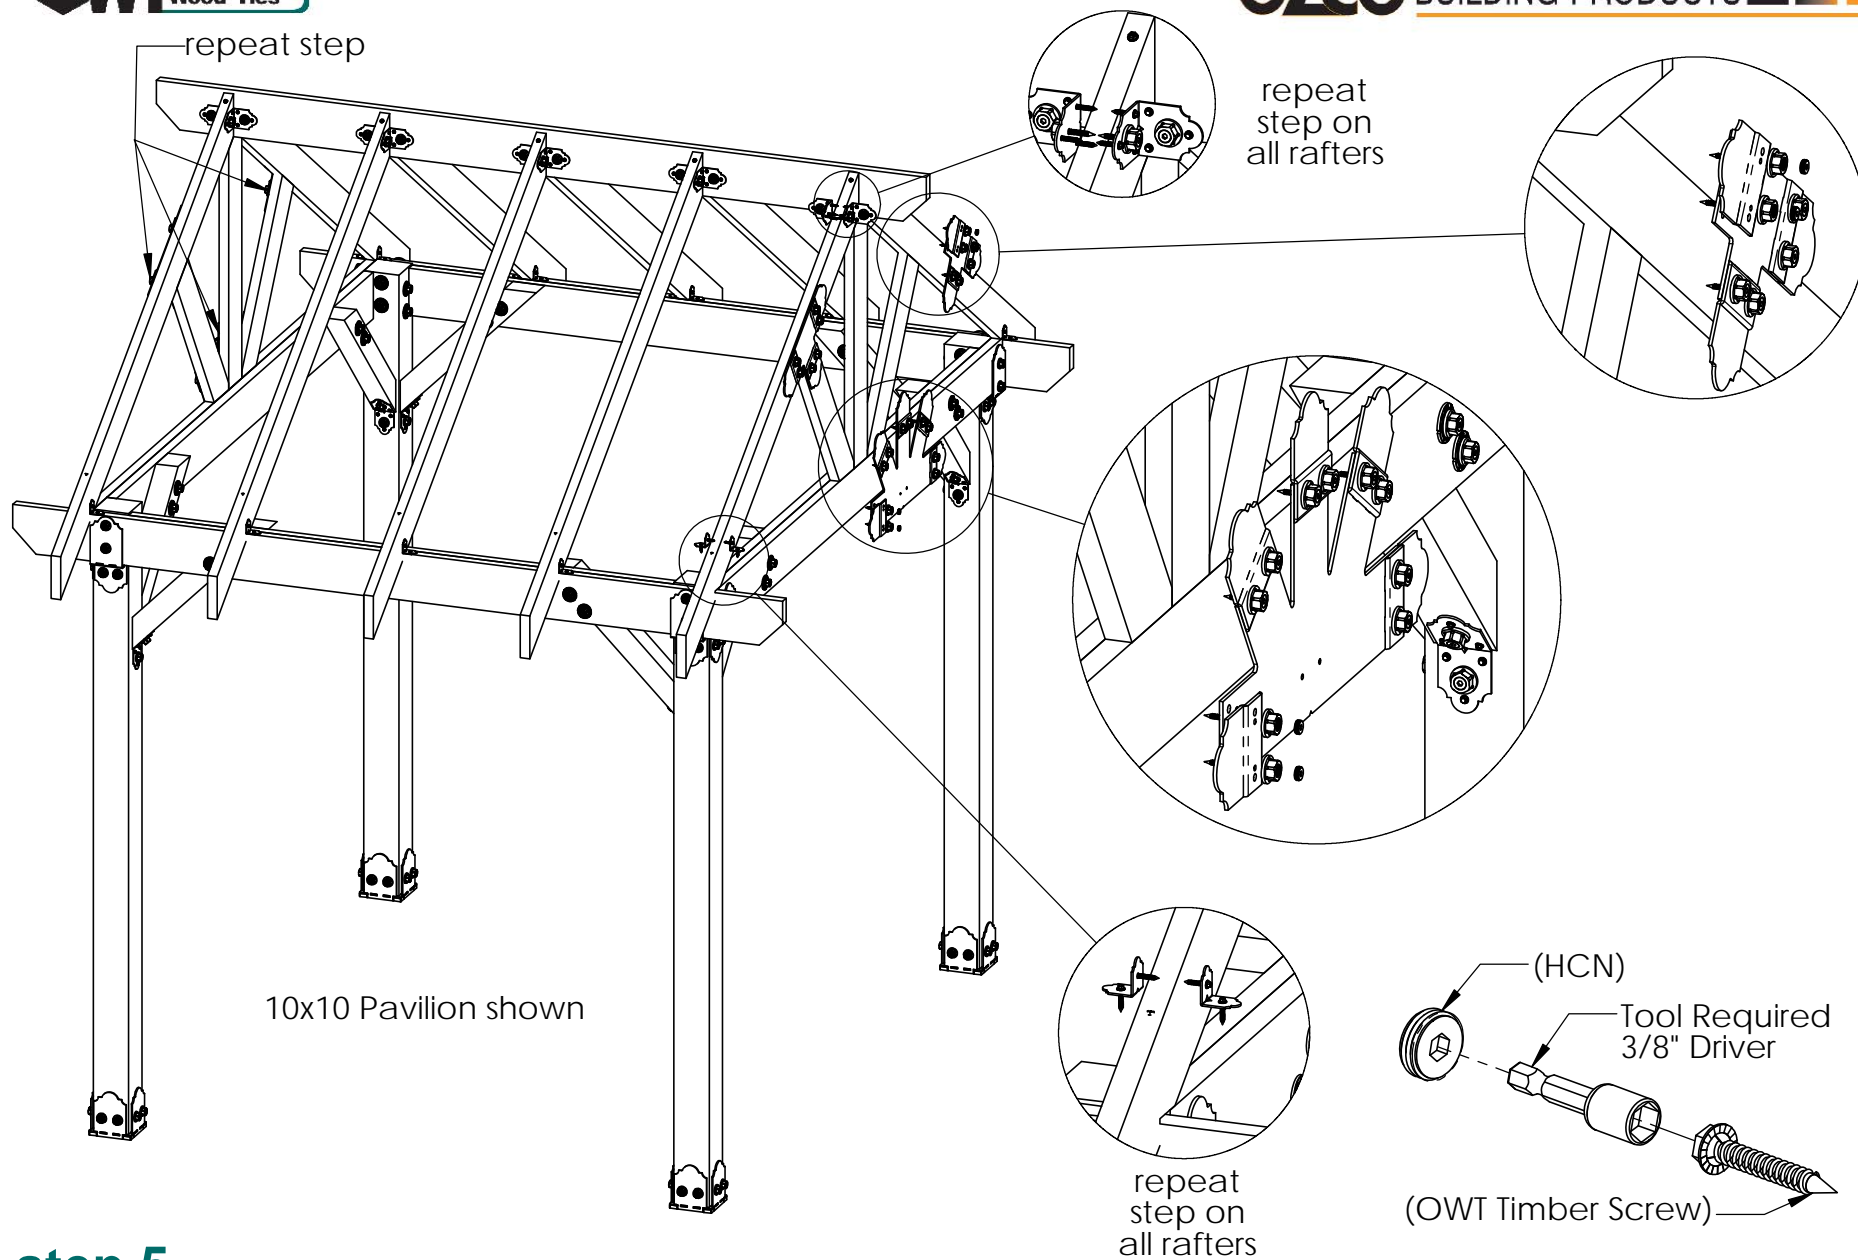



step 5

Pavilion Truss 10

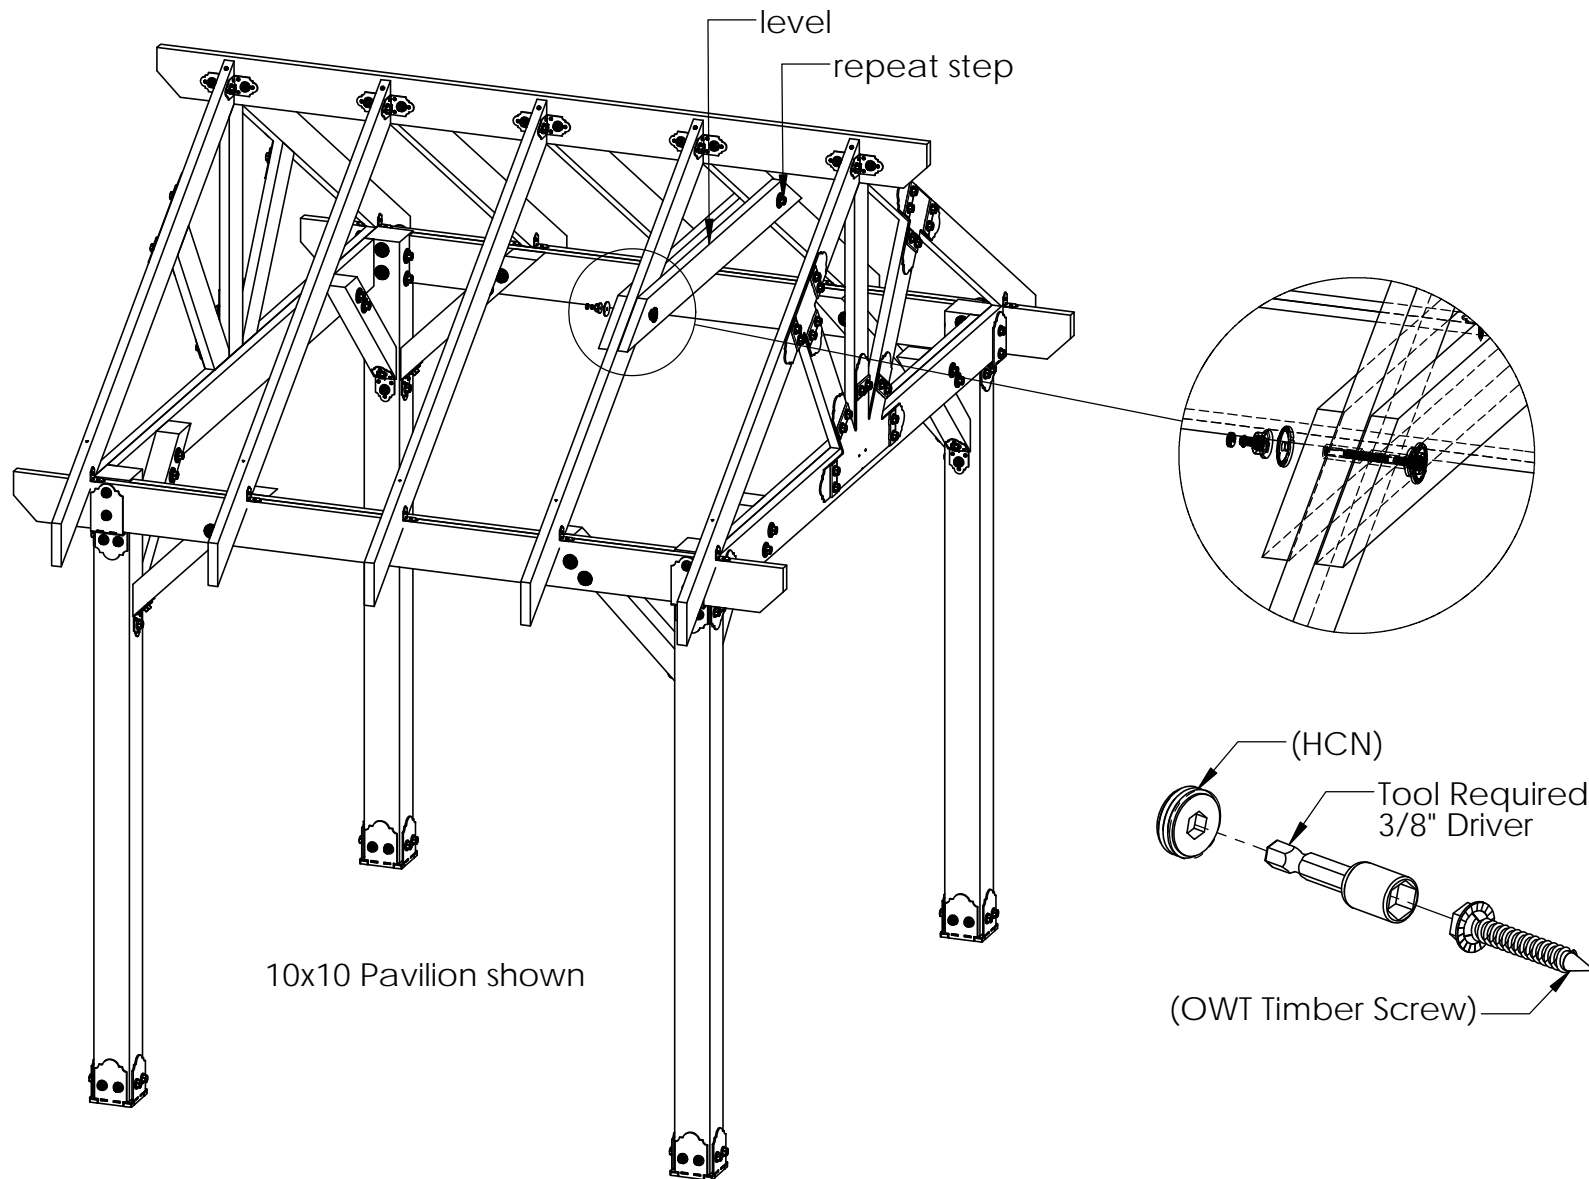


step 6

Pavilion Truss 10

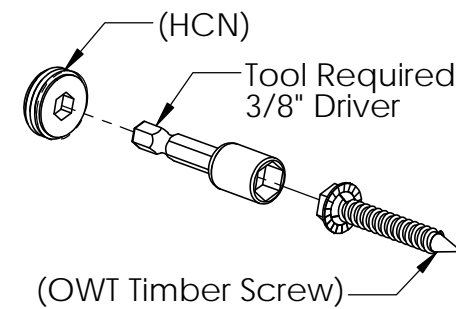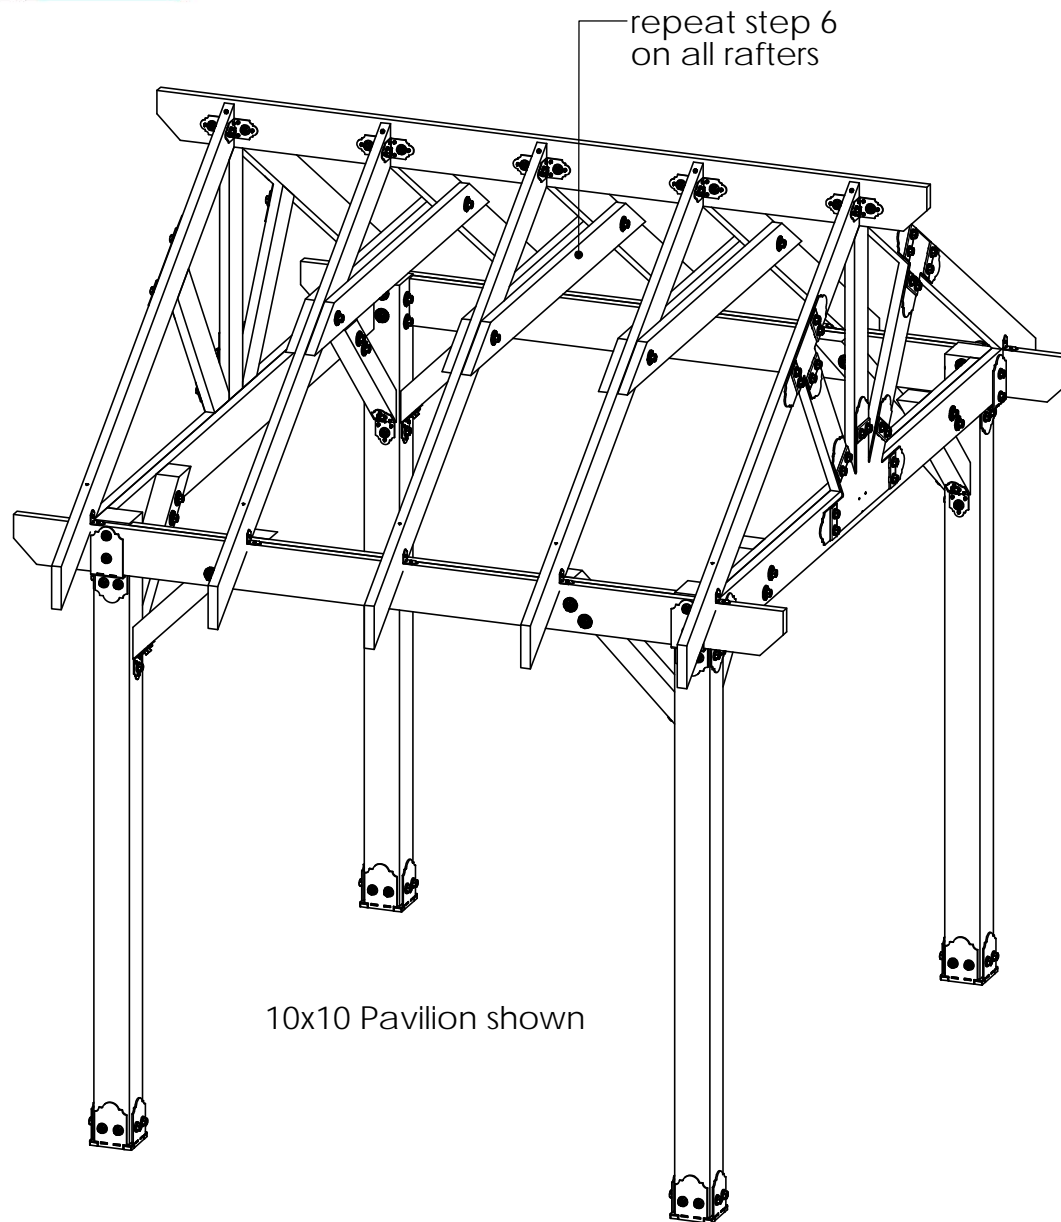

step 7

Pavilion Truss 10

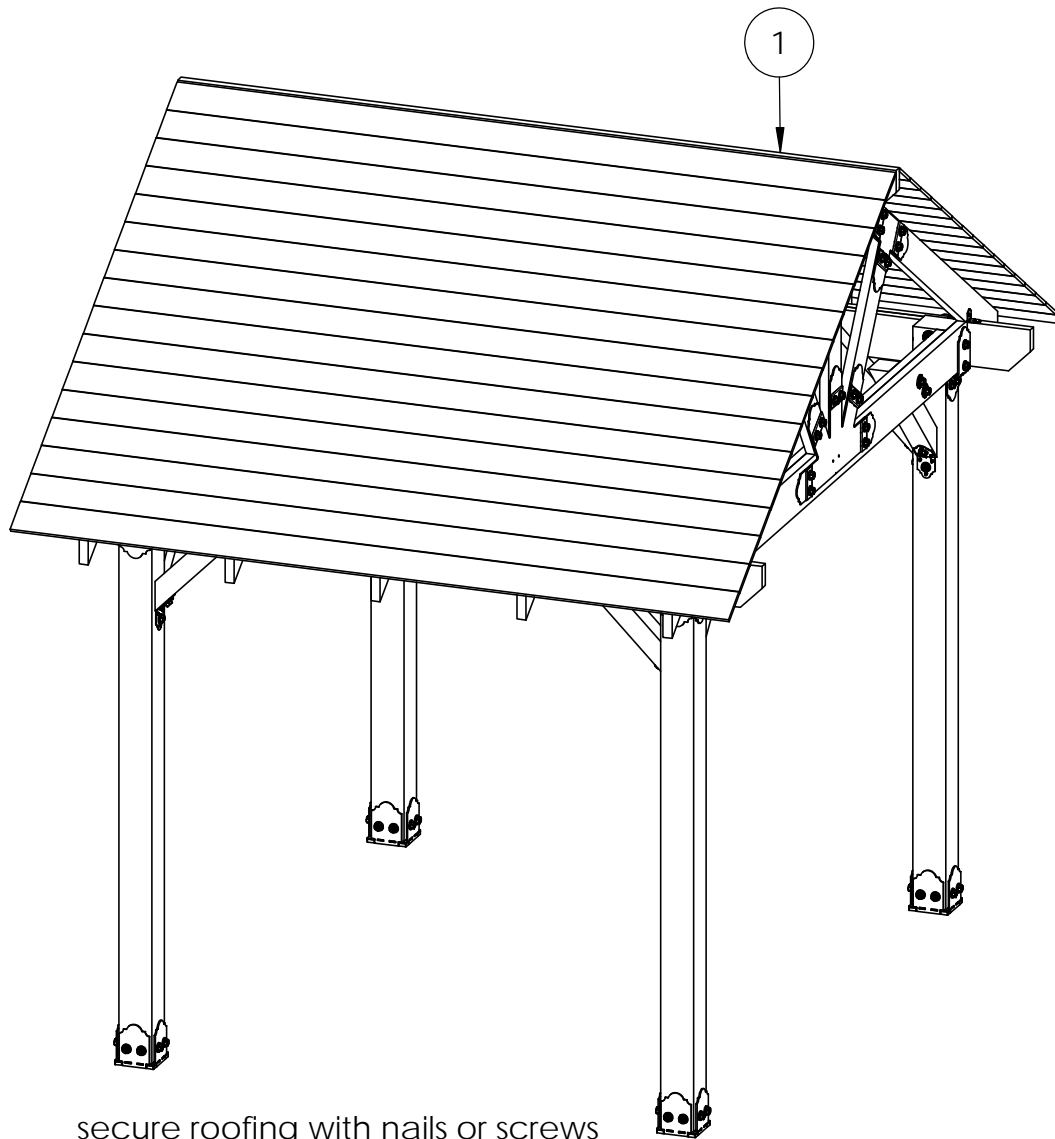

secure roofing with nails or screws

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	32	1x6 Board	1x6x10'0"

OZCO Project #205 - 10x10 Pavilion w 6x6 Posts Roofed

Pavilion Truss 10 Roofing

V2.00 - Installation Instructions, Specifications and Project Plans are effective 2/21/2017 . This information is updated periodically and should not be relied upon after 2 years from 2/21/2017 . Please visit OZCOBP.com to get current information.