


OZCO Project #213 -12x12 Pavilion 6x6 Posts

roofing shown translucent for clarity

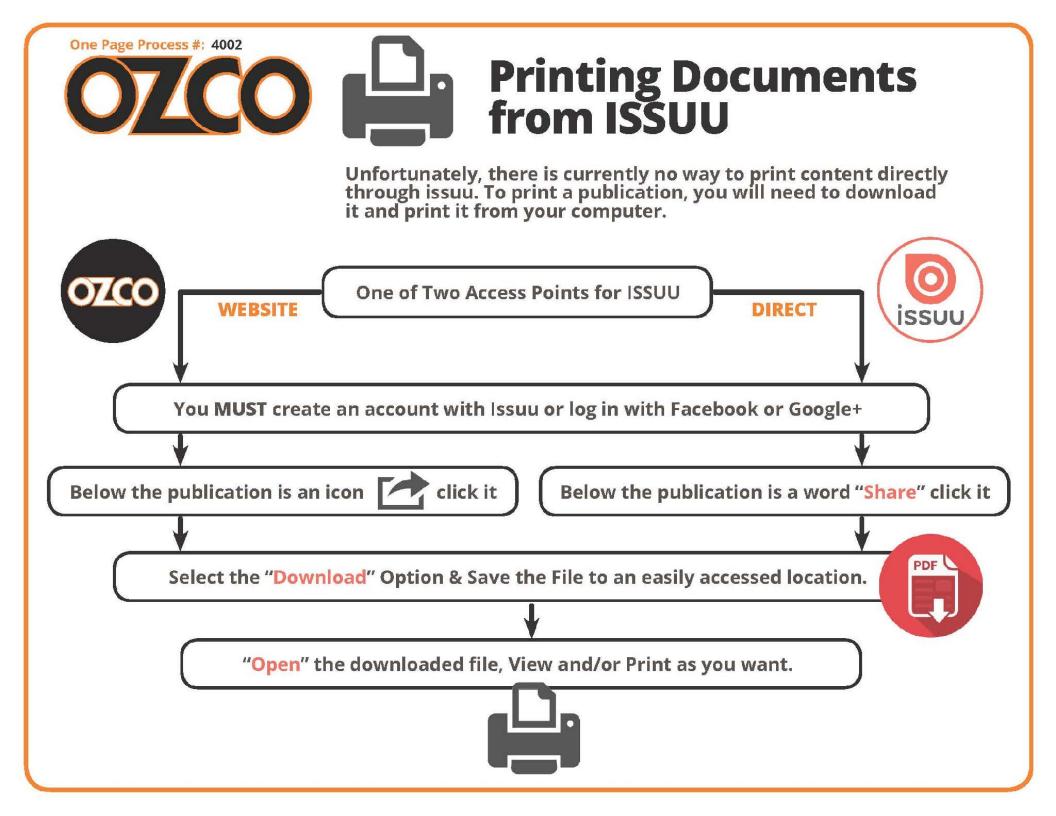










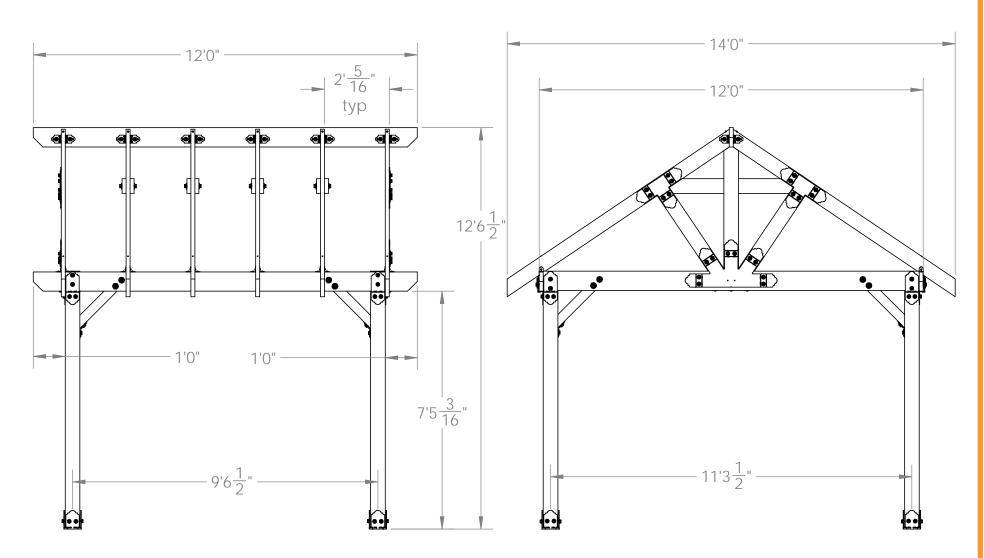

shown without roofing for clarity

OZCO Project #213 - 12x12 Pavilion w 6x6 Posts

Pavilion Overview




Pavilion Overview






QTY.	PART NUMBER	DESCRIPTION	
4	56608	6x6 Post Base (6x6-PB-LS)	
4	56636	Post to Beam Bolt Offset (P2B-BO-LS)	
2	56668	4" Flush Inside 45 (FI45-LS-4)	
16	56650	OWI Timber Bolt 6-8"	
8	56680	2" Timber Bolt Heavy Duty Washer (OWT-TBW-2)	
2	56619	Truss Base Fan 8:12	
11	56611	Truss Accent (TA-LS)	
2	56625	OWI Timber Screw 1-3/4"	
2	56612	"T" Tie Plate (TTP)	
4	56649	OWI Timber Bolt 4-6"	
3	56617	2" Standard Rafter Clip (RC-LS-2)	
3	56618	4" Standard Rafter Clip (RC-LS-4)	
1	56627	OWI Timber Screw 3-3/4"	
1	56647	OWI Timber Screw 10"	
1	56629	OWI Timber Screw 7-1/2"	
4	6x6x8L	6x6x8	
2	4x4x10L	4x4x10	
7	2x8x12L	2x8x12	
2	2x8x10L	2x8x10	
2	2x6x8L	2x6x8	
1	2x6x16L	2x6x16	
12	2x6x10L	2x6x10	
8	2x6x6L	2x6x6	

Material List

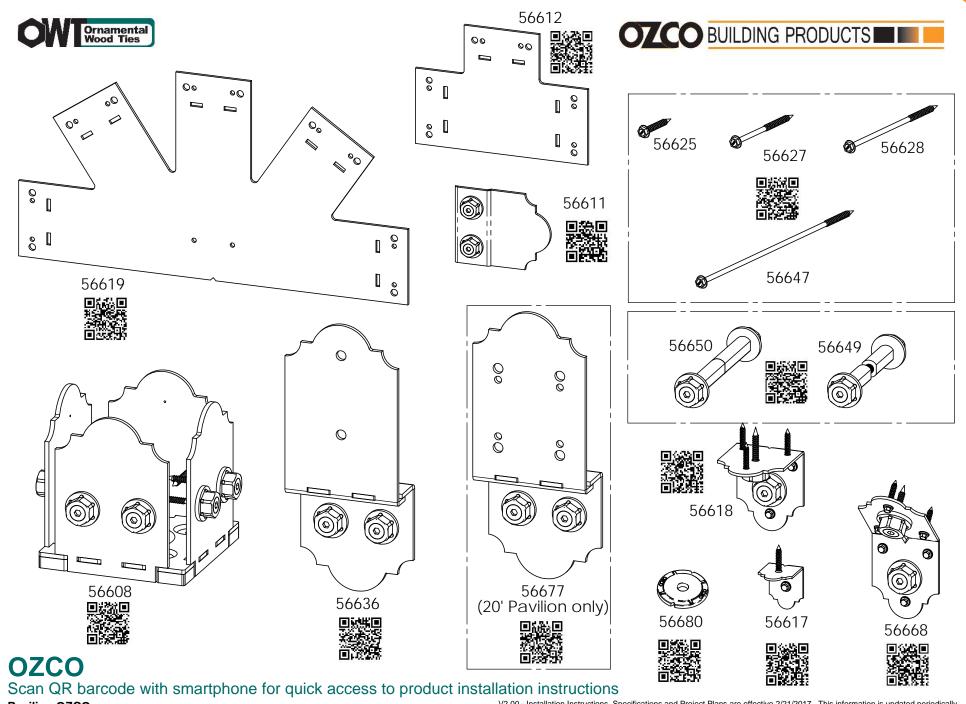

Pavilion OZCO

Laredo Sunset & Ironwood

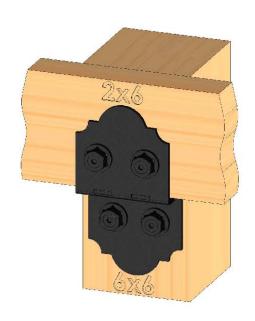


Laredo Sunset (566XX series)

2 great styles

Same functionality


choose your connection lifestyle

both styles available for most products

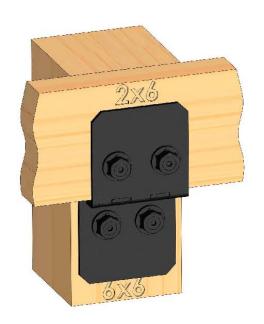

Ironwood (517XX series)




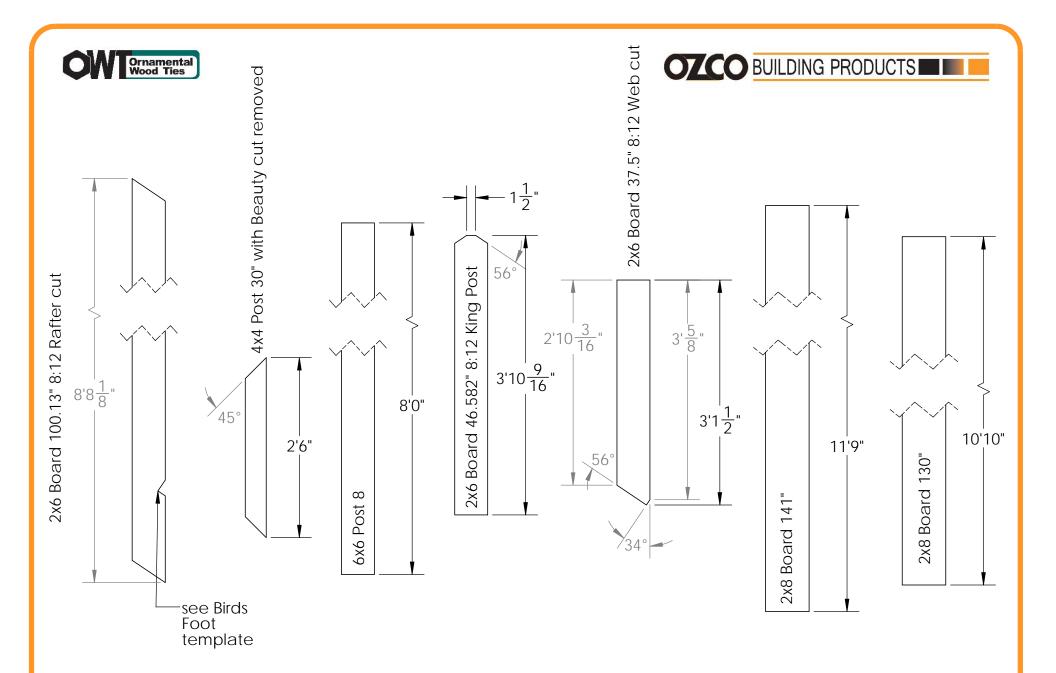

12x(length) Pavilion cut list: common to all 12' wide Pavilions






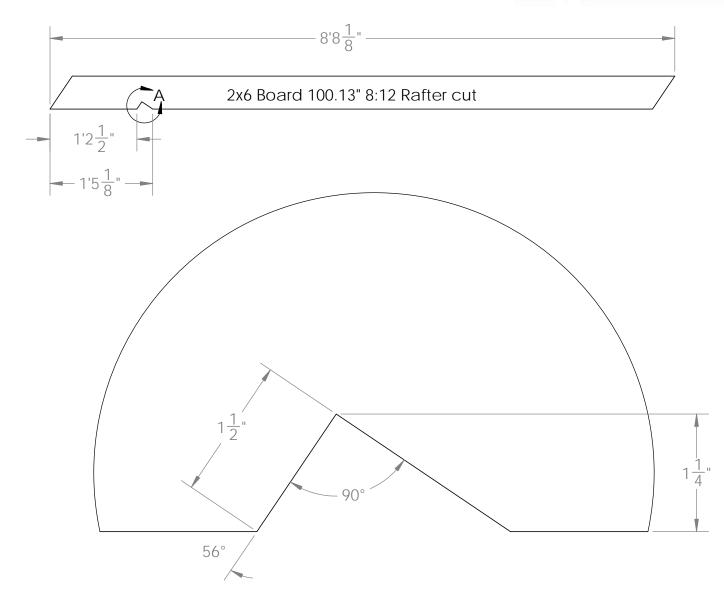

Birds Foot 1:1 template





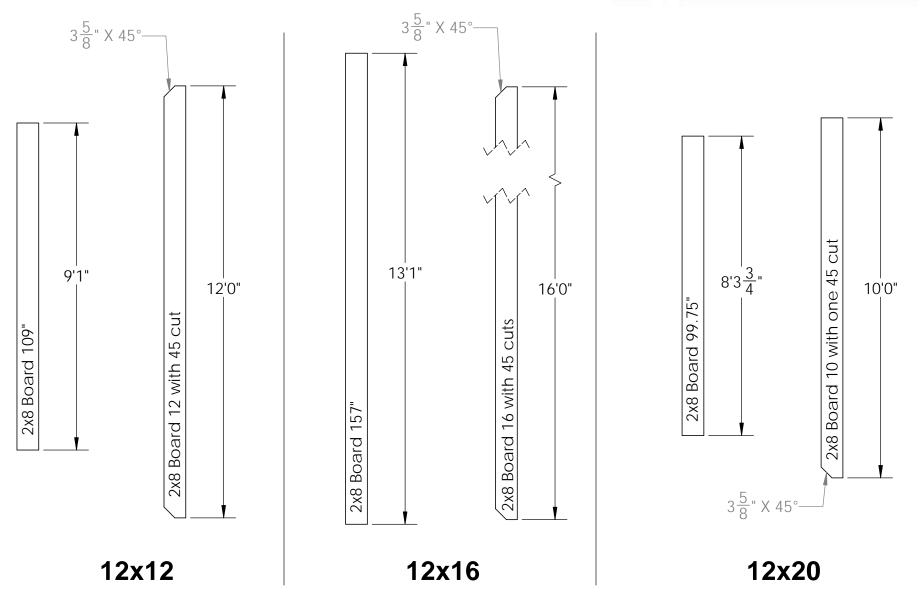


12x(length) Pavilion cut list: 2x8 length wise boards

Pavilion Cutlist 12





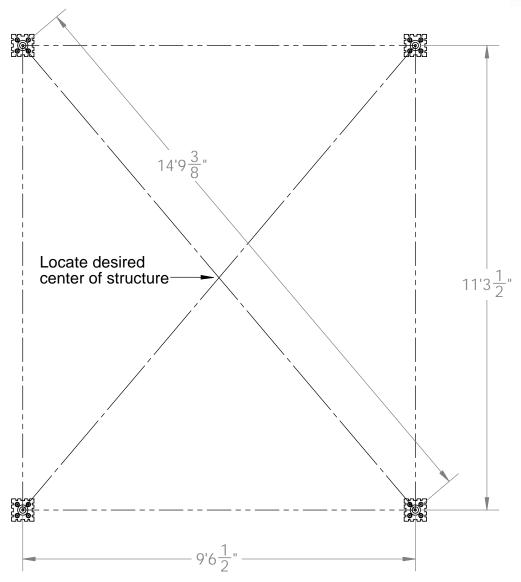



if site is not level, see Ozco Site Leveling instruction







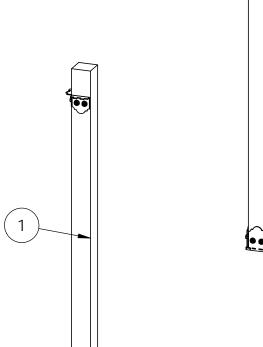

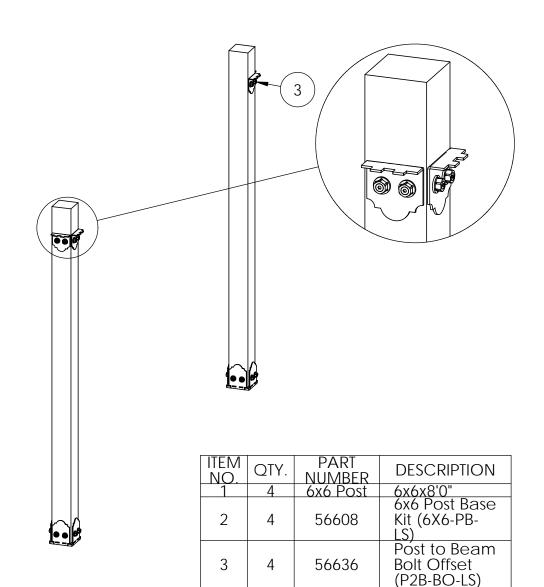


OZCO Project #213 - 12x12 Pavilion w 6x6 Posts ledge

Pavilion Base






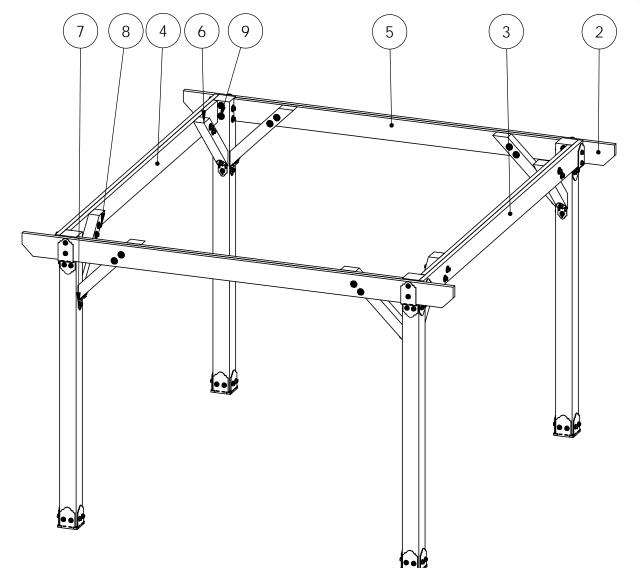

ITEM NO	QTY.	PART NUMBER	DESCRIPTION
1	1	Pavilion Base	OZCO Project #213 - 12x12 Pavilion w 6x6 Posts
2	2	2x8 Board	2x8x12'0"
3	2	2x8 Board	2x8x11'9"
4	2	2x8 Board	2x8x10'10"
5	2	2x8 Board	2x8x9'1"
6	8	4x4 Post	4x4x2'6"
7	2	56668	4" Flush Inside 45 (F145-LS-4)
8	8	56650	ÓWT Timber Bolt 6-8"
	8	56680	2" Timber Bolt Heavy Duty Washer (OWT-TBW-2)
9	8	56650	OWT Timber Bolt 6-8"
	4	56680	2" Timber Bolt Heavy Duty Washer (OWT-TBW-2)

OZCO Project #213 - 12x12 Pavilion w 6x6 Posts

Pavilion Beam & Support

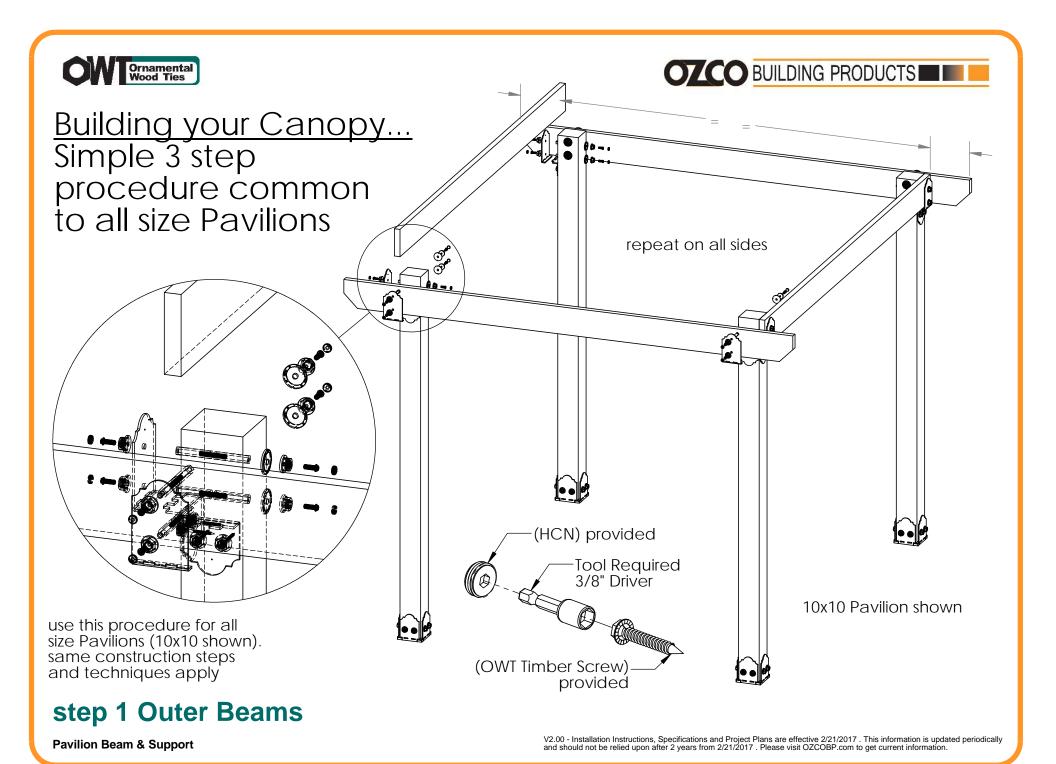






Secure with nails or screws-Repeat on all sides

for additional beam rigidity apply polyurethane adhesive between boards

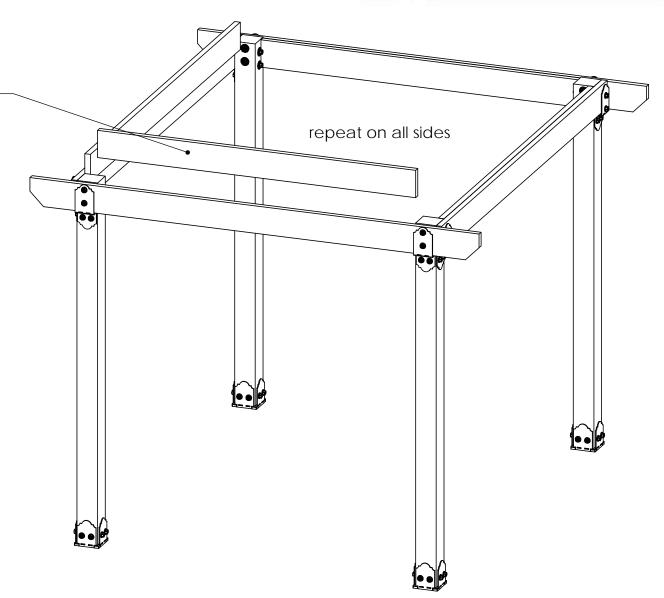


step 2 Inside Beams

Pavilion Beam & Support





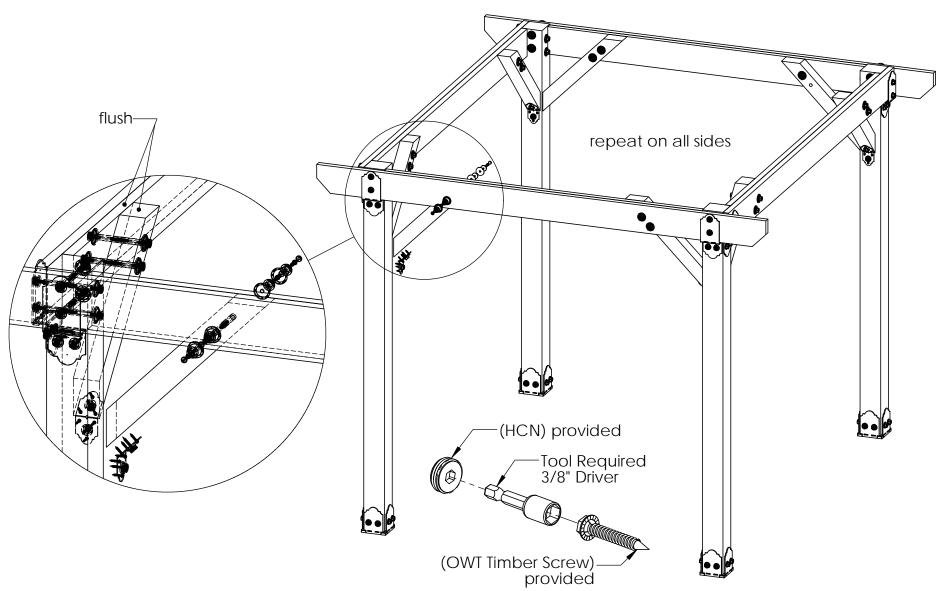


step 3 Knee Braces

Pavilion Beam & Support





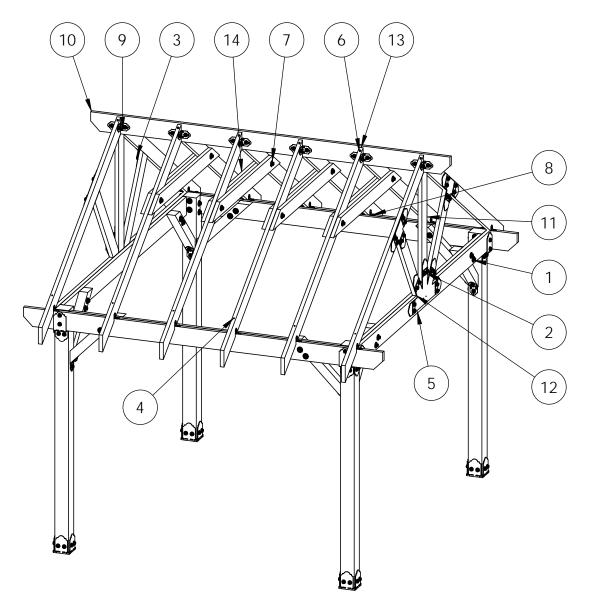

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	Pavilion Beam & Support	OZCO Project #213 - 12x12 Pavilion w 6x6 Posts
2	2	56619	Truss Base Fan 8:12
	5	56611	8:12 Truss Accent (TA-LS) OWT Timber
	1	56625	ÖWT Timber Screw 1-3/4" "T" Tie Plate
3	2	56612	
	6	56611	(TTP) Truss Accent (TA-LS)
	1	56625	OWT Timber Screw 1-3/4" OWT Timber
4	1	56629	
5	1	56647	Screw 7-1/2" OWT Timber Screw 10" OWT Timber
6	1	56627	
7	4	56649	Screw 3-3/4" OWT Timber Bolt 4-6"
	4	56680	2" Timber Bolt Heavy Duty Washer (OWT- TBW-2)
8	3	56617	2" Standard Rafter Clip (RC- LS-2) 4" Standard
9	3	56618	4" Standard Rafter Clips (RC-LS-4)
10	1	2x8 Board	2x8x12'0"
11	2	2x6 Board	2x6x3'10 9/16"
12	4	2x6 Board	2x6x3'1 1/2"
13	12	2x6 Board	2x6x10'0"
14	8	2x6 Board	2x6x6'0"


OZCO Project #213 - 12x12 Pavilion w 6x6 Posts



OZCO BUILDING PRODUCTS


Building your Truss...
Simple 7 step
procedure common
to all size Pavilions


use this procedure for all size Pavilions (10x10 shown). same construction steps and techniques apply

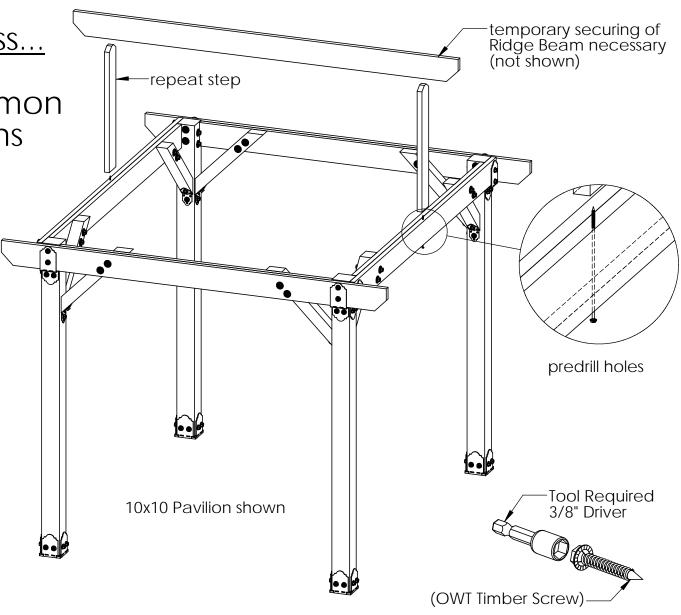


step 1

Pavilion Truss 10

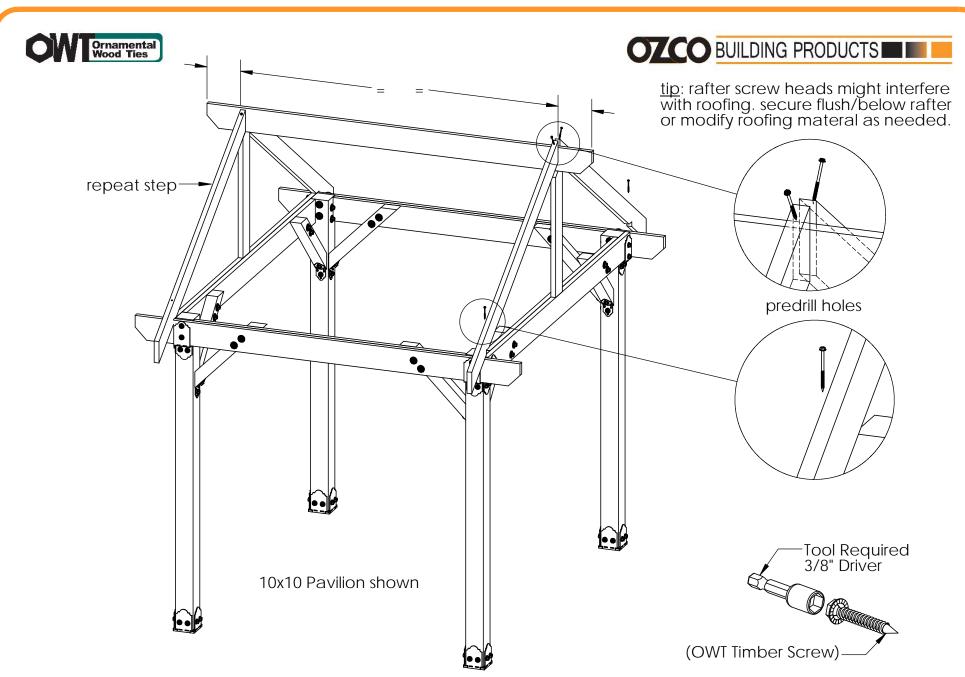


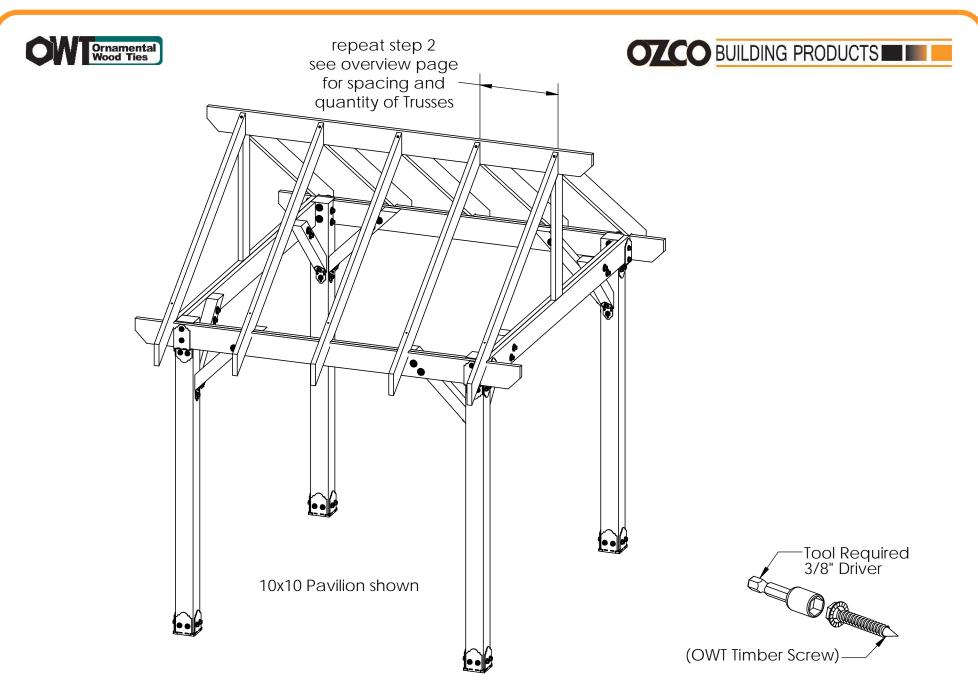

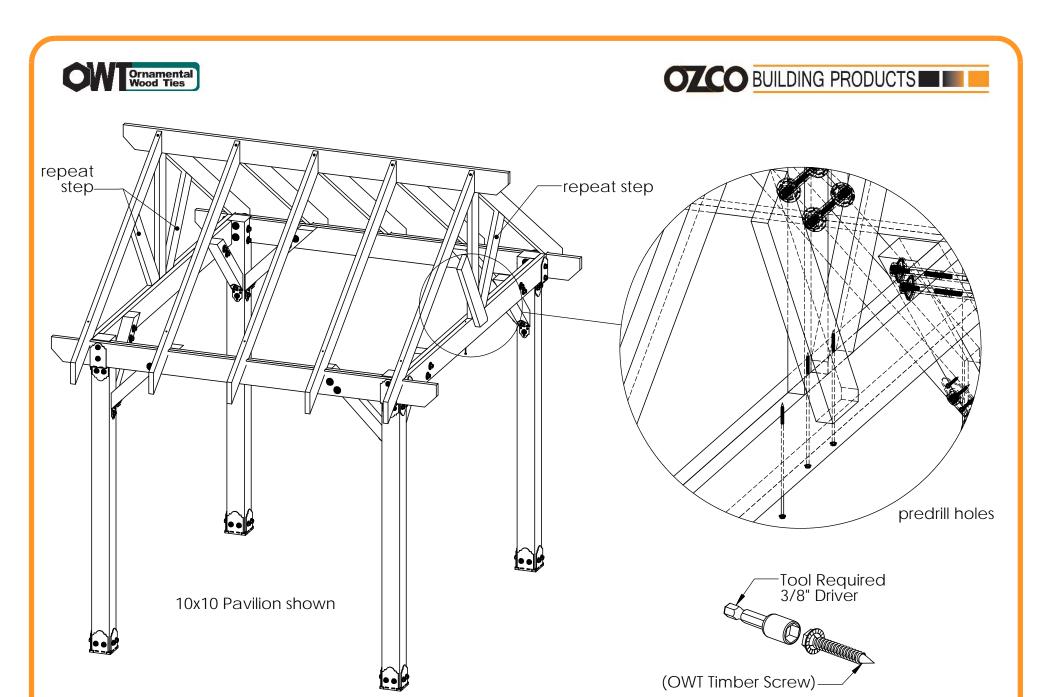

step 4


Pavilion Truss 10

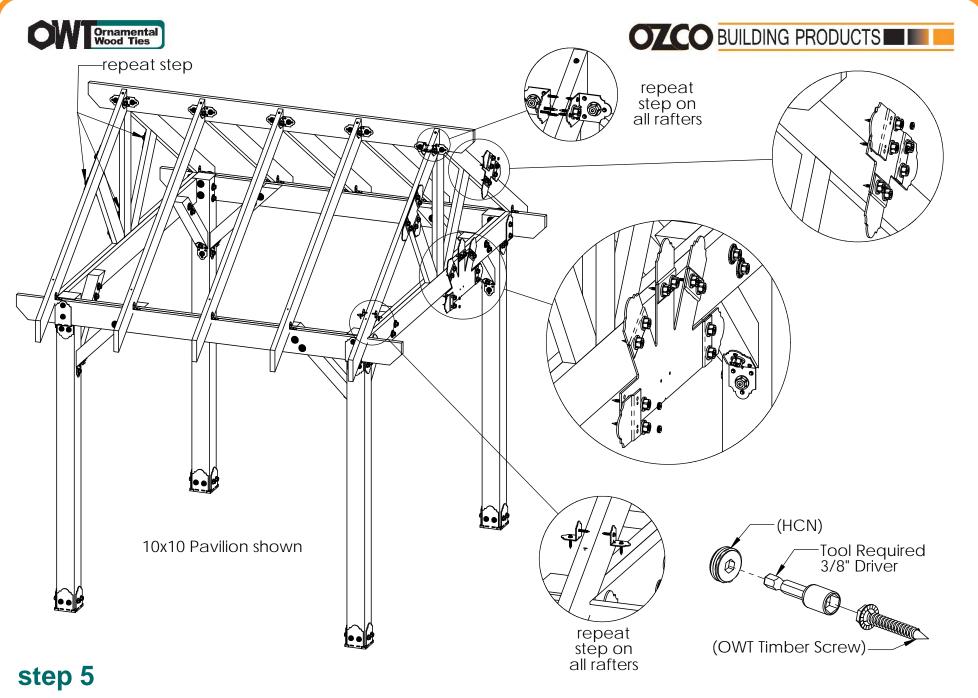

Pavilion Truss 10





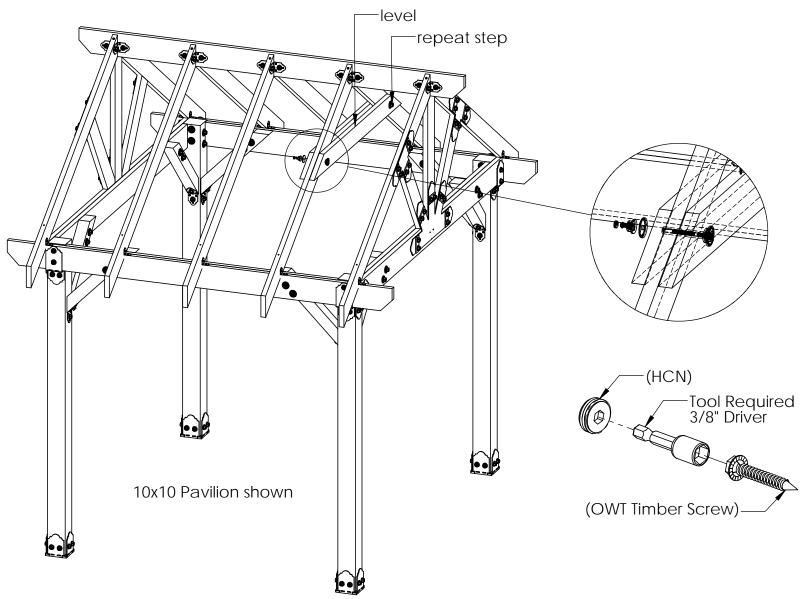


step 6

Pavilion Truss 10





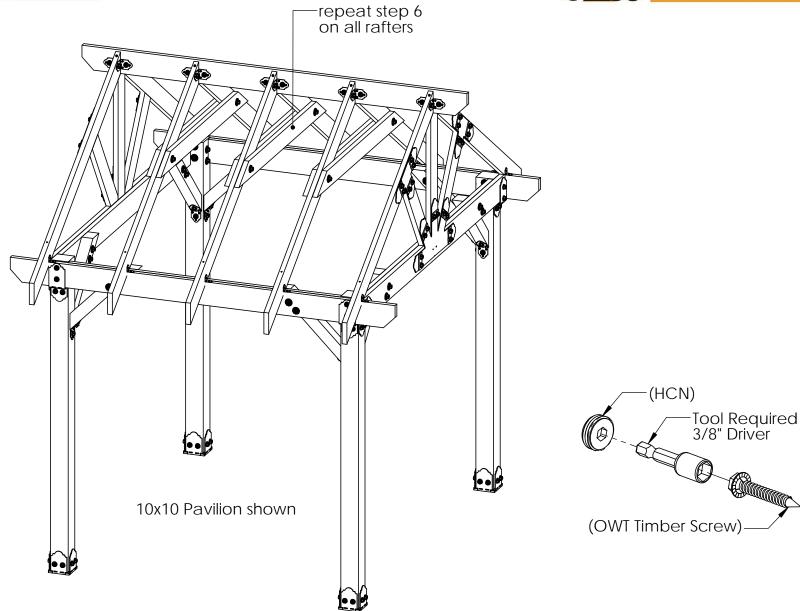


step 7

Pavilion Truss 10





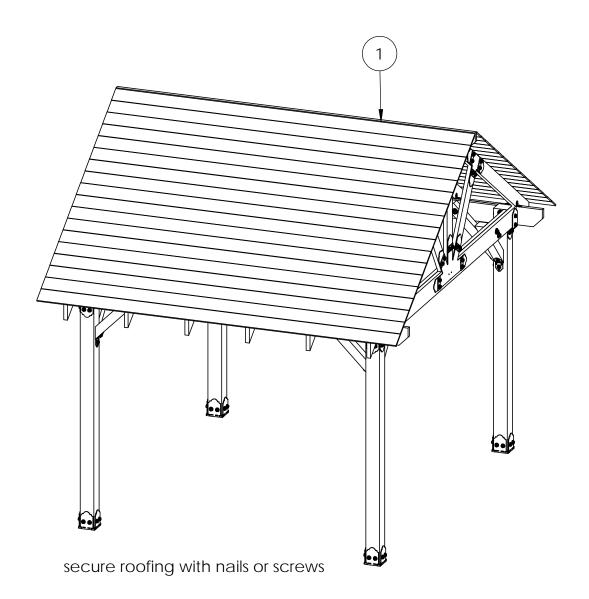

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	36	1x6 Board	1x6x12'0"

OZCO Project #213 - 12x12 Pavilion w 6x6 Posts Roofed

Pavilion Truss 12 Roofing