

OZCO Project #772 - Modern Pergola Two Tier Dropped Shades

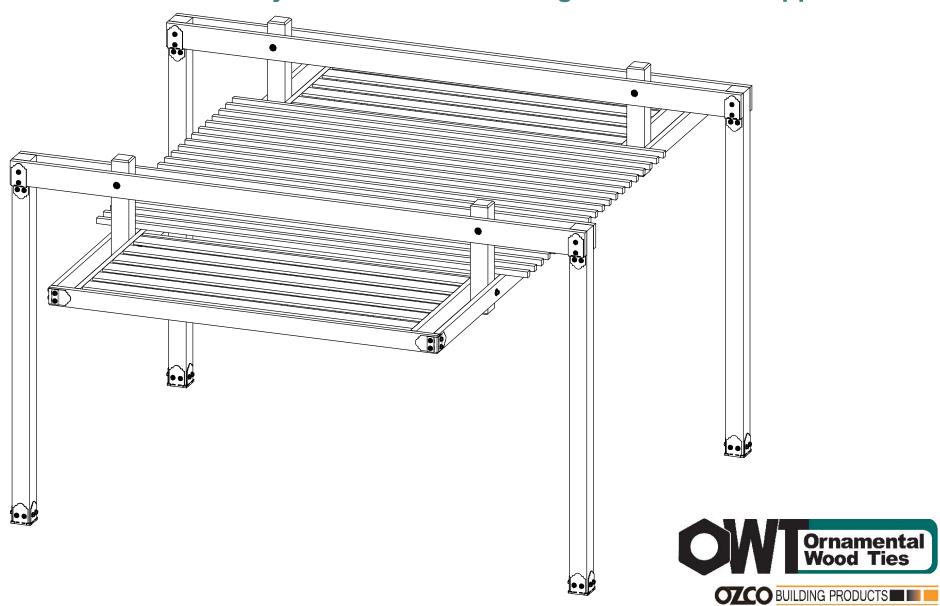



OZCO Project #772 - Modern Pergola Two Tier Dropped Shades

V2.00 - Installation Instructions, Specifications and Project Plans are effective 12/29/2018. This information is updated periodically and should not be relied upon after 2 years from 12/29/2018. Please visit OZCOBP.com to get current information.

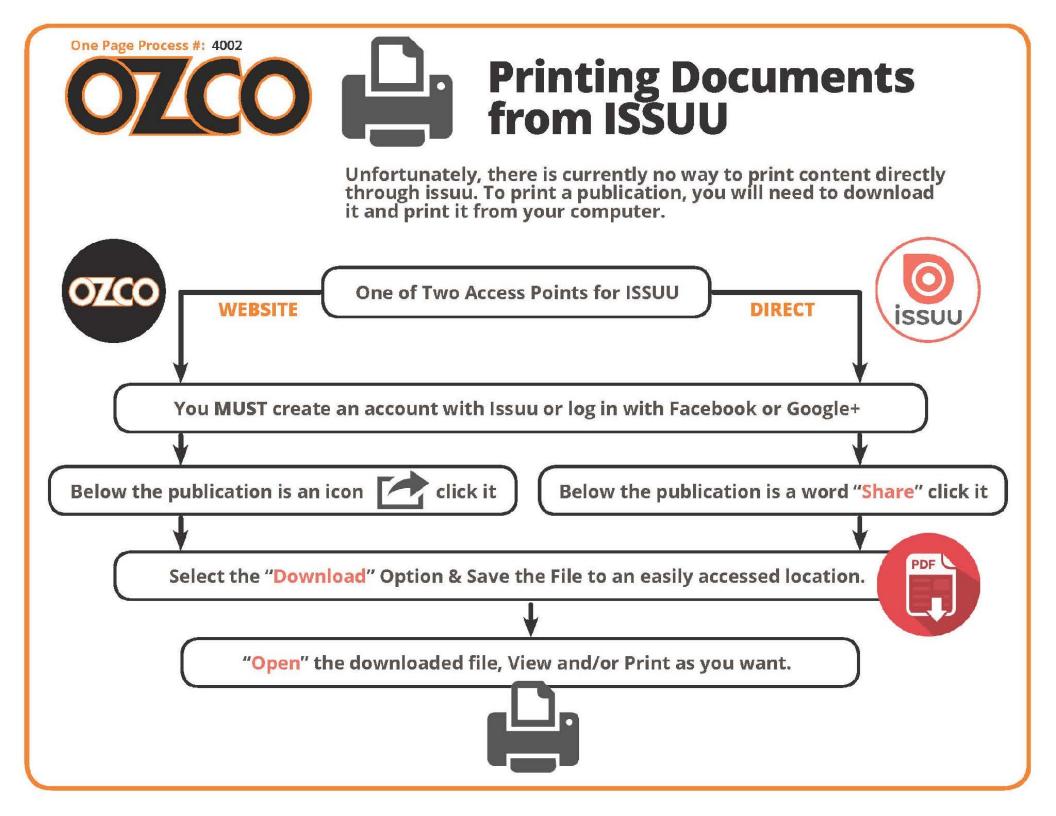




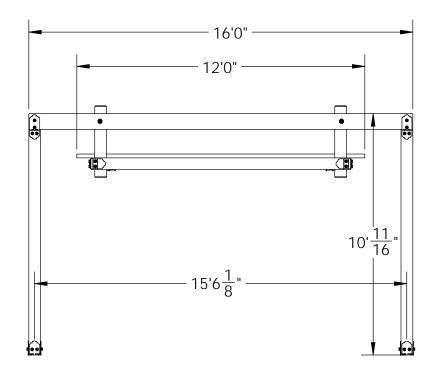

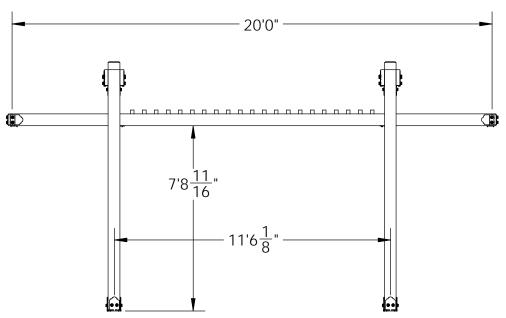





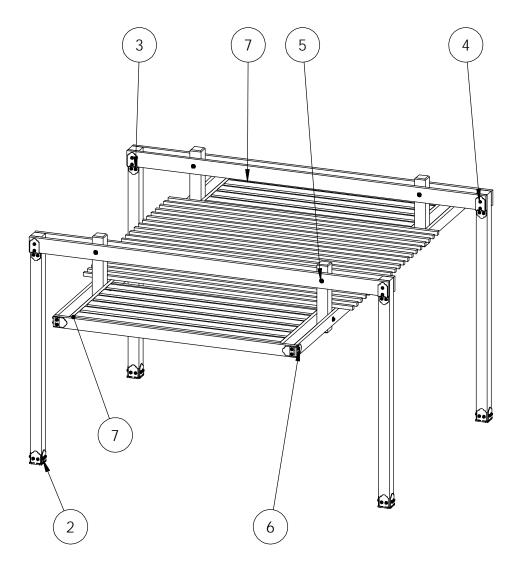


ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
7	1	OZCO Project #772 - Modern Pergola Two Tier Droppe d Shades	see cutlist
2	4	56608	6x6 Post Base Kit (6X6-PB-LS)
3	4	56637	Post to Beam Bolt Inline (P2B-BI-LS)
4	4	56652	OWT Timber Bolt 10-12"
5	4	56651	OWT Timber Bolt 8-10"
	4	56680	2" Timber Bolt Heavy Duty Washer (OWT-TBW-2)
6	2	56615	Flush Inside 90 (FI-90)
	4	56611	Truss Áccent (TA-LS)
	1	56625	Screw, OWT 1-3/4" (45mm) Timber
7	2	56640	6-8" Joist Hanger Tab (JHT-68-LS)


Bill of Material





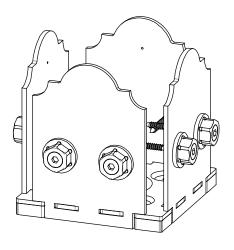











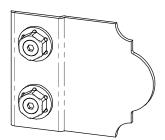
















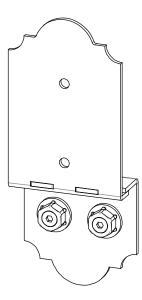








follow QR barcode with your smart phone or visit OZCOBP.com for product installation instructions



OZCO Project #772 - Modern Pergola Two Tier Dropped Shades

V2.00 - Installation Instructions, Specifications and Project Plans are effective 12/29/2018 . This information is updated periodically and should not be relied upon after 2 years from 12/29/2018 . Please visit OZCOBP.com to get current information.

Laredo Sunset & Ironwood

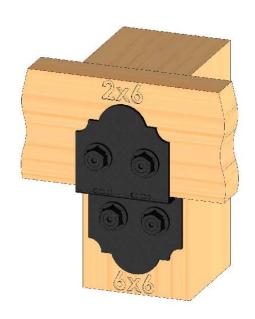


Laredo Sunset (566XX series)

2 great styles

Same functionality

choose your connection lifestyle

both styles available for most products

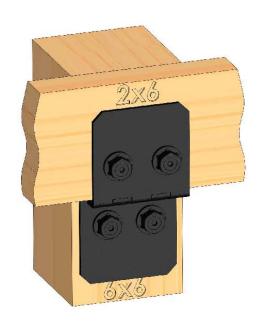


Ironwood (517XX series)








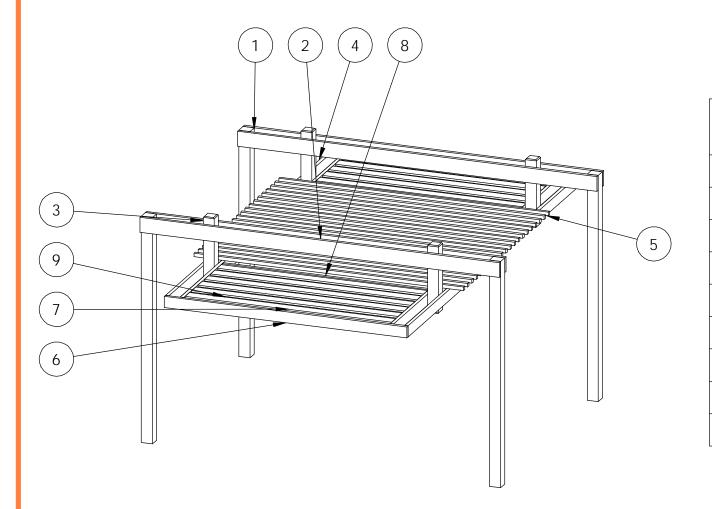


ITEM NO.	QTY.	DESCRIPTION	LENGTH
1	4	6x6 Cedar	10'
2	4	2x8 Cedar	16'
3	4	6x6 Cedar	3'
4	4	2x6 Cedar	20'
5	21	2x2 Cedar	12'
6	2	2x6 Cedar	10'9 5/8"
7	12	1x6 Cedar	9'2 3/8"
8	2	2x6 Cedar	9'2 3/16"
9	22	2x2 Cedar	4'6 1/8"

Cutlist

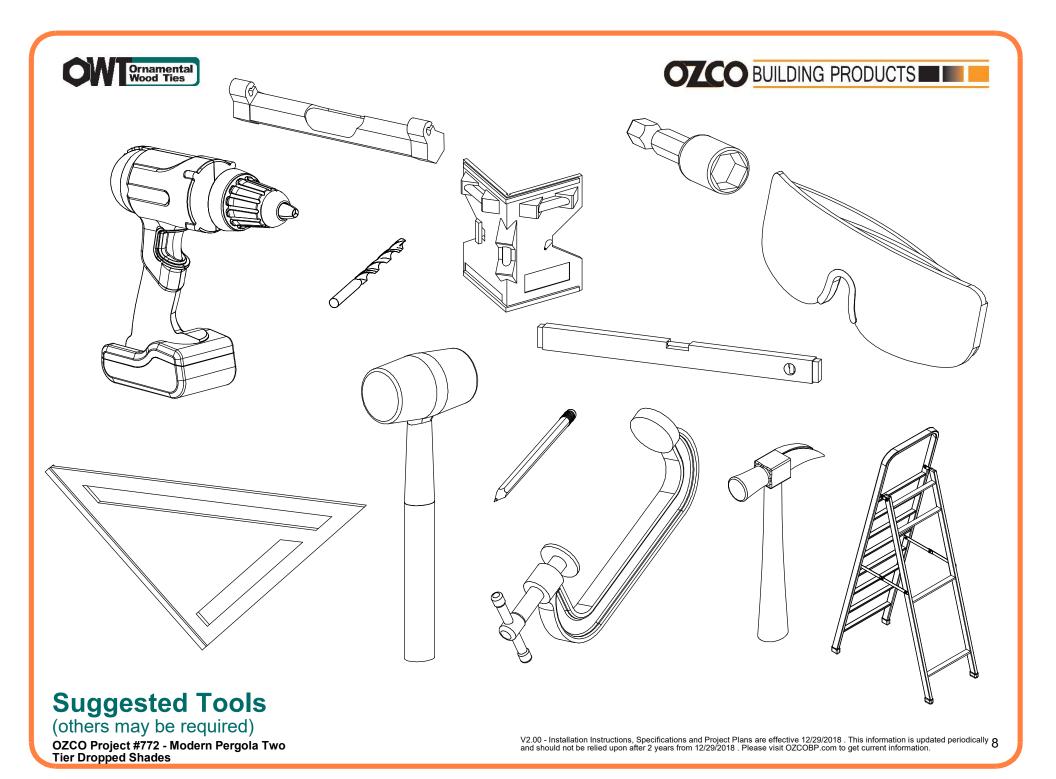





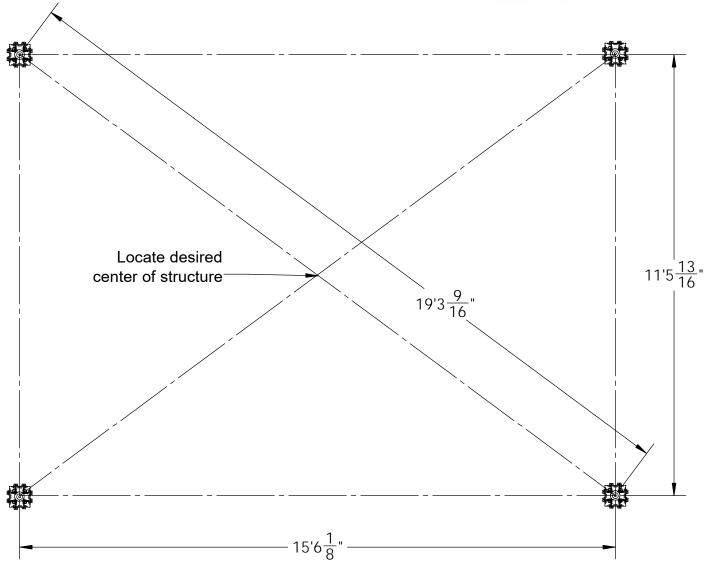


if site is not level, see Ozco Site Leveling instruction








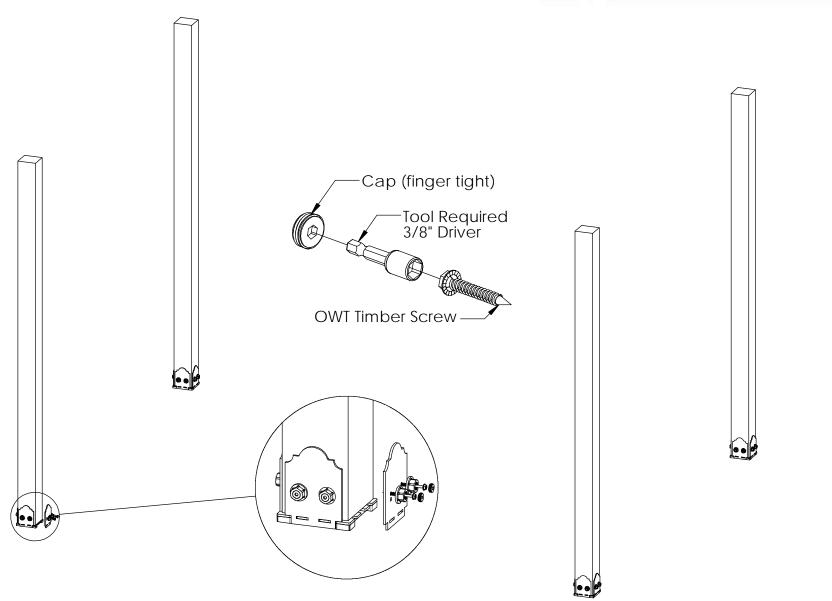





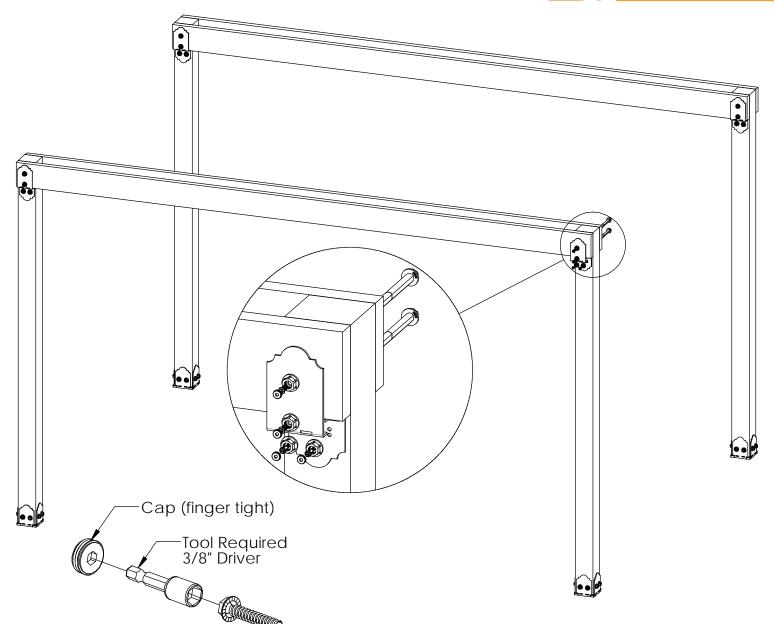

OZCO Project #772 - Modern Pergola Two Tier Dropped Shades


OWT Timber Screw

step 3

V2.00 - Installation Instructions, Specifications and Project Plans are effective 12/29/2018. This information is updated periodically and should not be relied upon after 2 years from 12/29/2018. Please visit OZCOBP.com to get current information.






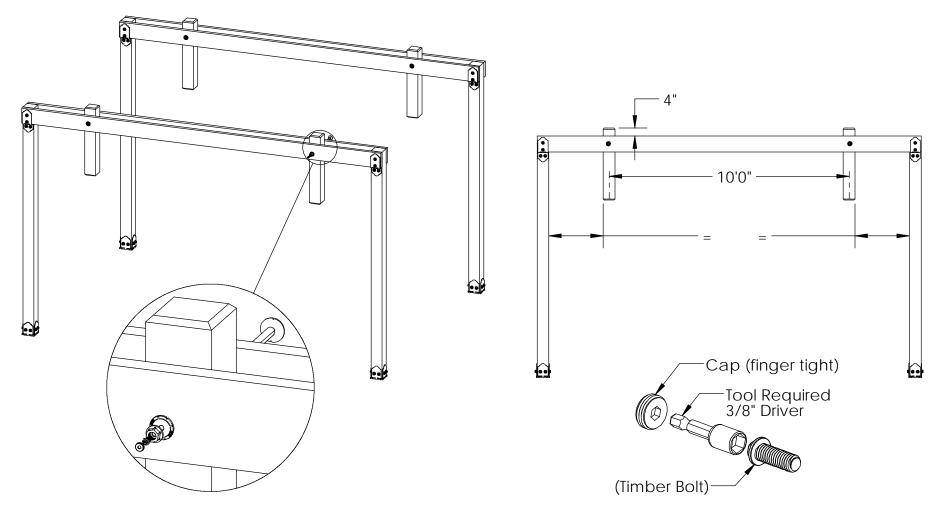






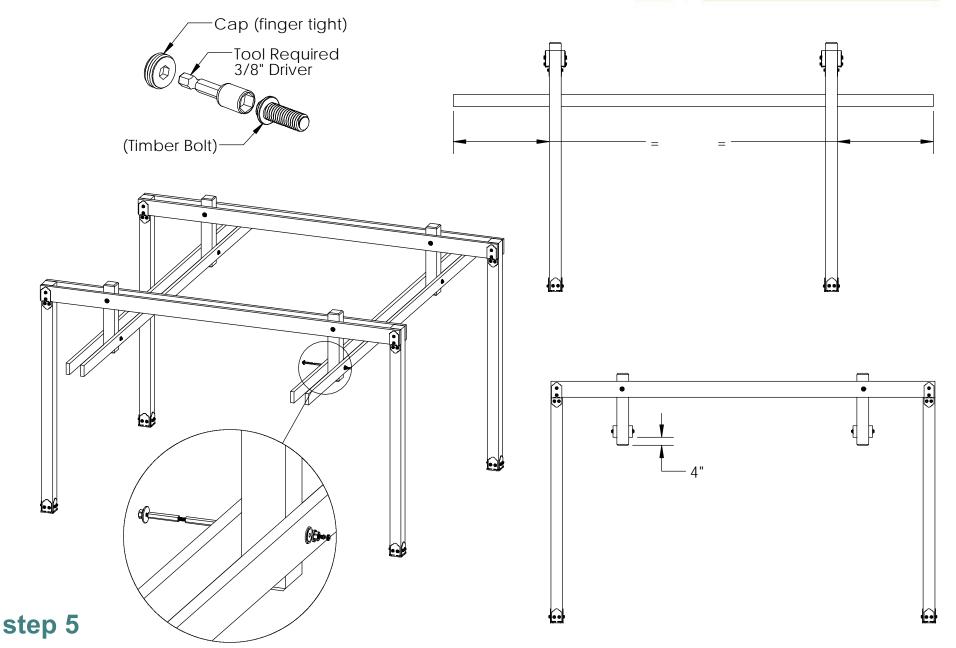

OZCO Project #772 - Modern Pergola Two Tier Dropped Shades V2.00 - Installation Instructions, Specifications and Project Plans are effective 12/29/2018. This information is updated periodically and should not be relied upon after 2 years from 12/29/2018. Please visit OZCOBP.com to get current information.






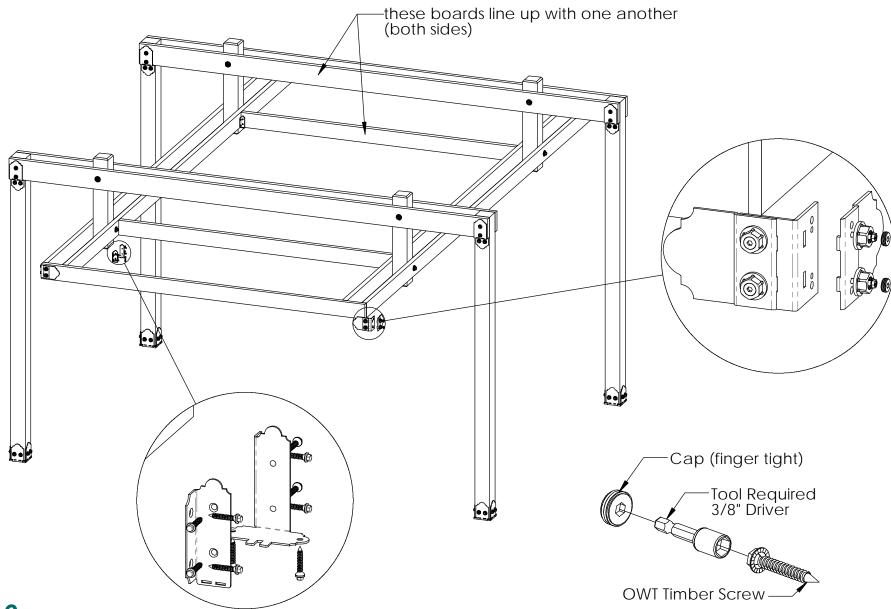






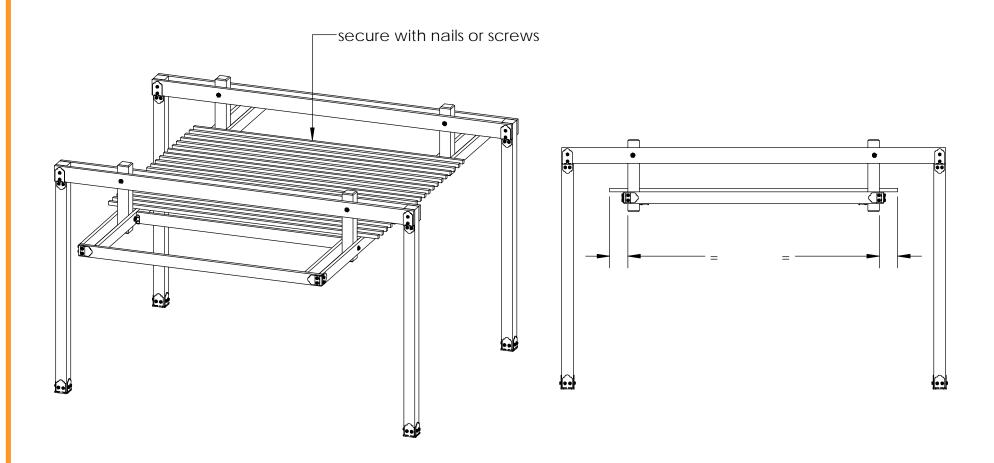






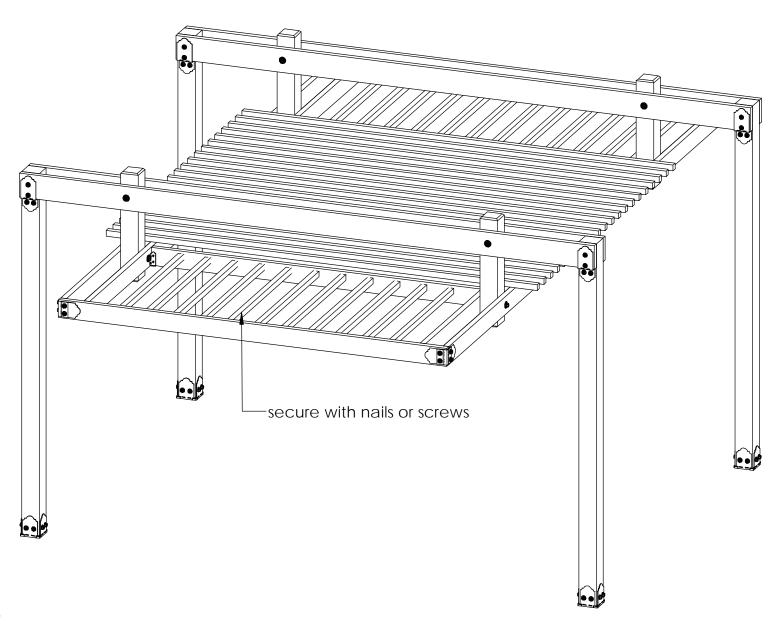





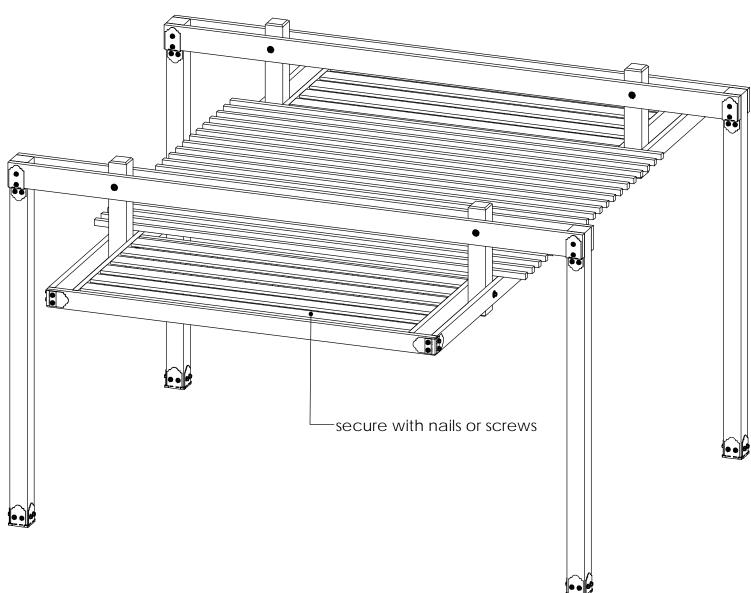







Translucent