


this project is the foundation of project #312 & #313 see OZCO website for further information

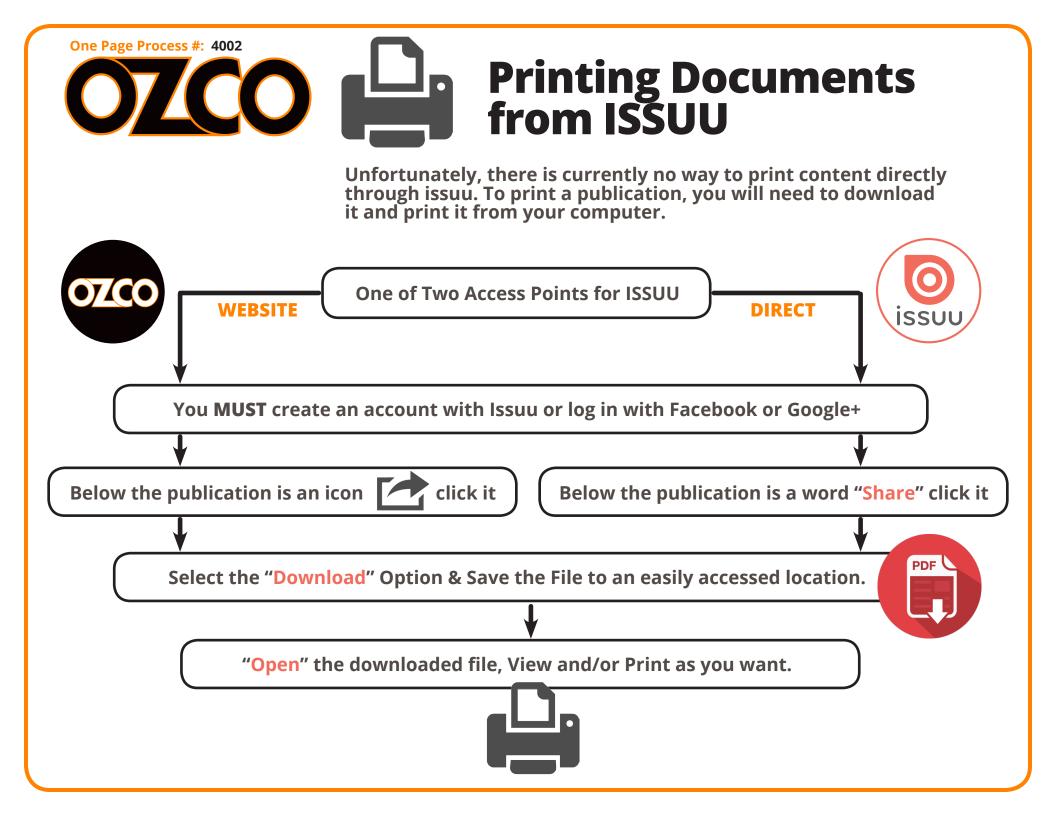












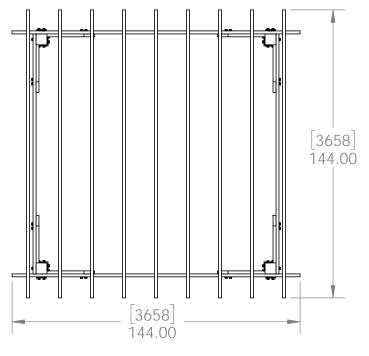


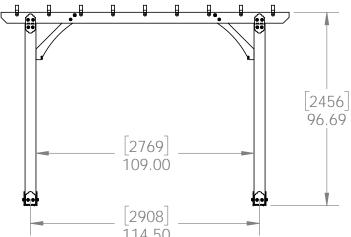

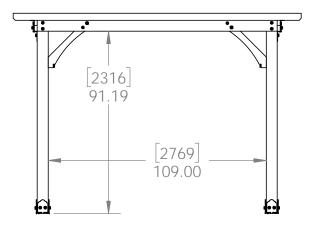






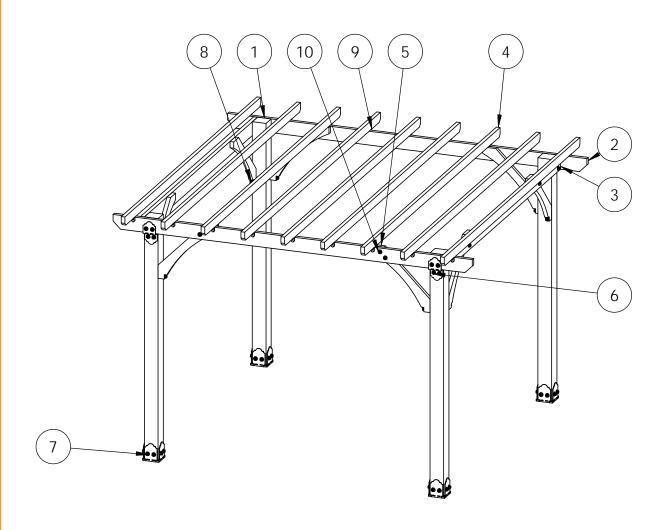

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	4	6x6 Post 2x6	6x6x96.00
2	2	Board	2x6x144.00
3	2	2x6 Board	2x6x120.00
4	9	2x4 Board	2x4x144.00
5	8	2x6 Board	2x6x36.00
6	2	56635	6" Post to Beam (P2B- LS-6)
7	4	56608	6x6 Post Base (6x6- PB-LS)
8	0.64	56628	Screw, OWT 5-3/4" (145mm) Timber with HCN
	0.1	56621	1 1/2" Hex Cap Nut (HCN)
9	1.8	56617	2" Standard Rafter Clip (RC-LS-2)
10	0.64	56626	Screw, OWT 2-3/4" (70mm) Timber with HCN
	0.1	56621	1 1/2" Hex Cap Nut (HCN)






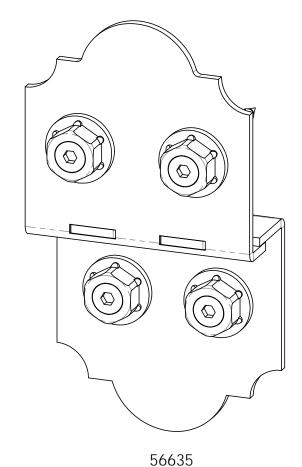





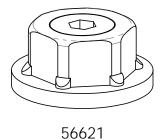










OZCO

Laredo Sunset vs. Ironwood

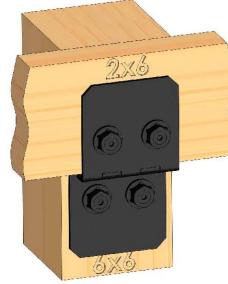

Ironwood (517XX series)

2 great styles same functionality

choose your connection lifestyle

both styles available for most products




Laredo Sunset (566XX series)










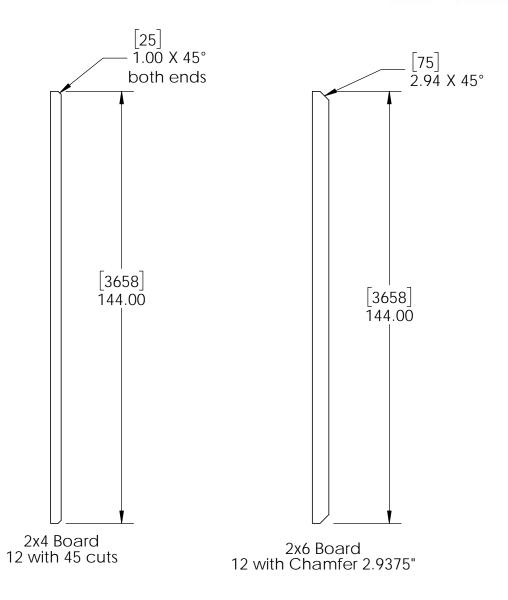

cutlist






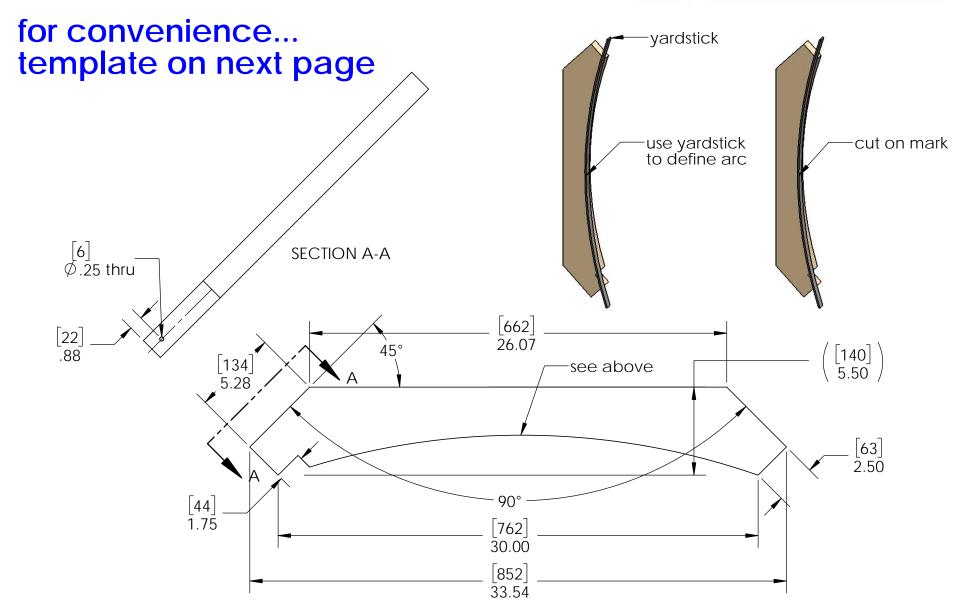

3 knee brace





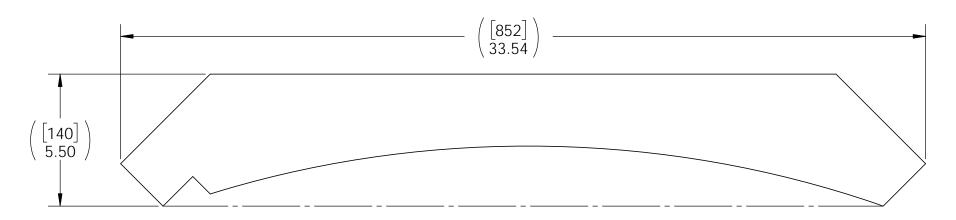


print 4x make from 2x6

3 knee brace Template (scale 1:4)





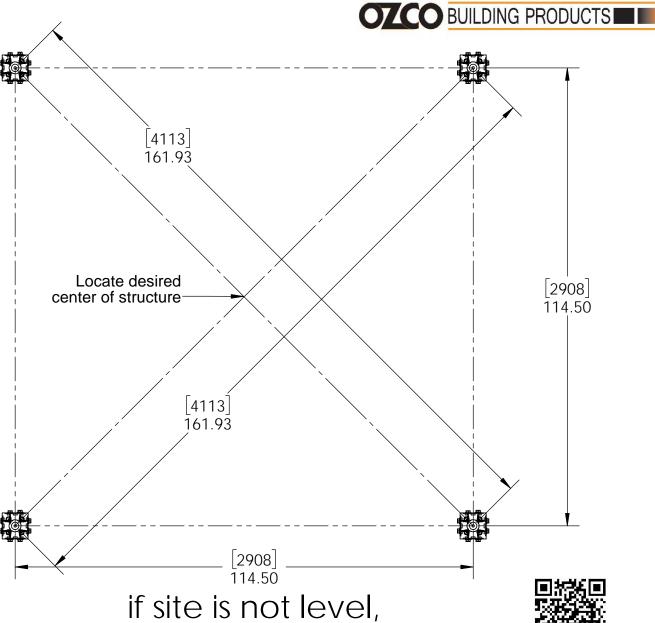












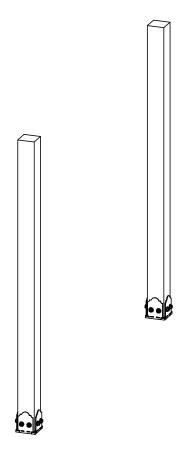


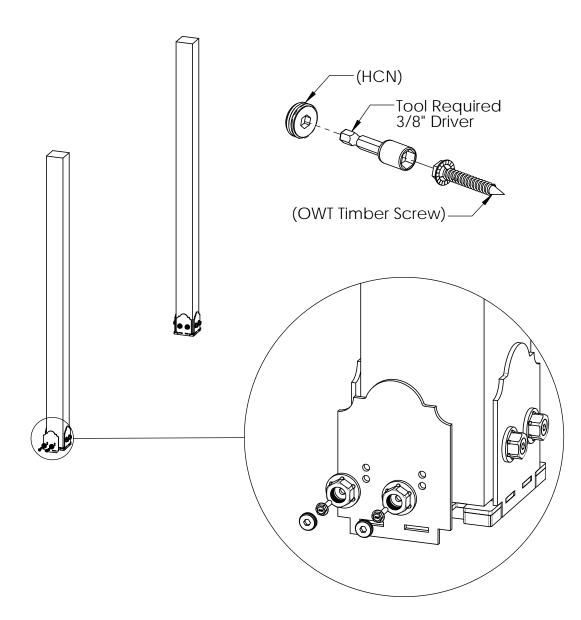

step 1

OZCO Project #311 - 12x12 Pergola Patio Shade Structure A

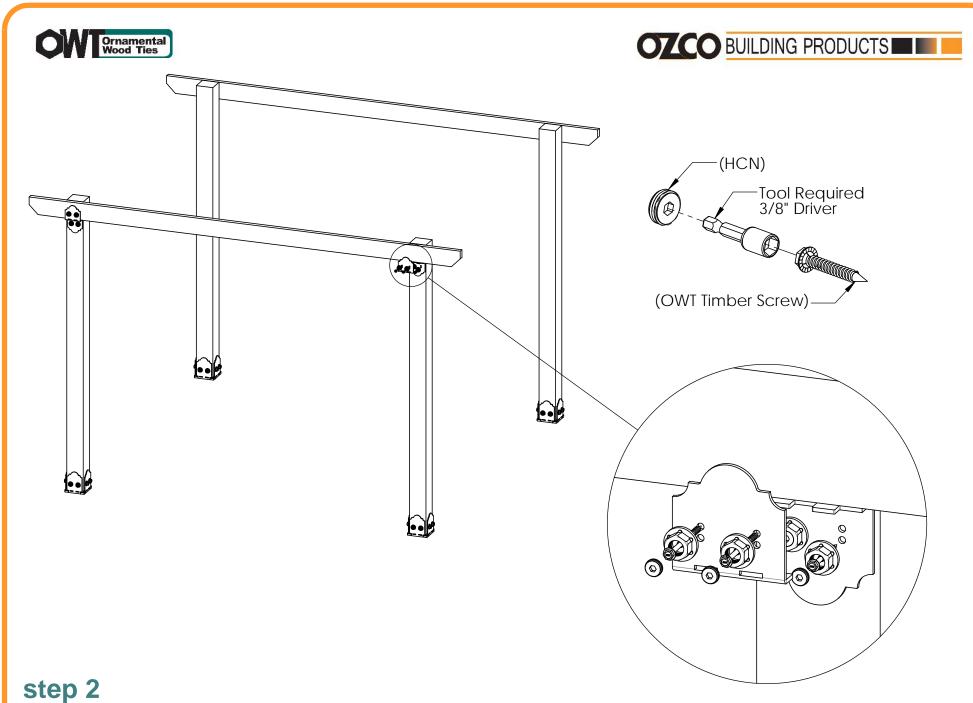


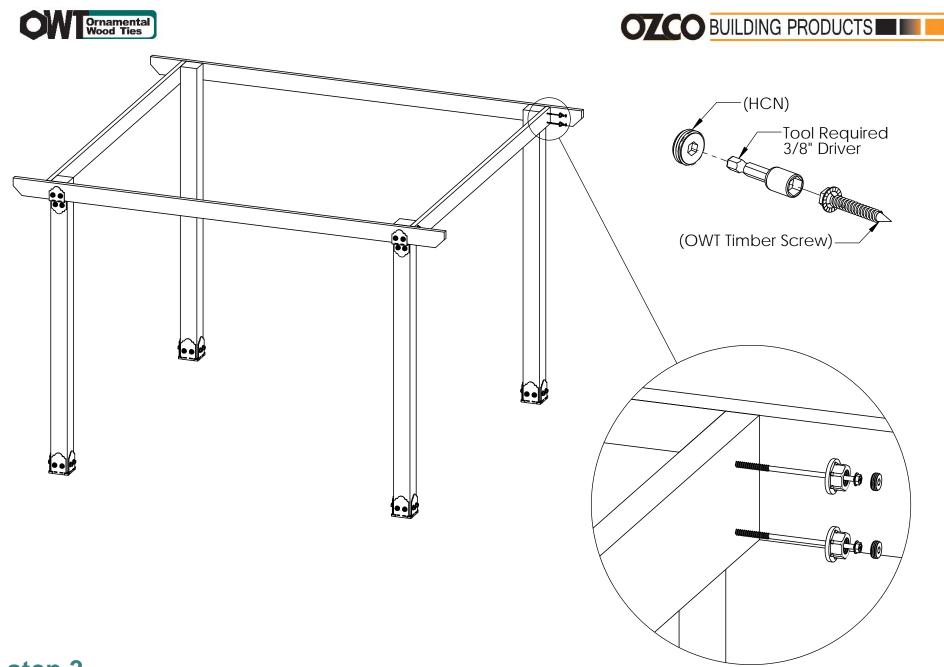

step 3





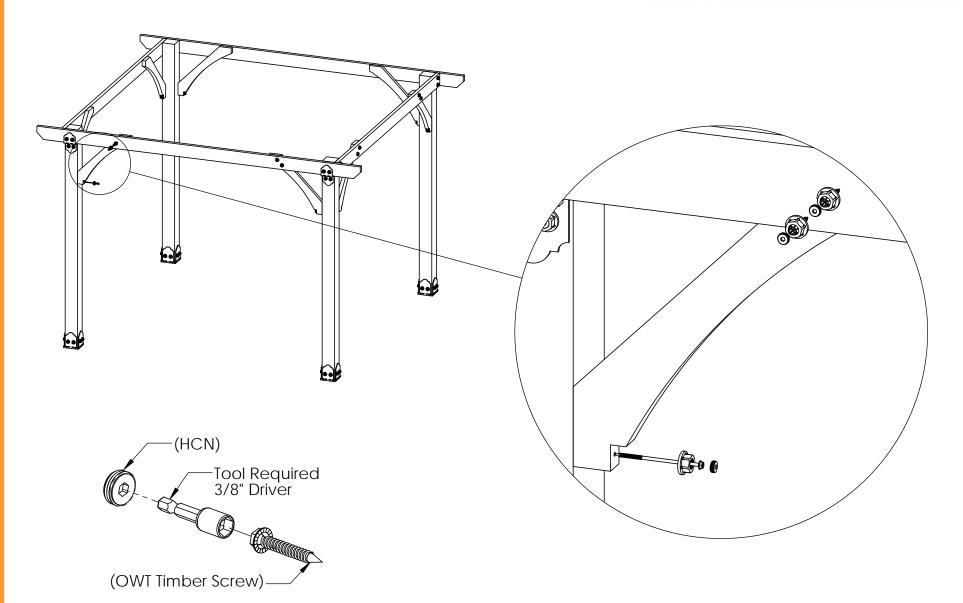

step 4



