


### **Decorative Barrier Stone Mounted or In Ground Installation**

#317

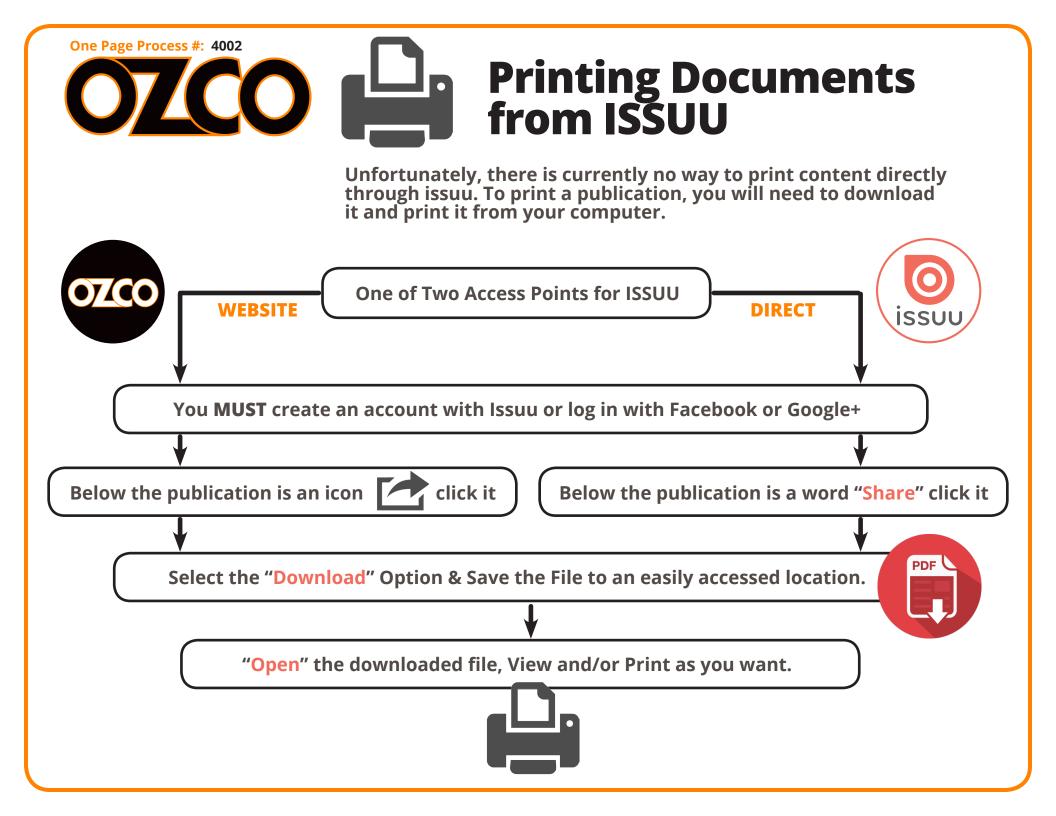










## **Overview**

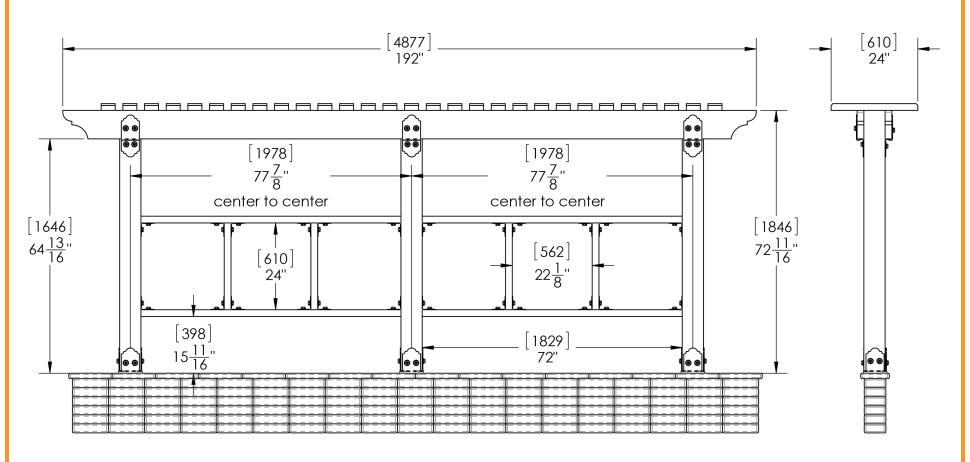


**Stone Mounted** 





## **Overview**

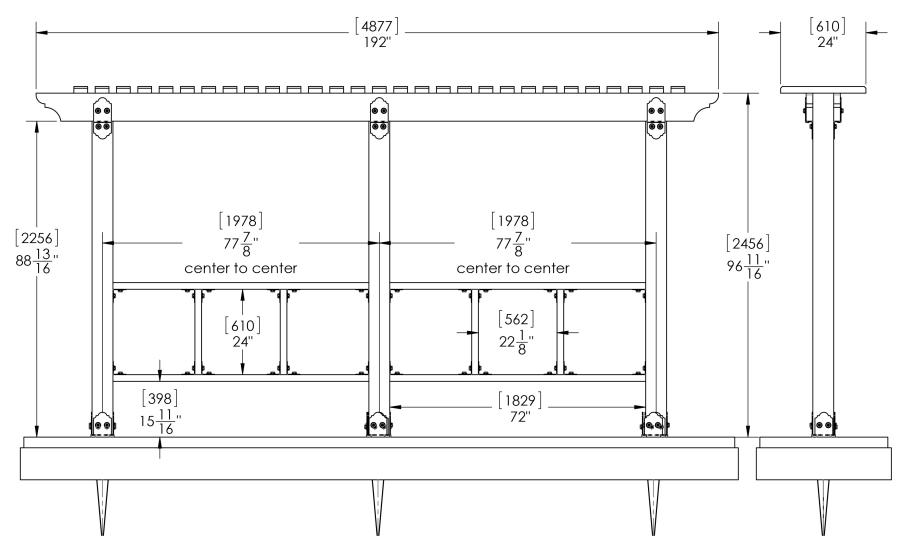

In ground installation






## **Bill of Materials**


Substitute Item 1 with 56633 ground installation


ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	3	56608	Assembly, 6x6 Post Base
2	3	56618	Assembly, 4" Standard Rafter Clips
3	3	56610	8" Post to Beam
4	3	N/A	6x6 Cedar Post, See Cutlist
5	2	N/A	2x8 Cedar Board, See Cutlist
6	4	N/A	2x6 Cedar Board, See Cutlist
7	4	N/A	2x6 Cedar Board, See Cutlist
8	29	N/A	2X4 Cedar Board, See Cutlist
9		N/A	Nails or Screws

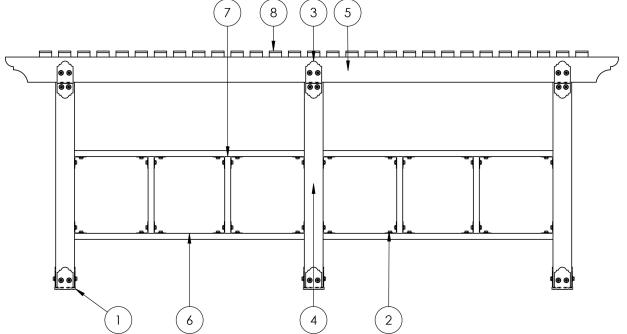





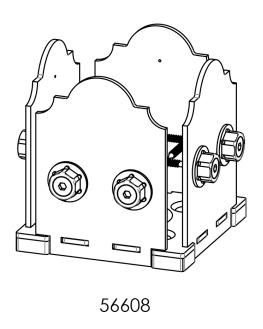

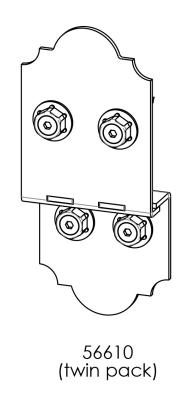



## Visit Website for installation instructions













## **Cut List**

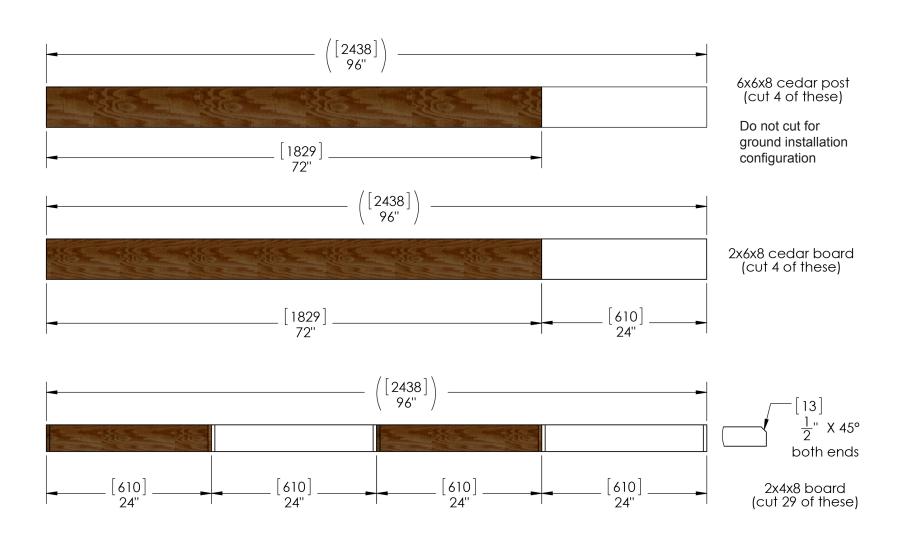








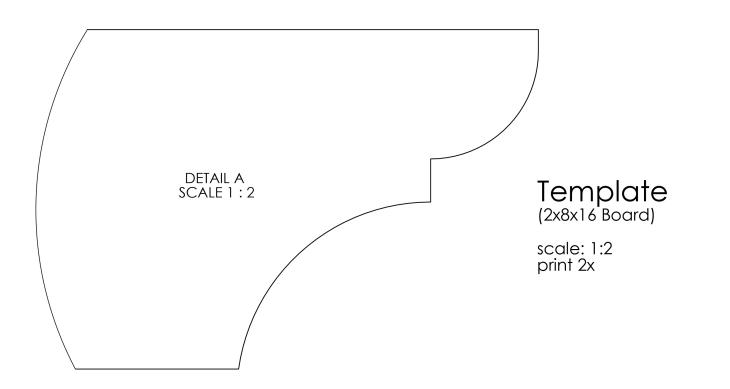







## Step 1

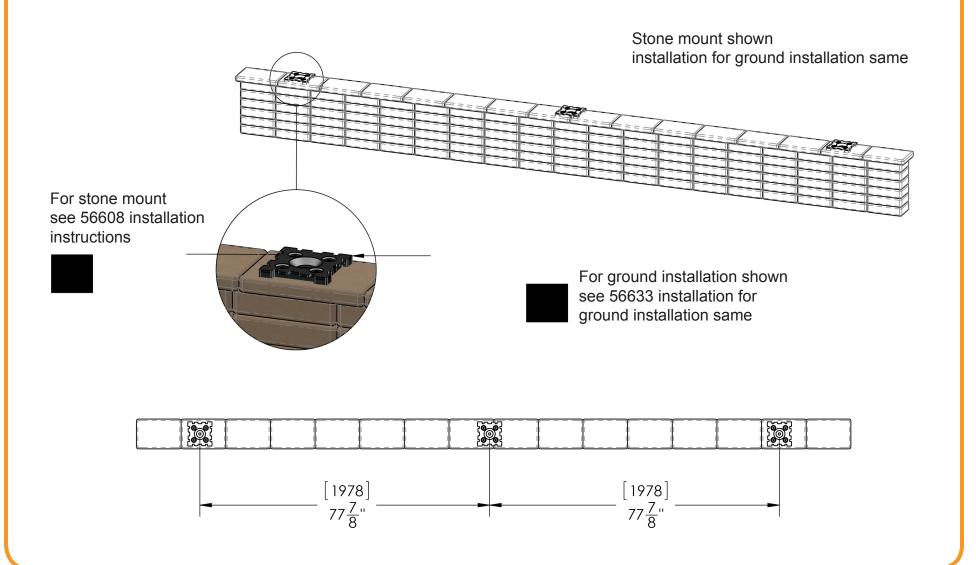

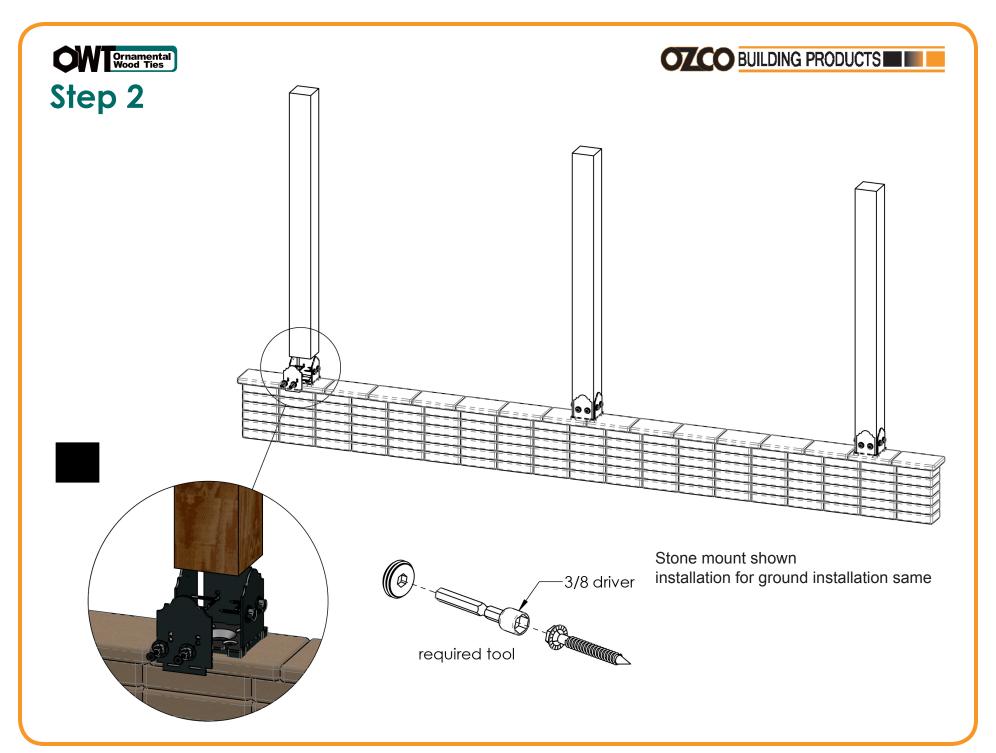


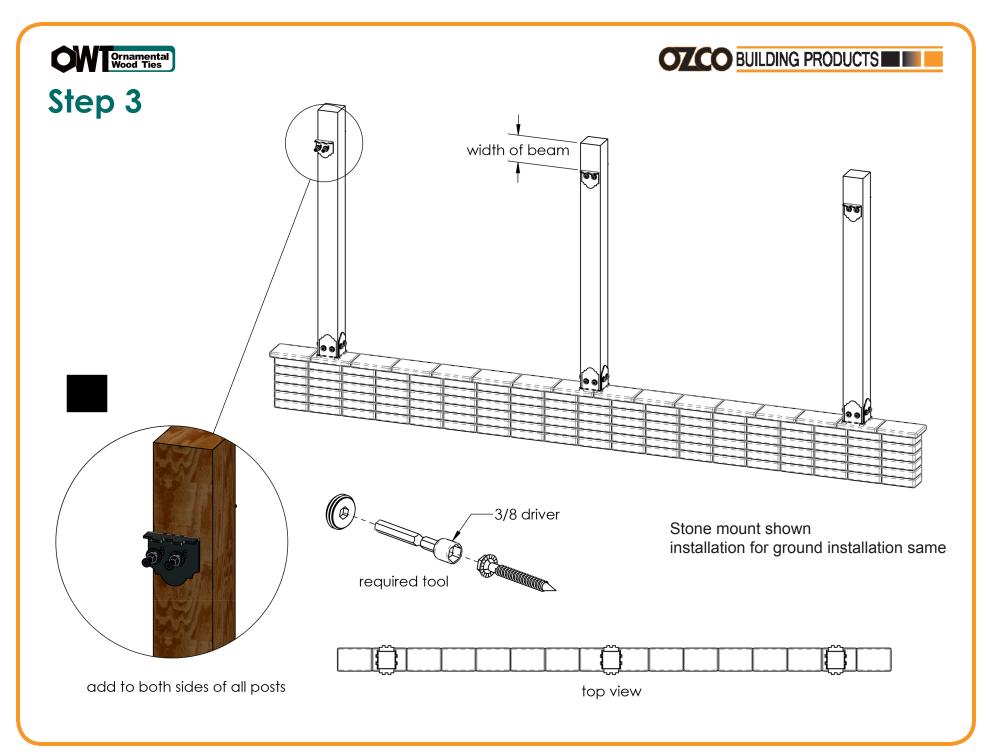



## OZCO BUILDING PRODUCTS

# Step 4

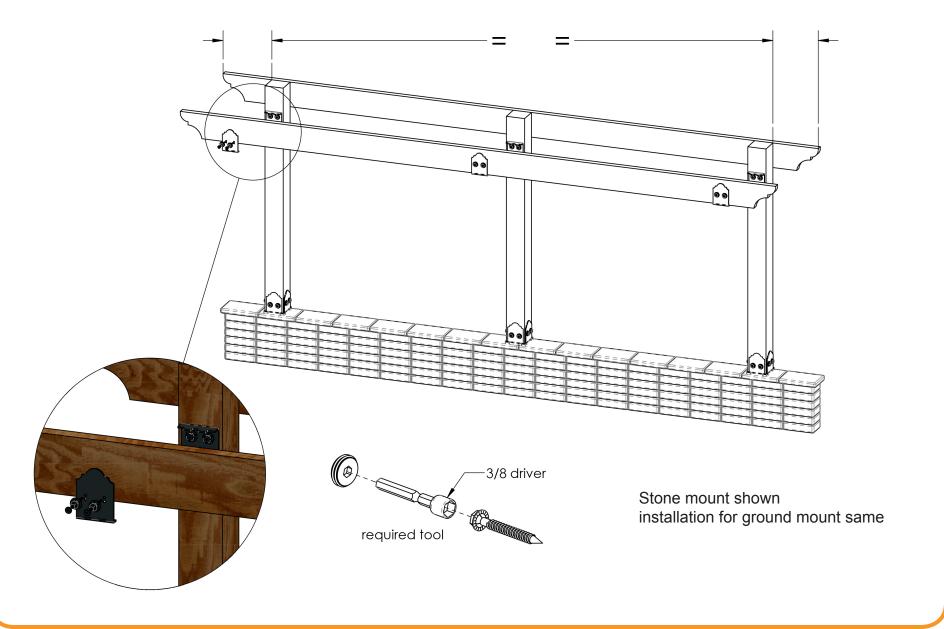





## OZCO BUILDING PRODUCTS

Step 5

Stone mount shown installation for ground installation same

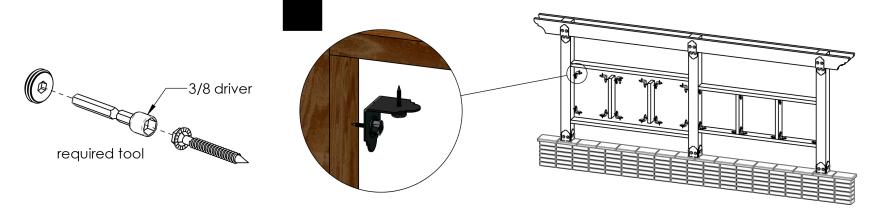

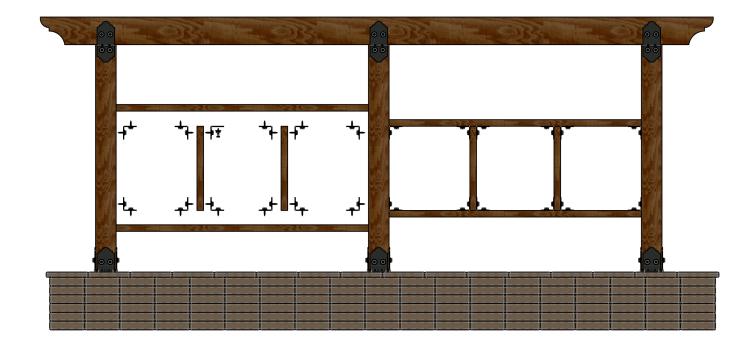





#### Secure with nails or screws

