

OZCO Project #412 - Cedar Board on Board Gate Ornamental









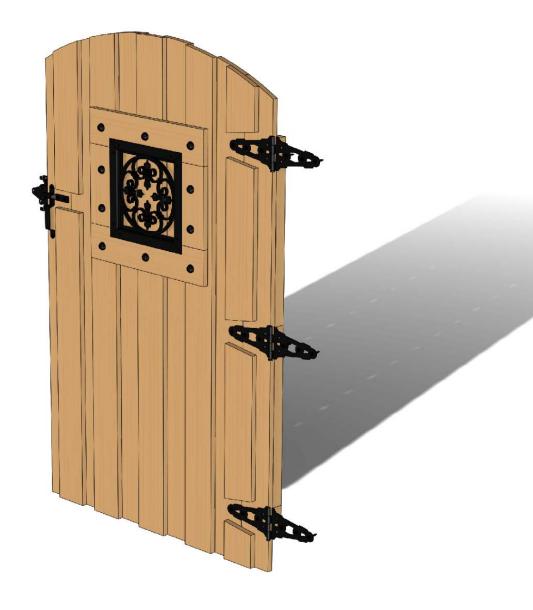




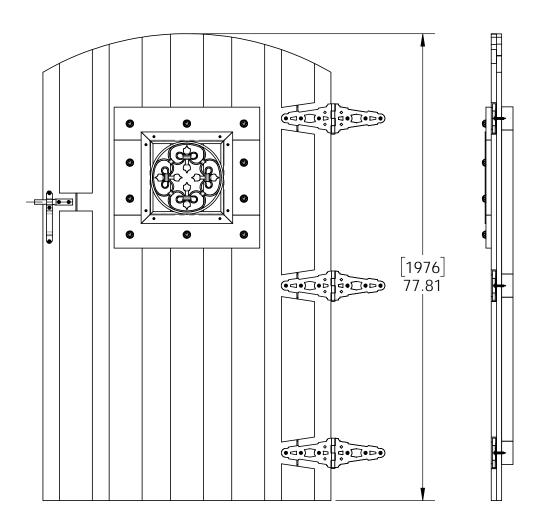

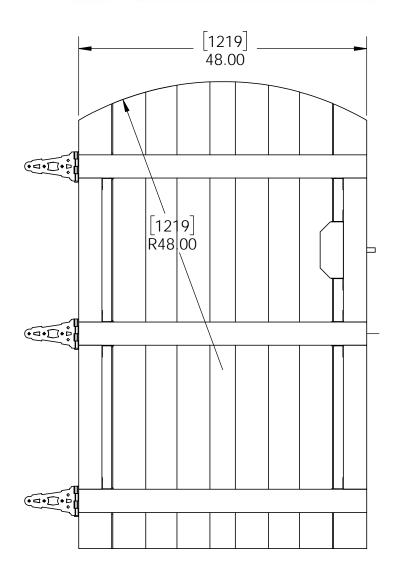

Overview



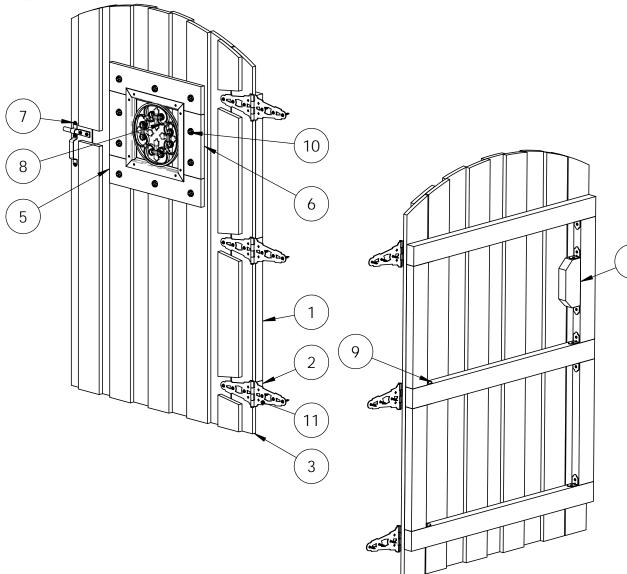


ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	4	2x4 Cedar Board	2x4x24.00
2	3	2x4 Cedar Board	2x4x48.00
3	11	1x6 Cedar Board	1x6x96.00
4	1	2x4 Cedar Board	2x4x9.38
5	2	1x6 Cedar Board	1x6x24.25
6	2	1x6 Cedar Board	1x6x12.50
7	1	56656	Standard Latch Kit (S- LATCH)
8	1	56658	Assembly, 15-1/4" x 15- 1/4" Scroll Accent
9	1	56617	2" Standard Rafter Clip (RC-LS-2)
10	10	56622	1-1/4" Hammered Dome Cap Nut
	0.04	56625	OWT Timber Screw 1- 3/4"
11	1	56654	Strap Hinge Kit (S- HINGE)

Bill of Materials

Ornamental Wood Ties





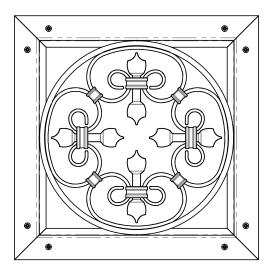


56658






56617






56653



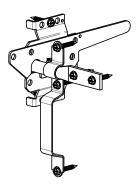

56656




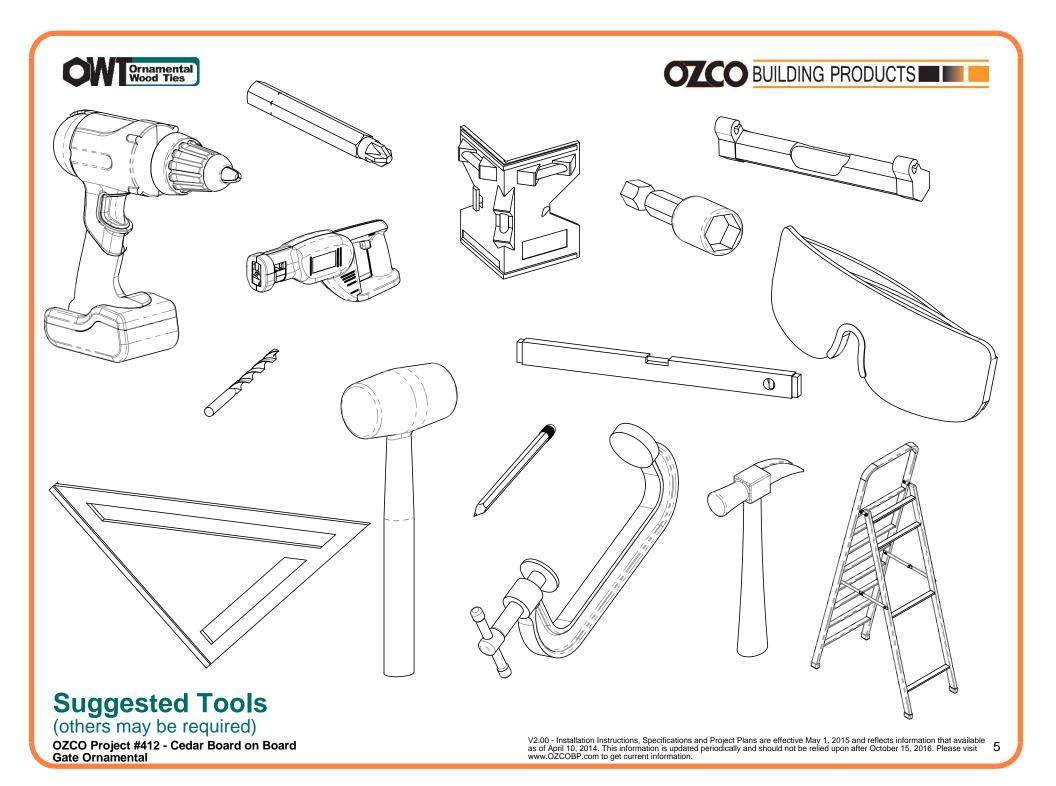









Shadow Box Trim

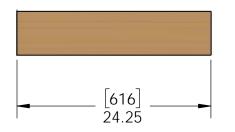

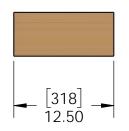

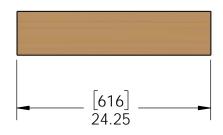


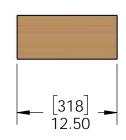


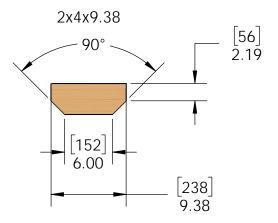






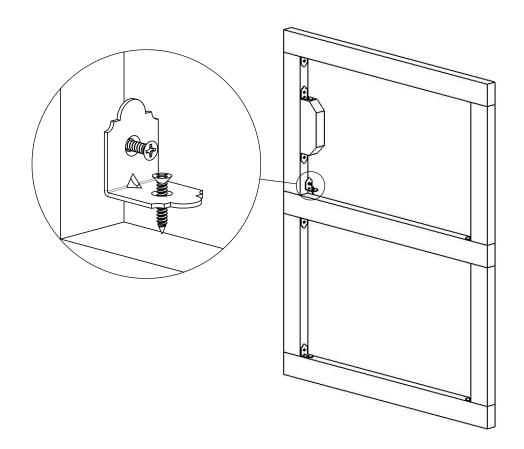

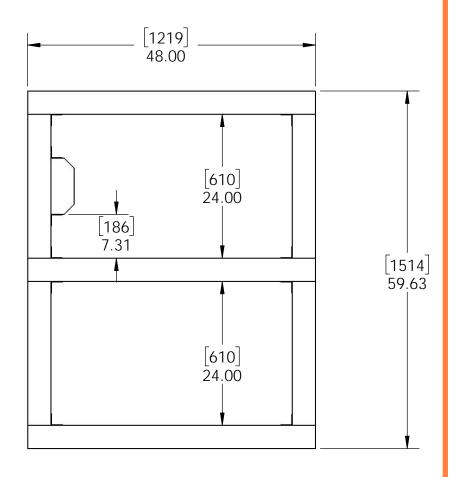






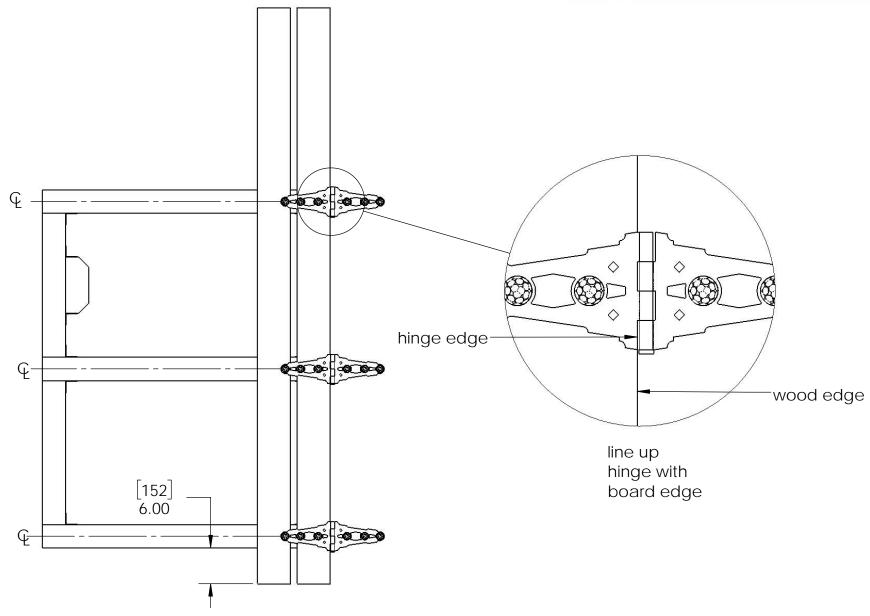

step 2






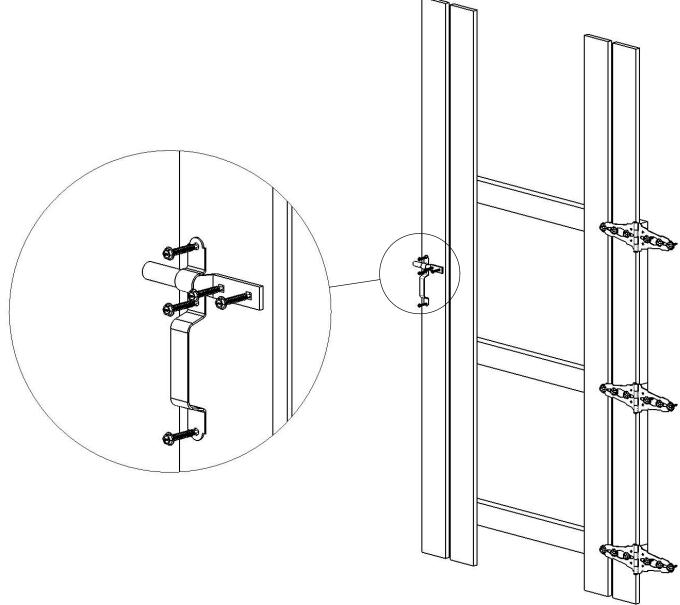


step 3





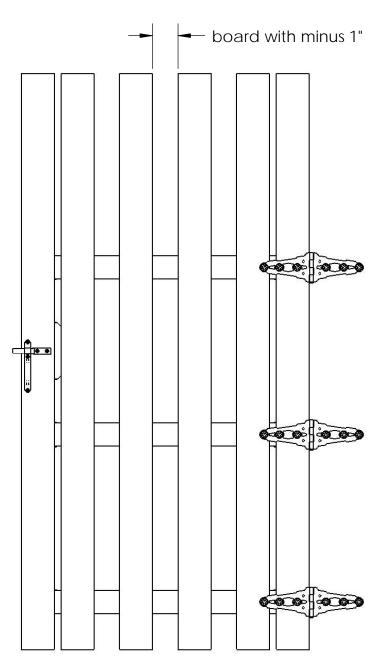


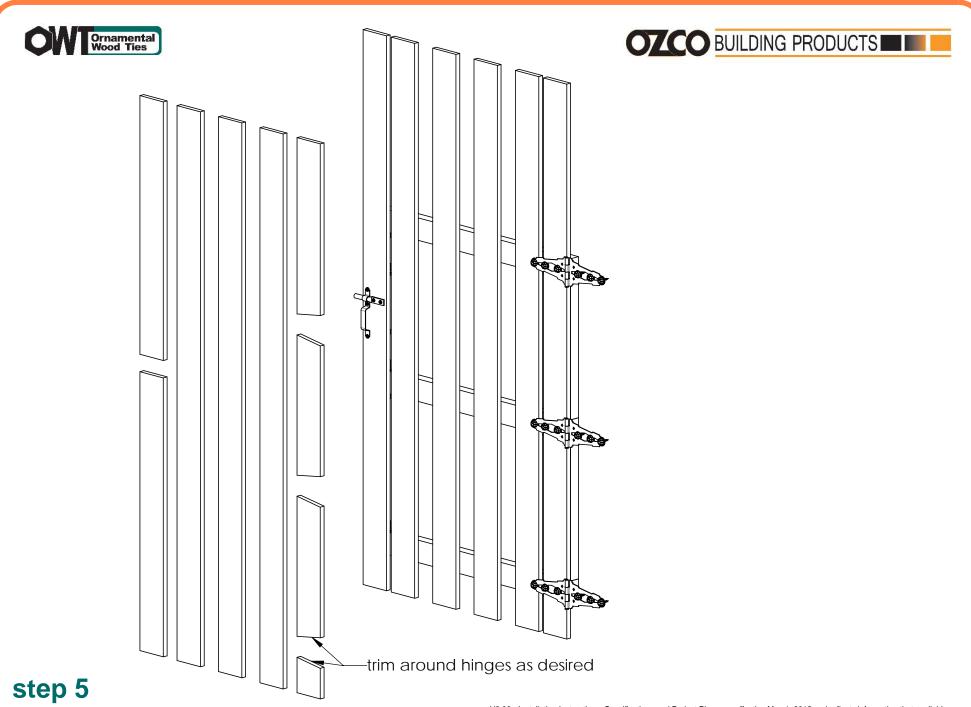






- How To Draw an Arc Cutline:
 locate center of arc and mark with push pin
 attach string to push pin and pencil as shown
 mark cutline
- cut with appropriate saw

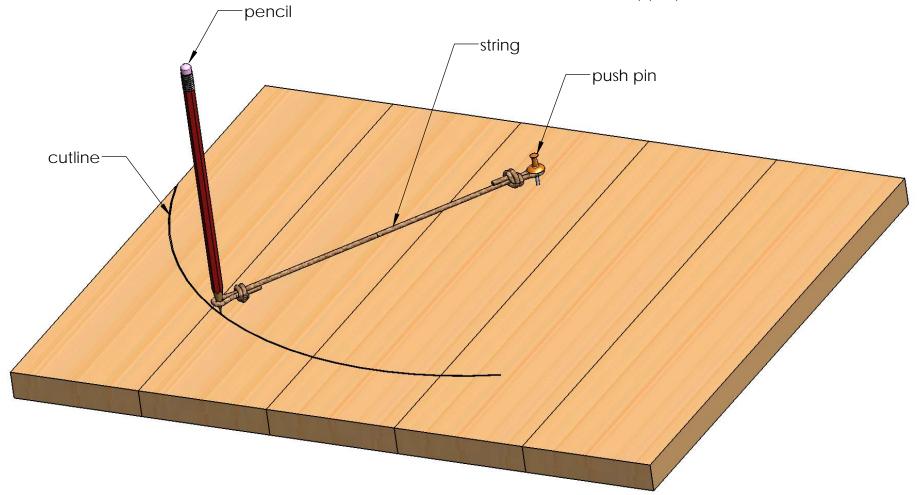

How To Draw an Arc Cutline





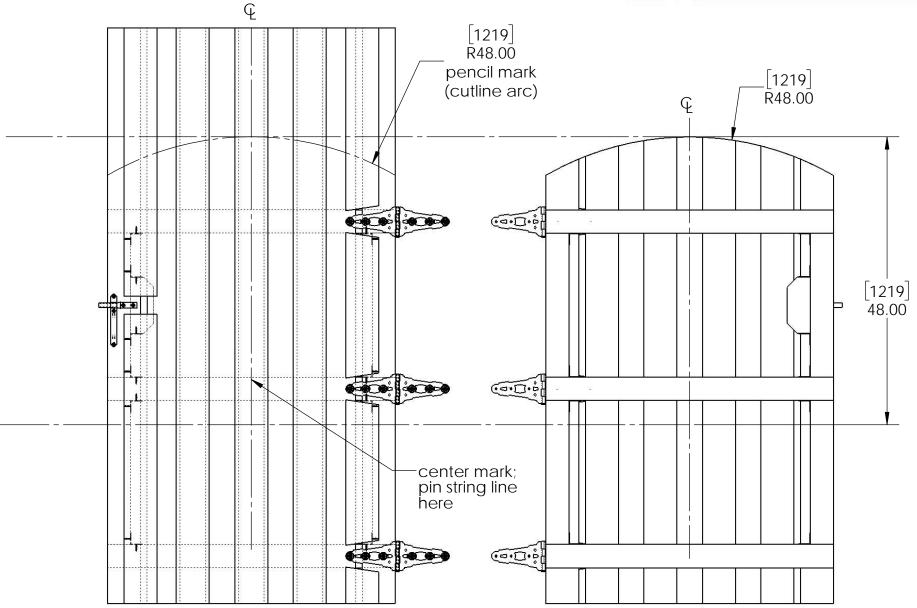

step 5





