



56617

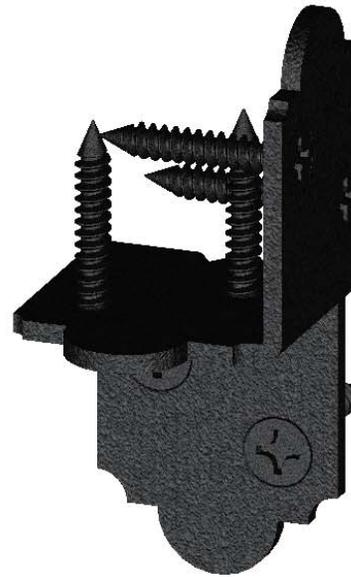


51717



56638

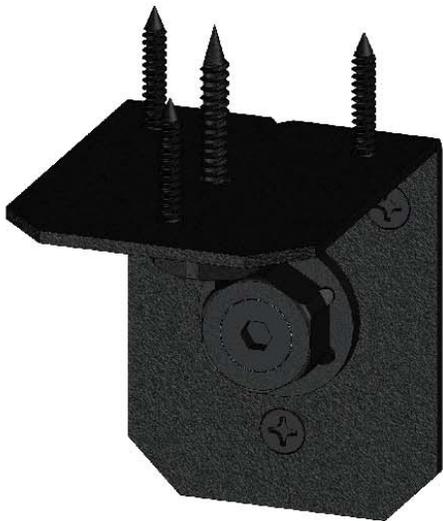


51718

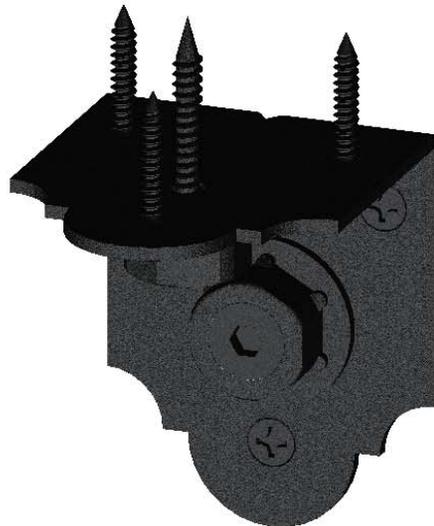

56618

### Installation Instructions, Rafter Clips

- 56617 2" Standard (RC-LS-2)
- 51717 2" Standard (RC-IW-2)
- 56618 4" Standard (RC-LS-4)
- 51718 4" Standard (RC-IWS-4)
- 56638 2" High Velocity (RC-LS-HV-2)

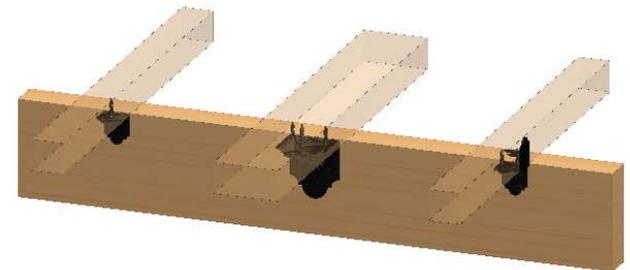


Typical Installation  
Laredo Sunset shown

# Laredo Sunset

vs.

# Ironwood

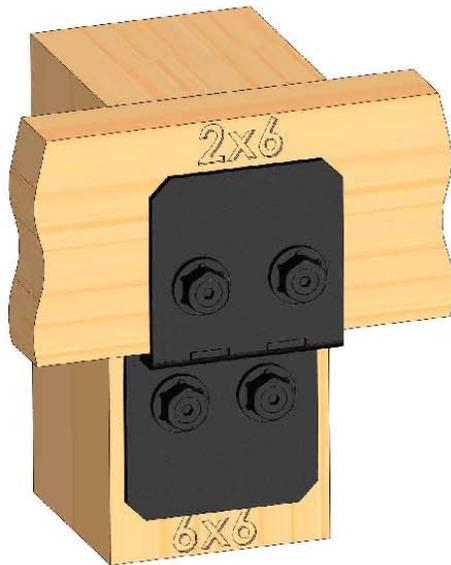

Ironwood  
(517XX series)

2 great styles  
same functionality








Laredo Sunset  
(566XX series)

choose your connection lifestyle

both styles available for most products





OZCO BUILDING PRODUCTS

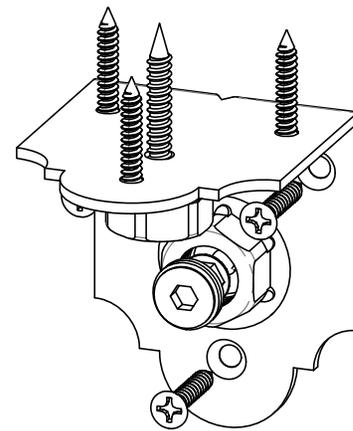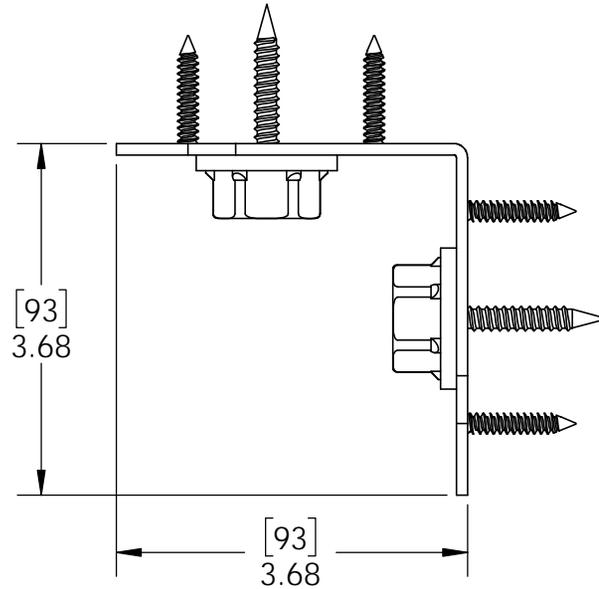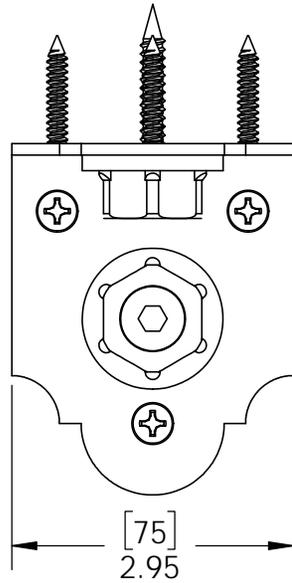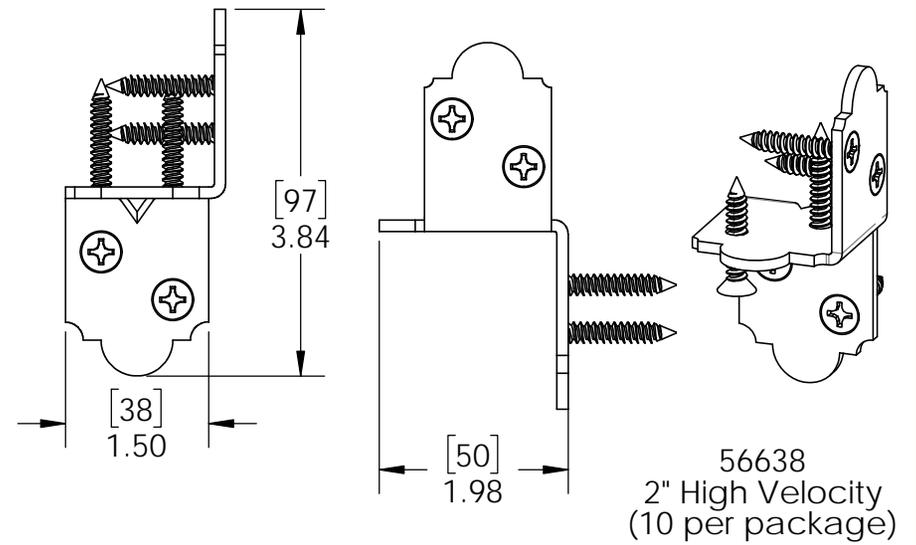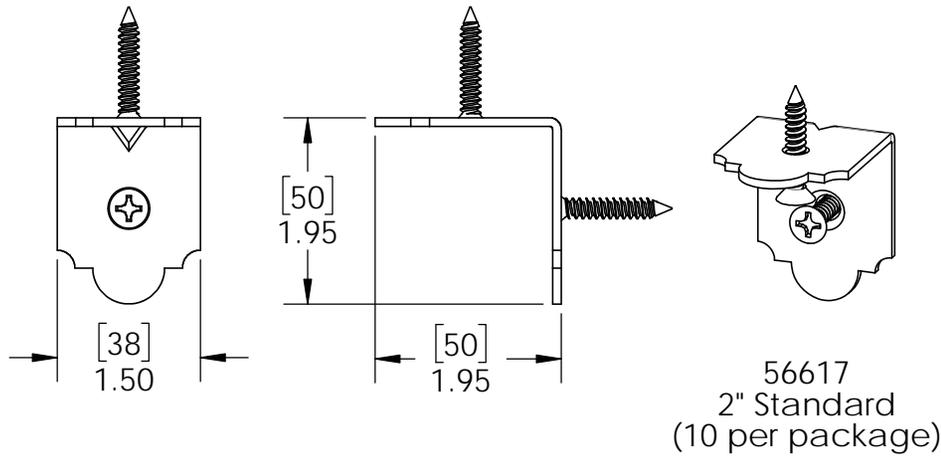



56618  
4" Standard  
(10 per package)

**Laredo Sunset**  
Installation Instructions, Rafter Clips

51717  
2" Standard  
(10 per package)

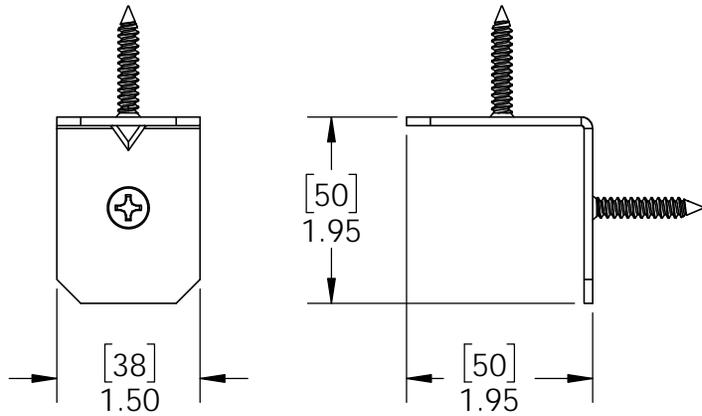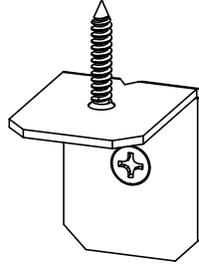


51718  
4" Standard  
(10 per package)

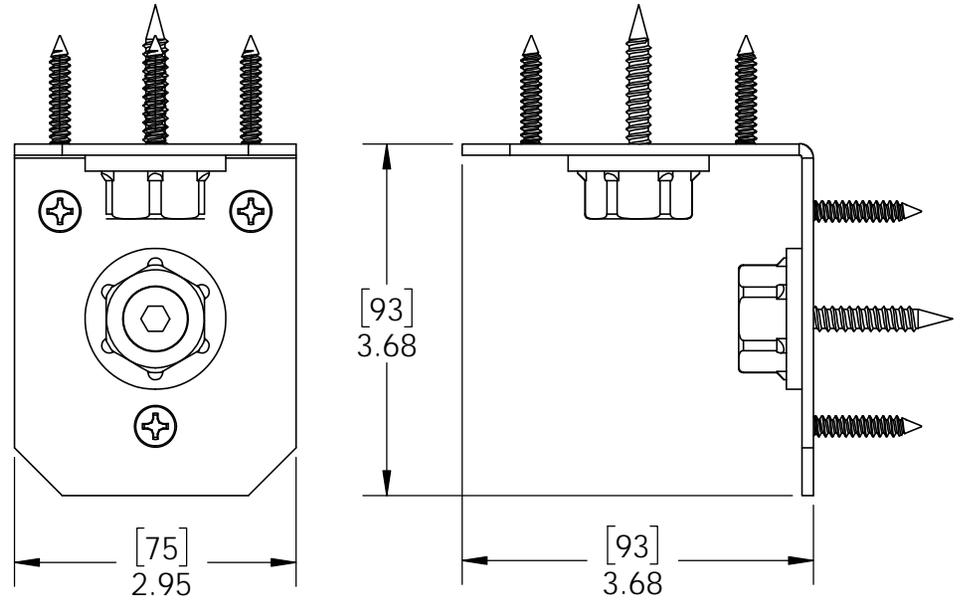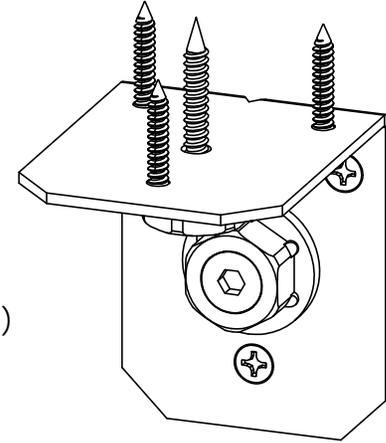

## Ironwood


### Installation Instructions, Rafter Clips

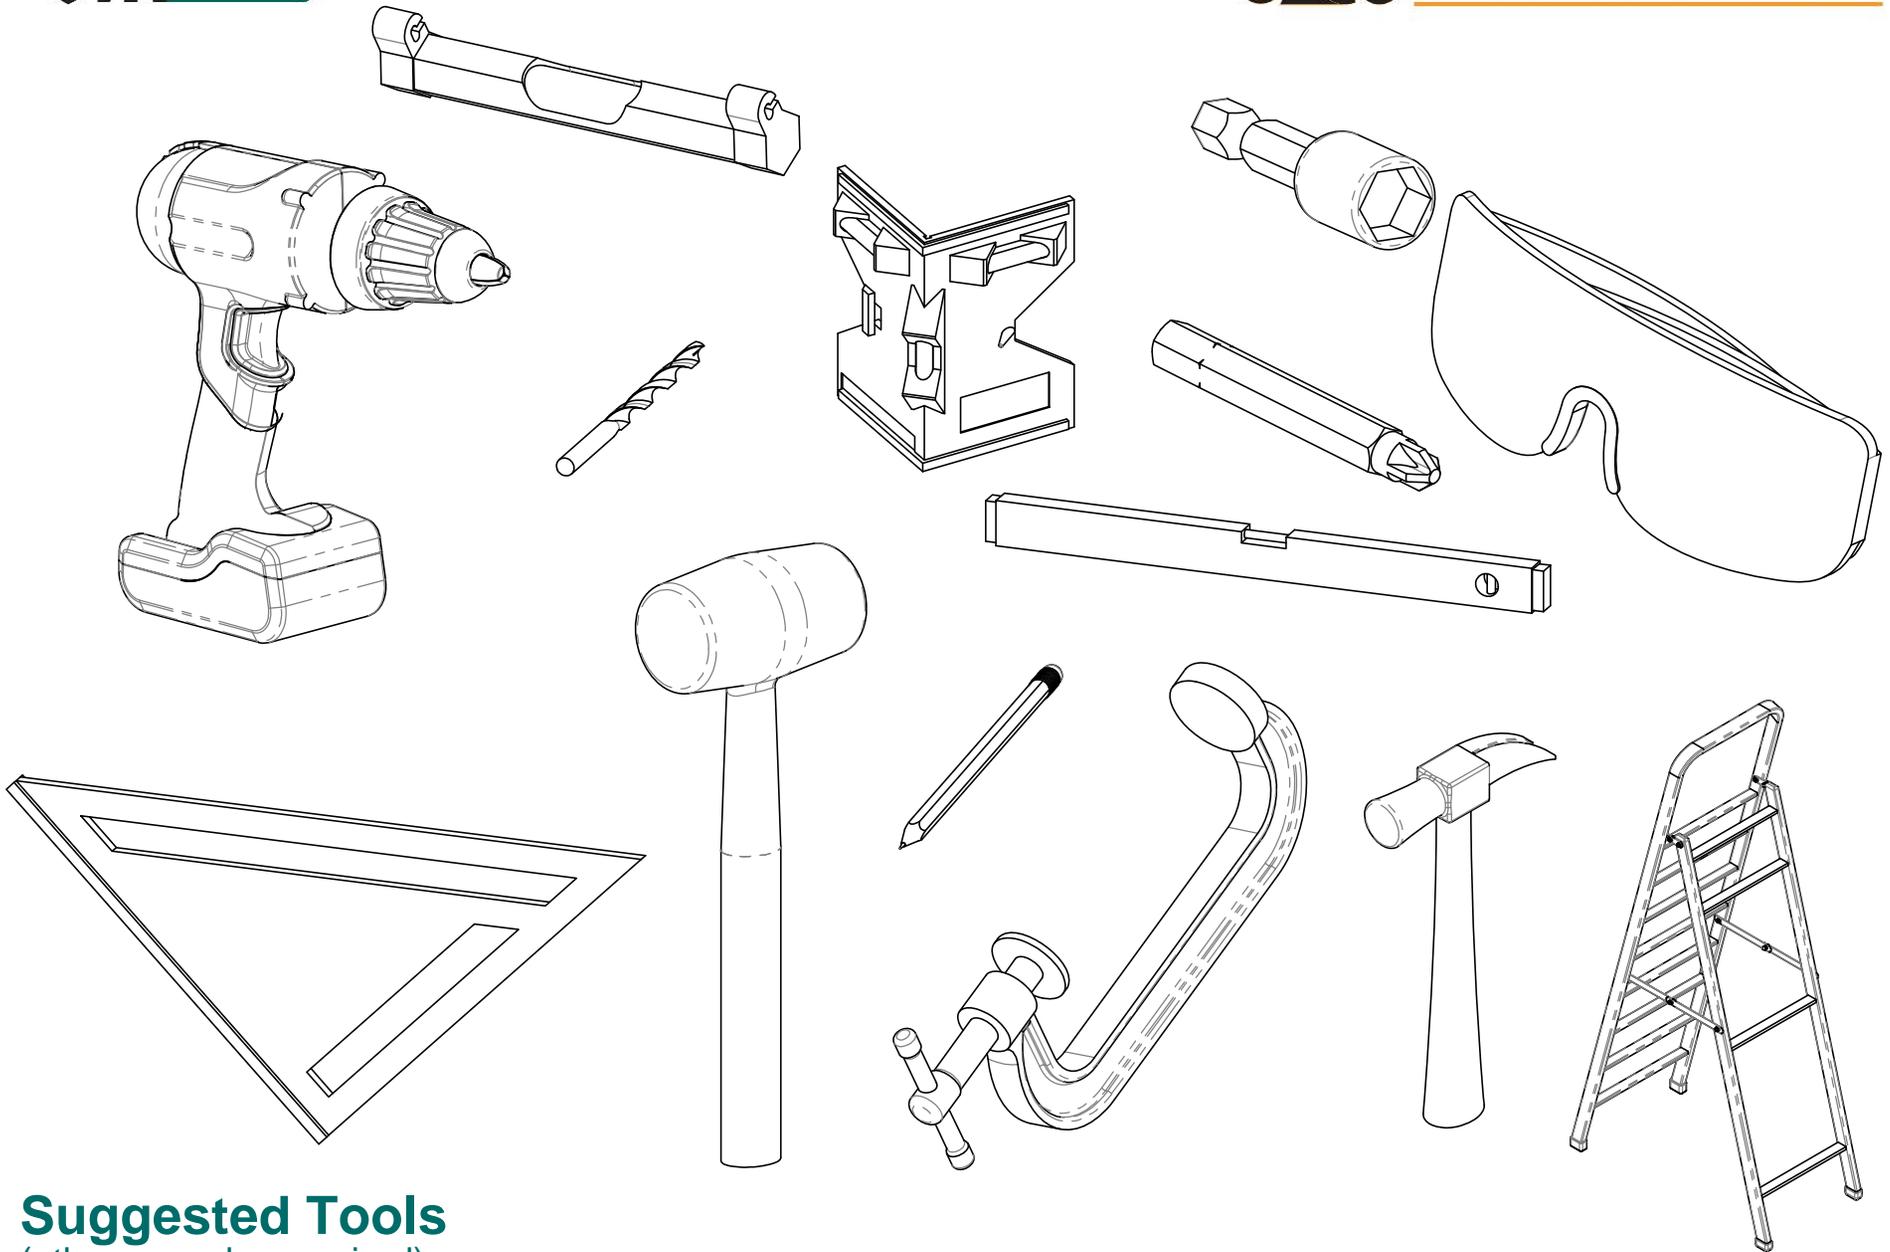

## Suggested Tools


(others may be required)

Installation Instructions, Rafter Clips

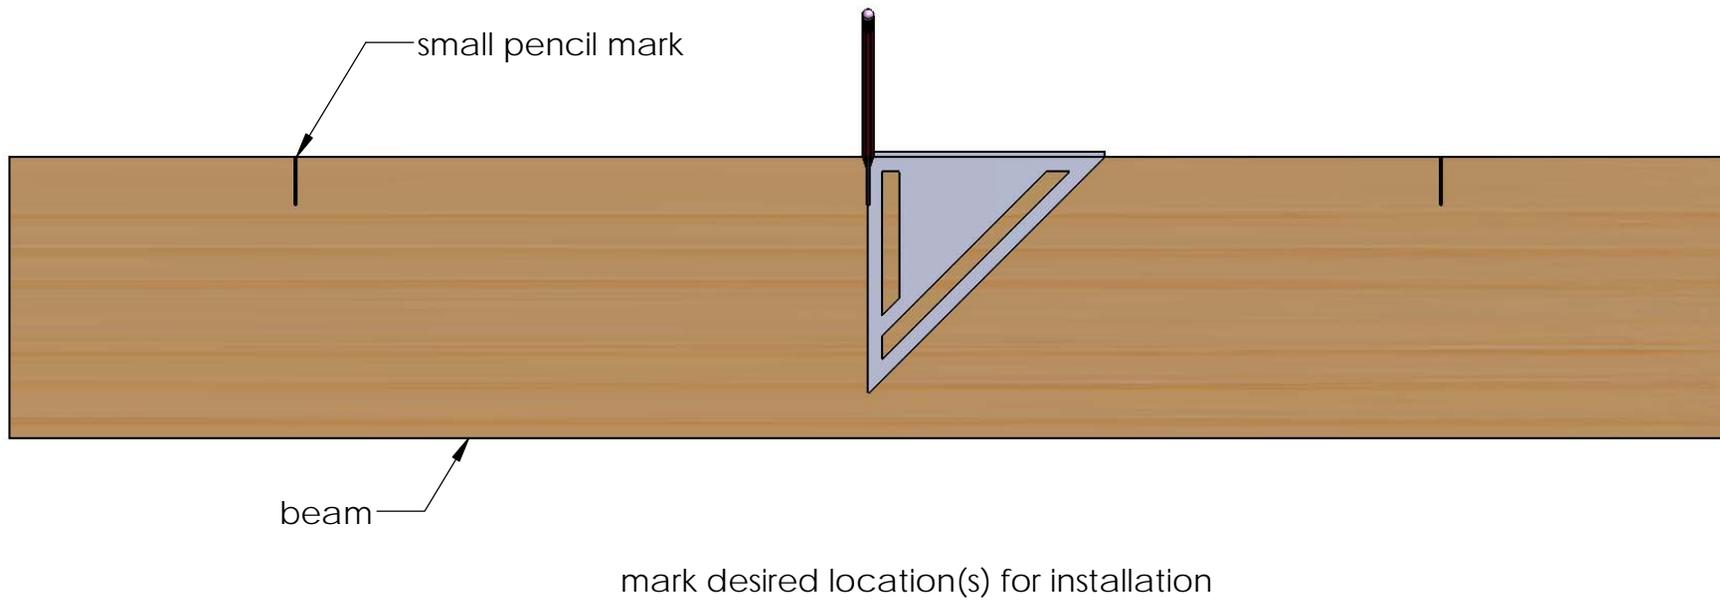


## step 1

### Installation Instructions, Rafter Clips

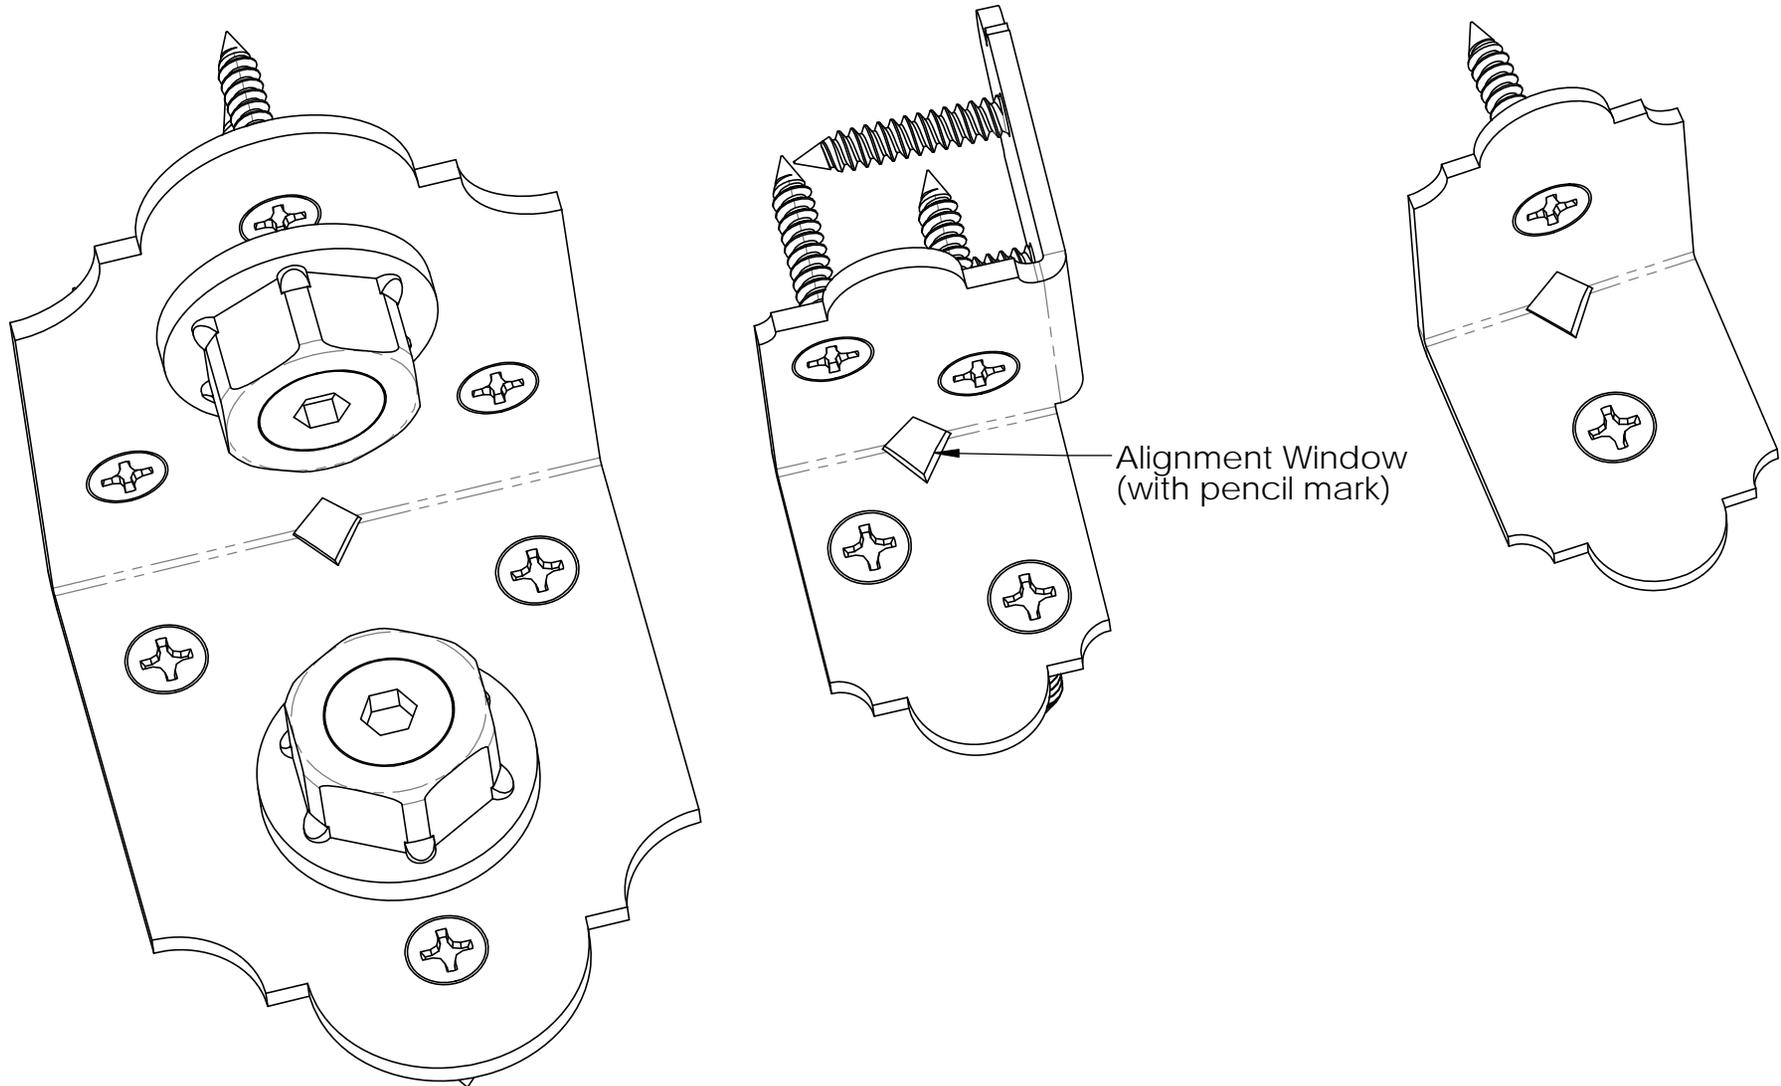

## alignment window



Installation Instructions, Rafter Clips

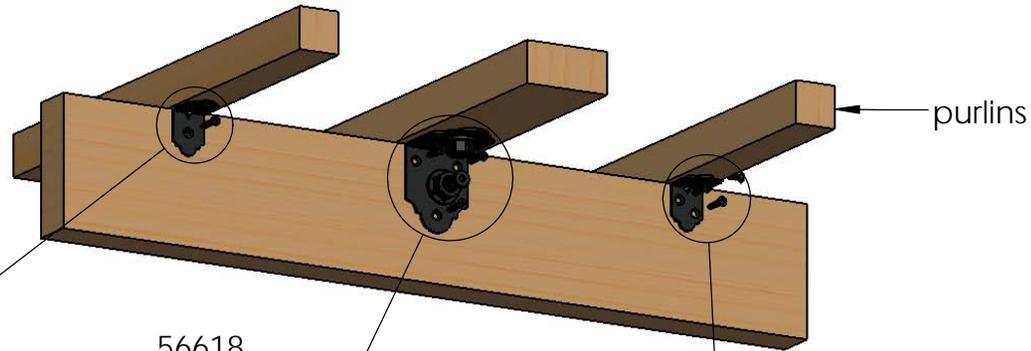

56617  
2" Standard

56618  
4" Standard


purlins

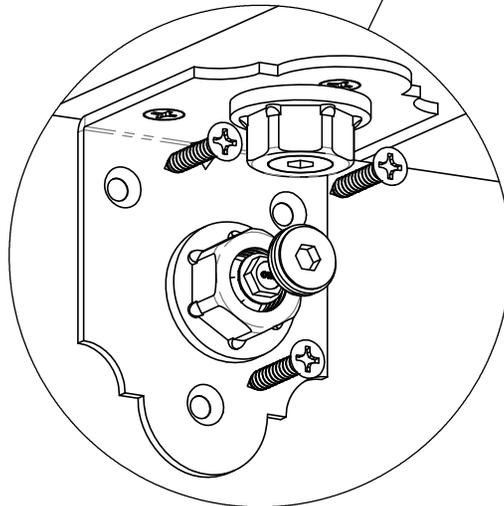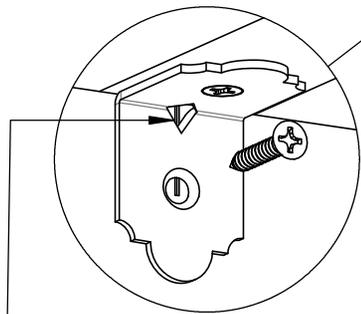


note tab on  
High Velocity  
Rafter Clip

note pencil mark in  
Alignment Window.

center rafter clip on  
pencil mark & secure

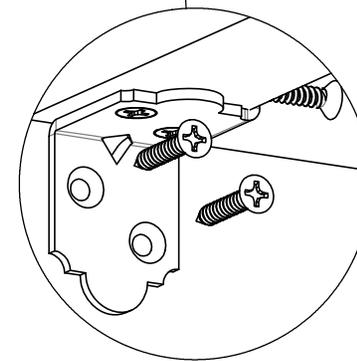

56638  
2" High Velocity

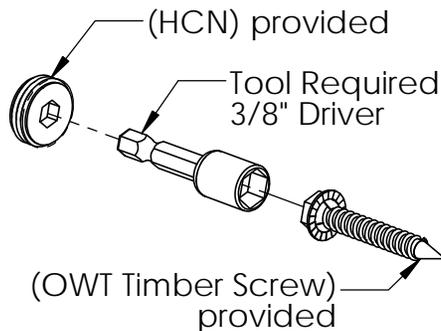

(HCN) provided

Tool Required  
3/8" Driver

(OWT Timber Screw)  
provided

## step 2

### Installation Instructions, Rafter Clips