



Installation Instructions, 4x4 Twin Rail Saddle (56630) 4x4 Single Rail Saddle (56631) 2x4 Top Rail Saddle (56641)







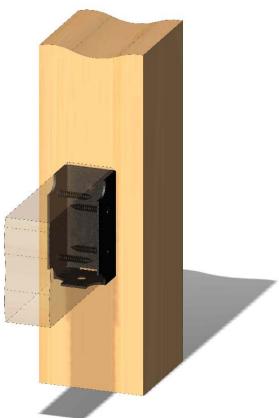







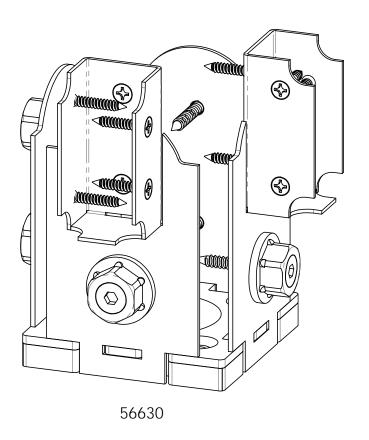

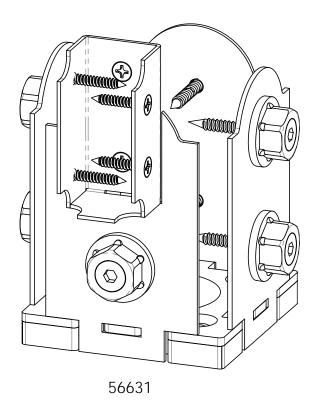




OZCO

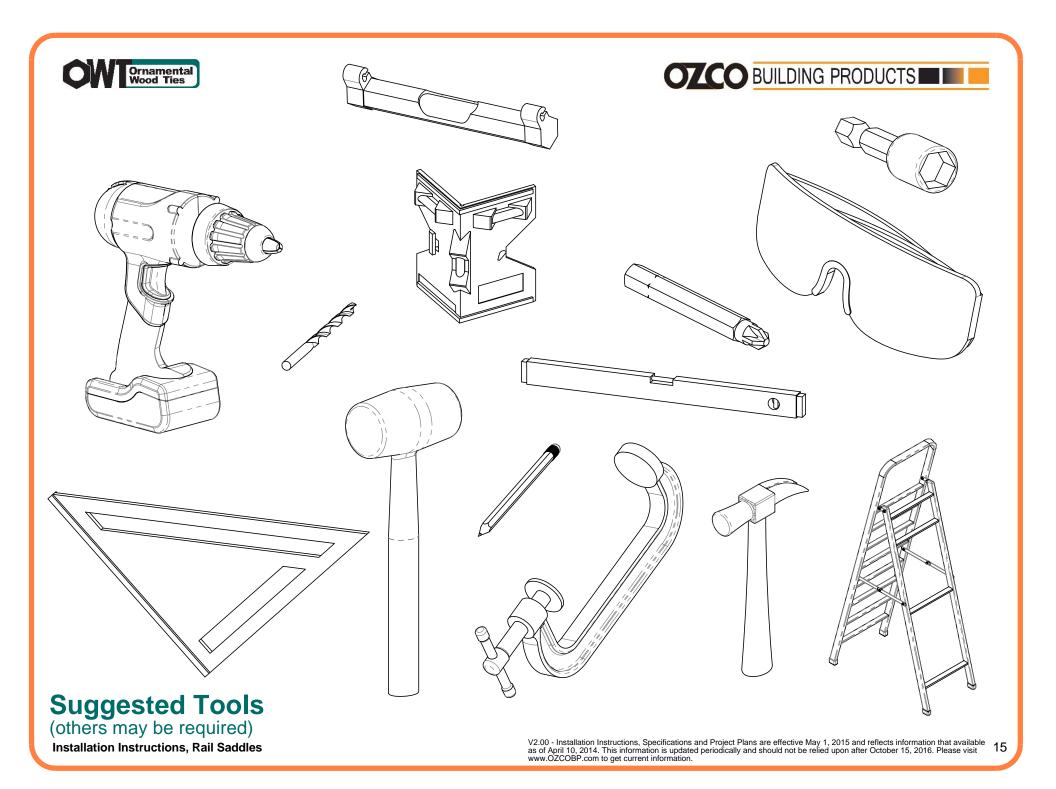







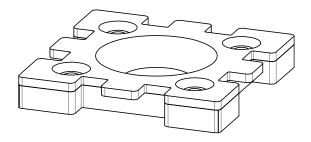

Mount Base to Surface

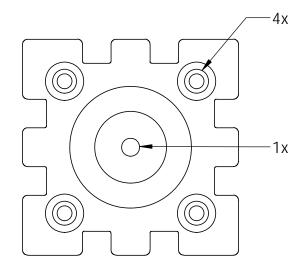


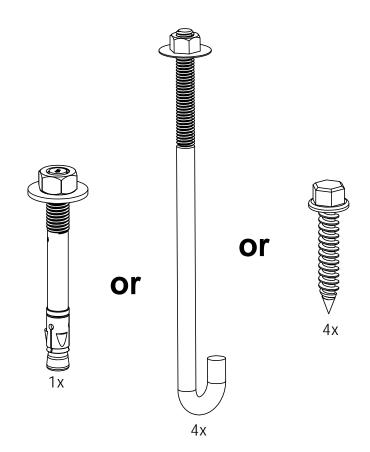

Base Mounting-56630 & 56631 (select fastener that suits your installation)







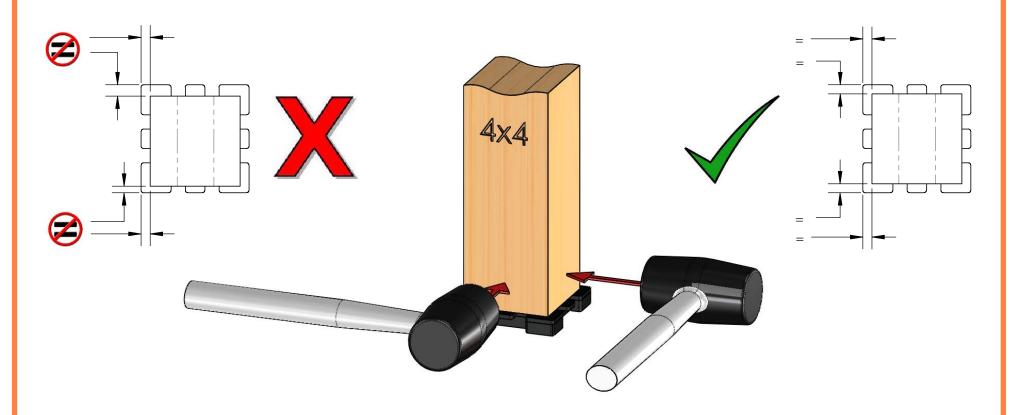


step 1 -56630 & 56631




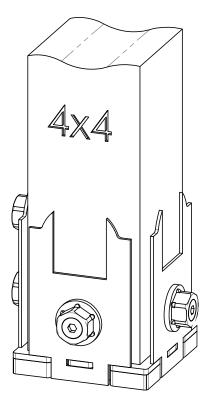

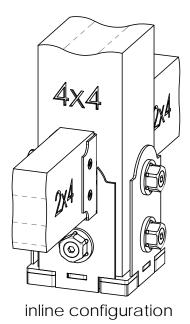

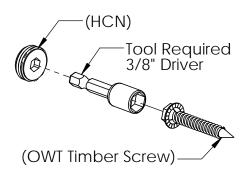



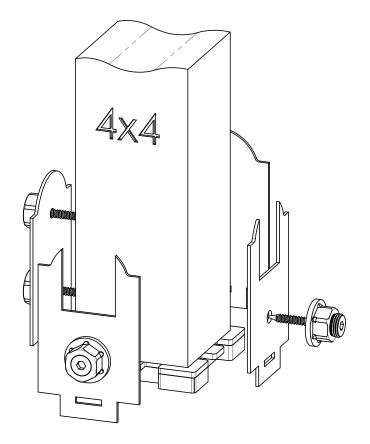





corner configuration





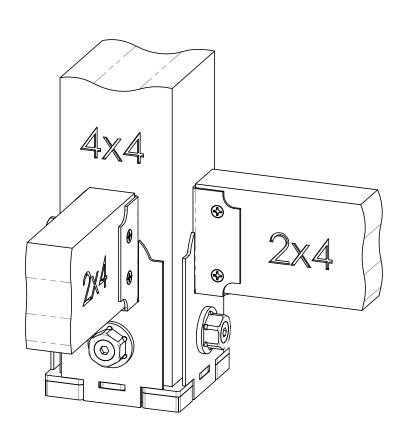


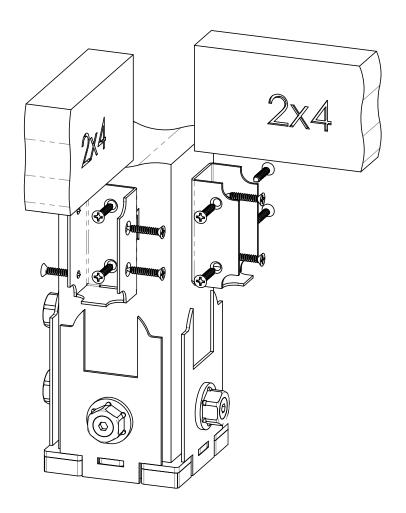



step 3 56630





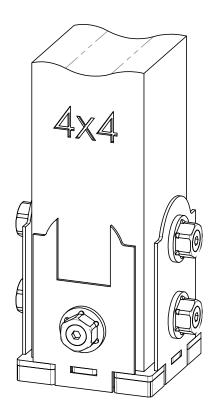

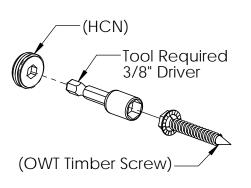


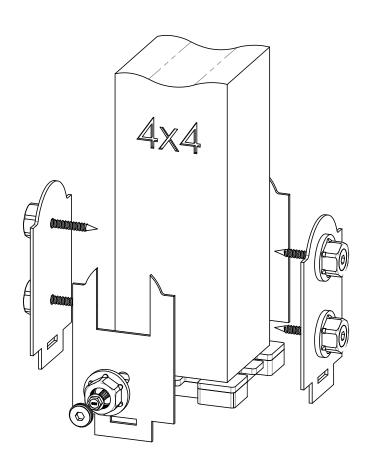


step 2 56631






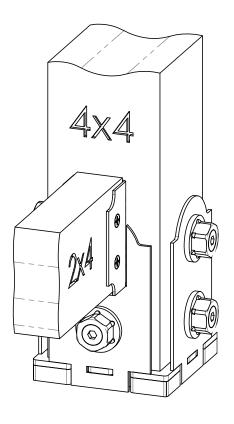

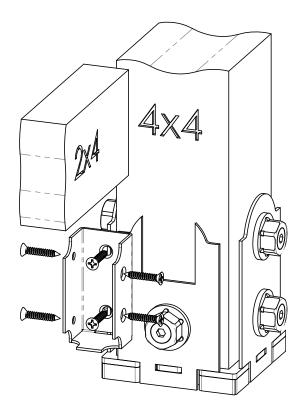






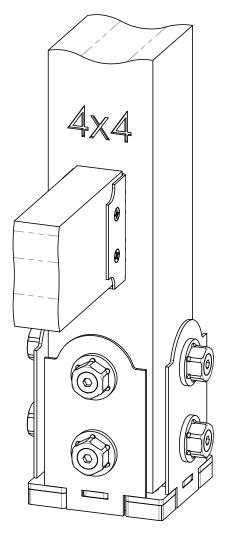


shown with 56607 (sold separately)

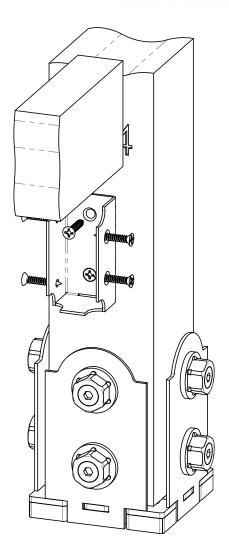

56641 installation






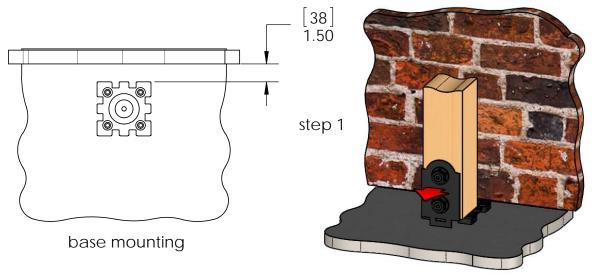



additional instructions

- center post as shown in
- previous steps install 1 compression plate with fasteners
- remove, reposition & reinstall post/compression plate as shown with plate facing wall complete assembly as shown

this procedure applies to all OZCO Post Bases & Post Anchors utilizing compression plates (56607 shown)

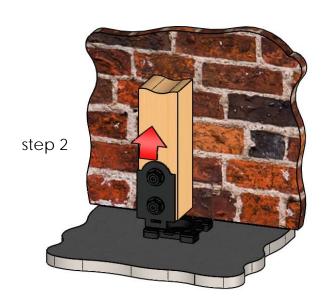

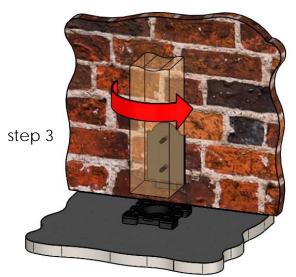


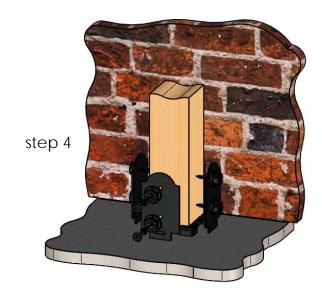


Special Instructions-mounting next to wall





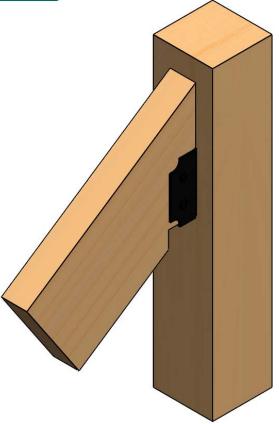


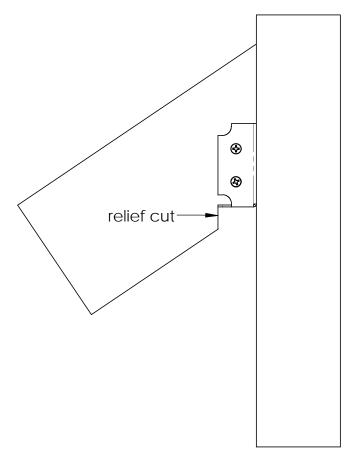

Installation Idea's-56641






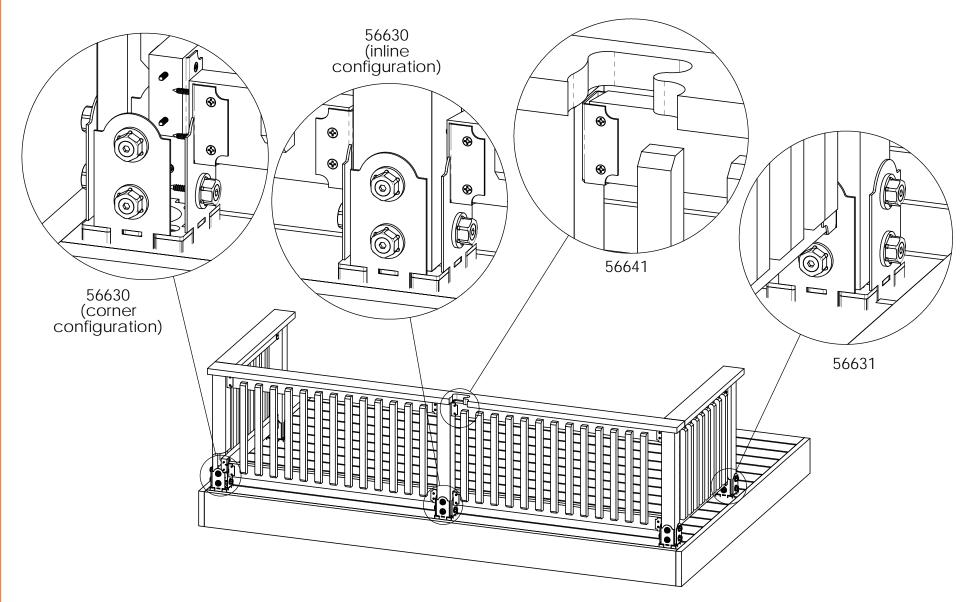


Porch standalone





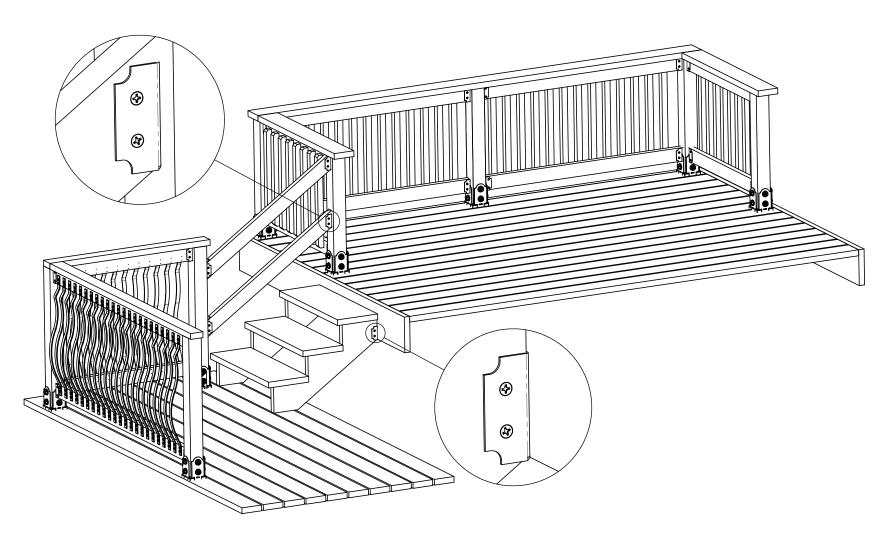

Multi-level

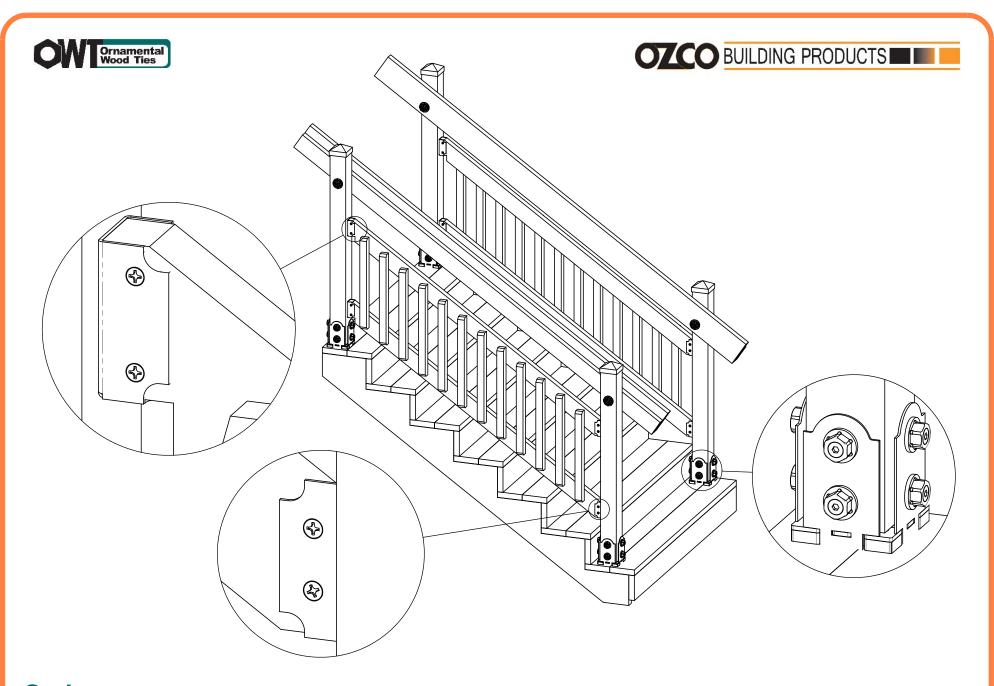

Stairs