

# FUSIONLOC®

Collated Hidden Fastening System


## START UP GUIDE

### Important to Read before Installing


Please follow these important instructions for proper tool setup and usage.

#### 1 INSERT CLIP STRIP FANGS FORWARD


Look for barbs and date code at front of clips

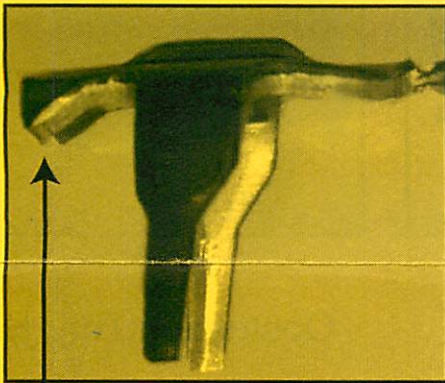

Barb

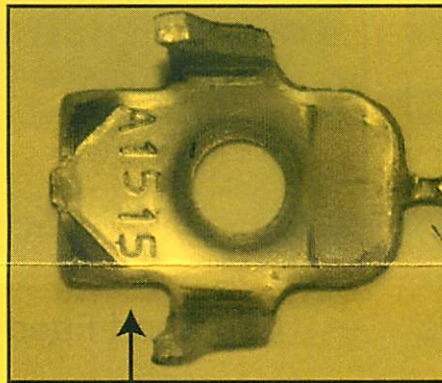


Date Code

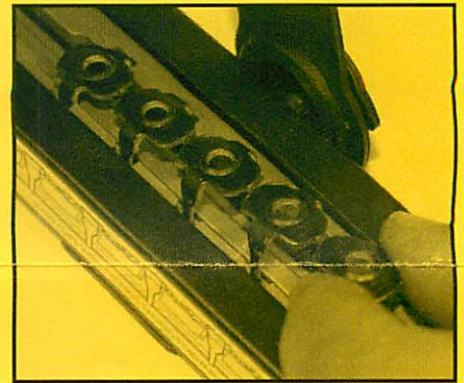


#### 2 KEEP TENSION ON CLIP PUSHER WHILE LOADING


When loading tool, make sure to pull pusher all the way back to end cap, then guide clip pusher back to clips—don't let go as it may cause damage to tool.

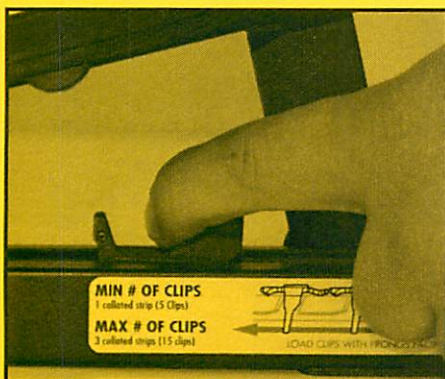

Pull Pusher Over Clips

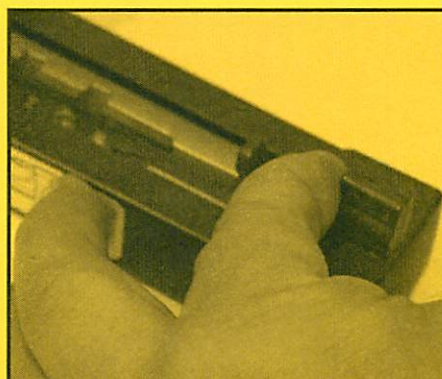

Pusher Fully Retracted

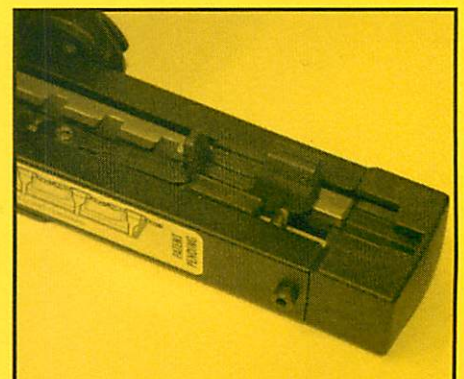


Guide Pusher to Clip

### 3 PROPER CLIP SIGHT PICTURE


Note that front of clip is flush with pincher set with an unobstructed view of the thru-hole. If clip is not flush, manually tap the pusher until clip is flush.

Correct

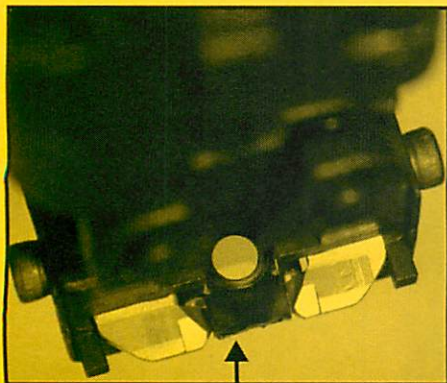


Unobstructed Thru-Hole

Not Correct

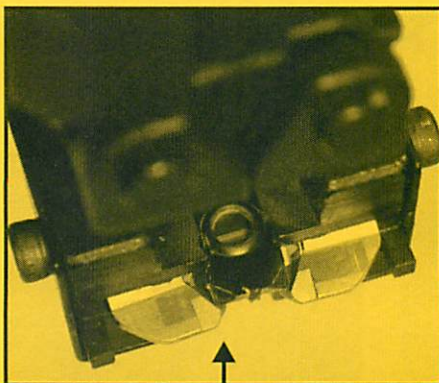

Clip Short Feed

Not Correct

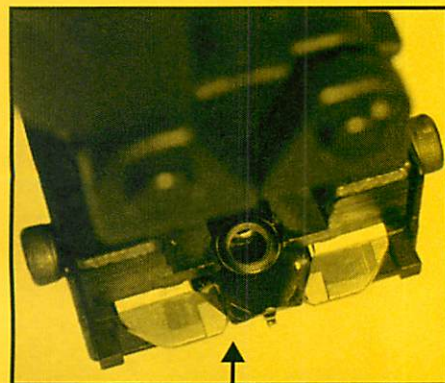

Obstructed Thru-Hole

### 4 JOB SITE TROUBLE SHOOTING

We have a team of specialists ready to answer questions.  
Call 800-518-3569 Monday thru Friday 8:00-5:00 PM EST